



Manuals.plus /

› Sherilyn /

› Sherilyn Kids Play Tent Instruction Manual

Sherilyn S-18

Sherilyn Kids Play Tent Instruction Manual

Model: S-18

INTRODUCTION

Thank you for choosing the Sherilyn Kids Play Tent. This manual provides essential information for the safe and proper setup, operation, and maintenance of your play tent. Please read it thoroughly before assembly and keep it for future reference.



Image: The Sherilyn Kids Play Tent, fully assembled, featuring a house-like structure with windows, a main entrance with sheer curtains, and decorative bunting. It is designed for indoor use and provides a spacious play area for children.

IMPORTANT SAFETY INFORMATION

- Adult supervision is required at all times when children are using the play tent.
- Keep away from open flames and heat sources.
- Ensure all components are securely assembled before use.
- Do not allow children to hang or climb on the tent frame.
- This product is intended for indoor use.

SETUP AND ASSEMBLY

The Sherilyn Kids Play Tent is designed for simple and quick assembly. Follow these steps carefully:

1. **Unpack all components:** Carefully remove all parts from the packaging. Verify that all components listed in the

packing list are present.

2. **Assemble the frame:** Connect the plastic frame poles according to the provided diagram. Ensure all connections are firm and secure.
3. **Drape the tent fabric:** Place the tent fabric over the assembled frame, aligning the openings and attachment points.
4. **Secure the fabric:** Fasten the tent fabric to the frame using the integrated ties or fasteners.
5. **Insert the mat:** Lay the included thicken mat inside the tent for comfort.
6. **Add artificial vines (optional):** Hang the artificial vines inside or outside the frame as desired.



Image: The Sherilyn Kids Play Tent shown with additional decorations, including star string lights and a padded mat, highlighting the customizable and comfortable interior space.

Assembly is required for this product. No batteries are required for operation.

OPERATING INSTRUCTIONS

The Sherilyn Kids Play Tent provides a dedicated space for children's activities. It is designed to accommodate up to 4

children simultaneously.

- **Usage:** The tent is suitable for reading, playing games, and relaxing.
- **Ventilation:** The tent features three breathable windows to ensure air circulation.
- **Indoor Use:** This play tent is specifically designed for indoor environments.



Image: A detailed view of the Sherilyn Kids Play Tent's breathable windows and sheer curtains, illustrating the design features that allow for air circulation and a cozy interior.

CARE AND MAINTENANCE

Proper care will extend the life of your Sherilyn Kids Play Tent.

- **Cleaning the Fabric:** The tent fabric is machine washable. For minor messes, wipe the playhouse tent with a damp cloth.
- **Frame Care:** Wipe the plastic frame components with a damp cloth as needed. Do not use abrasive cleaners.
- **Storage:** When not in use, disassemble the tent and store it in a clean, dry place away from direct sunlight.



Image: The quilted mat of the Sherilyn Kids Play Tent, shown folded, with an accompanying graphic indicating that it is machine washable for easy cleaning.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Tent is unstable after assembly.	Frame poles not fully connected or fabric not properly secured.	Check all frame connections to ensure they are firmly snapped into place. Verify that the tent fabric is securely attached to the frame at all designated points.
Difficulty fitting fabric over frame.	Fabric orientation incorrect or frame not fully expanded.	Ensure the tent fabric is oriented correctly before attempting to drape it over the frame. Confirm the frame is fully assembled and expanded to its intended dimensions.
Tent appears wrinkled.	Normal after unpacking or storage.	Wrinkles will typically smooth out with use. Light steaming or gentle ironing on a low setting (check fabric care label) may be used if necessary.

PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	S-18
Brand	Sherilyn
Dimensions (L x W x H)	119.38 x 101.6 x 132.08 cm (47" L x 40" W x 52" H)
Item Weight	4.28 kg (4 kg 280 g)
Frame Material	Plastic
Color	Neutral
Assembly Required	Yes
Batteries Required/Included	No
Recommended Age	18 months and up
Maximum Occupancy	Up to 4 children
Educational Objective(s)	Reading, playing games, relaxing
UPC	733424109942

Play Tent with Mat providing plenty of space ample room for 2-3 children



Image: The Sherilyn Kids Play Tent with overlaid measurements, indicating its length (52"), width (35"), and height (53"), providing a clear understanding of its size.

WARRANTY INFORMATION

Specific warranty details for the Sherilyn Kids Play Tent are not provided in the product information. Please refer to the retailer's return policy or contact Sherilyn customer support for warranty inquiries.

The product was first available on 25 April 2022.

CUSTOMER SUPPORT

For any questions, concerns, or assistance with your Sherilyn Kids Play Tent, please contact the manufacturer or the retailer from whom you purchased the product.

Manufacturer: Sherilyn

You may also refer to the product page on Amazon.in for additional information and customer reviews.

