

ProCase PC-08363323

ProCase Instruction Manual for Lenovo Tab M10 Plus 3rd Gen 10.6 Inch Case

Model Numbers: TB125FU, TB128FU, TB128XU

1. INTRODUCTION

This manual provides comprehensive instructions for the ProCase Slim Stand Hard Back Shell Protective Smart Cover Case. This case is designed to protect your Lenovo Tab M10 Plus 3rd Gen 10.6 Inch 2022 tablet while offering enhanced functionality through its integrated stand and smart cover features. Please read this manual carefully to ensure proper installation and use of your new case.



Image 1.1: The ProCase Smart Cover for Lenovo Tab M10 Plus 3rd Gen, showcasing its sleek design and protective features.

2. COMPATIBILITY

This ProCase is specifically designed for the **Lenovo Tab M10 Plus 3rd Gen 10.6 Inch 2022** tablet with model numbers **TB125FU, TB128FU, and TB128XU**. It is not compatible with any other tablet models, including the Lenovo Tab M10 10.1" (3rd Gen) 2022 (TB328FU/TB328XU).

2.1 How to Verify Your Tablet Model

To ensure proper fit, please verify your tablet's model number before installing the case. Follow these steps:

1. Go to your tablet's **Settings**.
2. Navigate to **System**.
3. Select **About Tablet**.
4. Locate the **Model** information. It should display TB125FU, TB128FU, or TB128XU.

Compatibility

Only Fits: **Lenovo Tab M10 Plus 10.6" (3rd Gen) 2022**
(TB125FU / TB128FU / TB128XU)

Kindly Note: Please confirm the model number "TB**" by clicking
Settings → **System** → **About Tablet** → **Model** before purchase

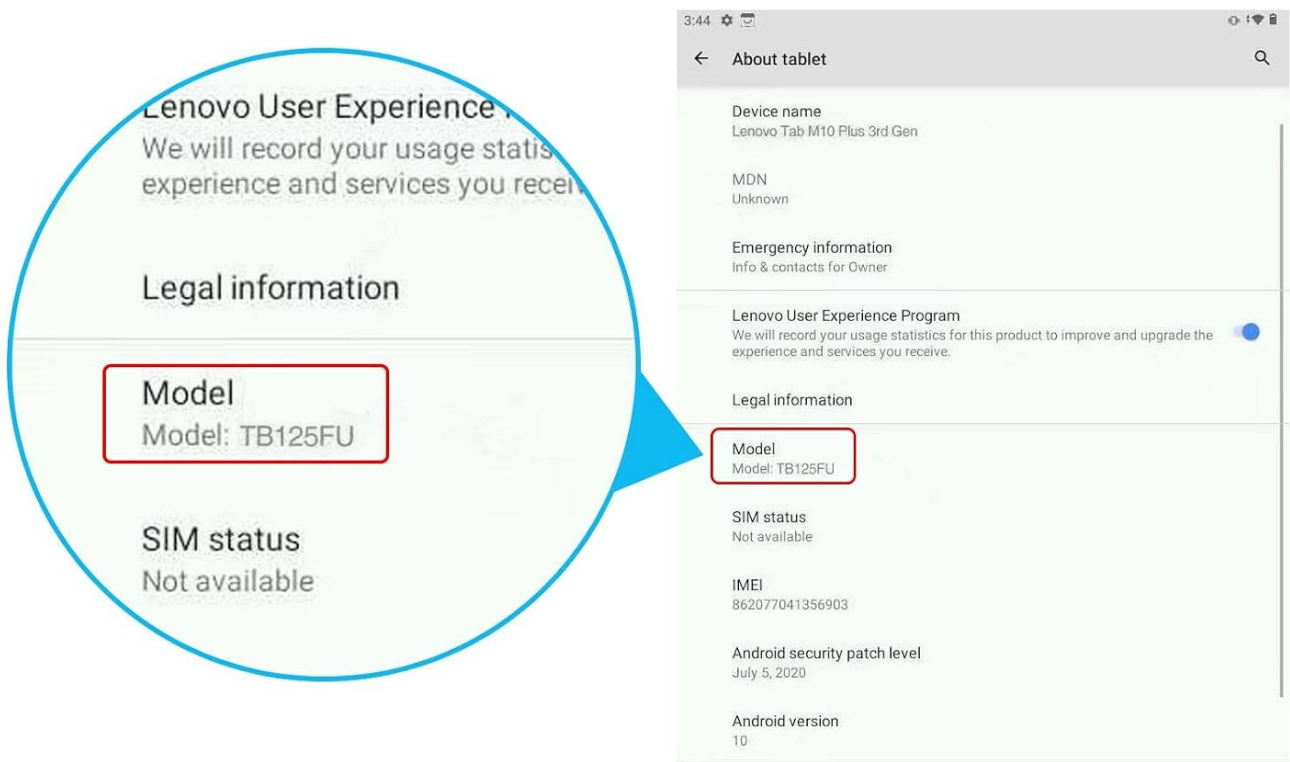 


Image 2.1: Visual guide for checking your Lenovo tablet's model number through the device settings.

Compatibility

✓ ONLY Fits:

Lenovo Tab M10 Plus 10.6"
(3rd Gen) 2022

TB125FU / TB128FU / TB128XU



✗ NOT Fits:

Lenovo Tab M10 10.1"
(3rd Gen) 2022

TB328FU / TB328XU



Image 2.2: Illustrates the difference between the compatible 10.6-inch model and an incompatible 10.1-inch model, highlighting the importance of correct model identification.

3. INSTALLATION

Installing your ProCase is a straightforward process. Follow these steps to securely fit your tablet into the case:

1. Ensure your tablet is clean and free of dust or debris.
2. Align the tablet with the hard back shell of the case, starting with one corner.
3. Gently press the tablet into the case, working your way around the edges until all corners are securely snapped into place.
4. Verify that all ports, buttons, and camera cutouts align correctly with your tablet's features.

4. FEATURES AND OPERATION

4.1 Dual Standing Positions

The foldable front cover allows for two distinct standing positions, optimizing your viewing and typing experience. Simply fold the

cover into a triangular stand to achieve the desired angle.

- **Viewing Angle (approx. 65°):** Ideal for watching videos, presentations, or video calls.
- **Typing Angle (approx. 30°):** Provides a comfortable incline for typing and interacting with the touchscreen.

TWO ANGLE VIEW

Foldable cover offers sturdy stand for viewing typing.



Viewing
angle



Typing
angle ↓



Image 4.1: Demonstrates the two stable standing positions (65° for viewing, 30° for typing) provided by the foldable cover.

4.2 Auto Sleep/Wake Function

The integrated magnetic strip in the front cover supports your tablet's auto sleep/wake feature. Closing the cover will automatically put your tablet to sleep, conserving battery life. Opening the cover will instantly wake your tablet, allowing for quick access.



AUTO SLEEP / WAKE FUNCTION



Save Battery Power &
Extend the Standby Time

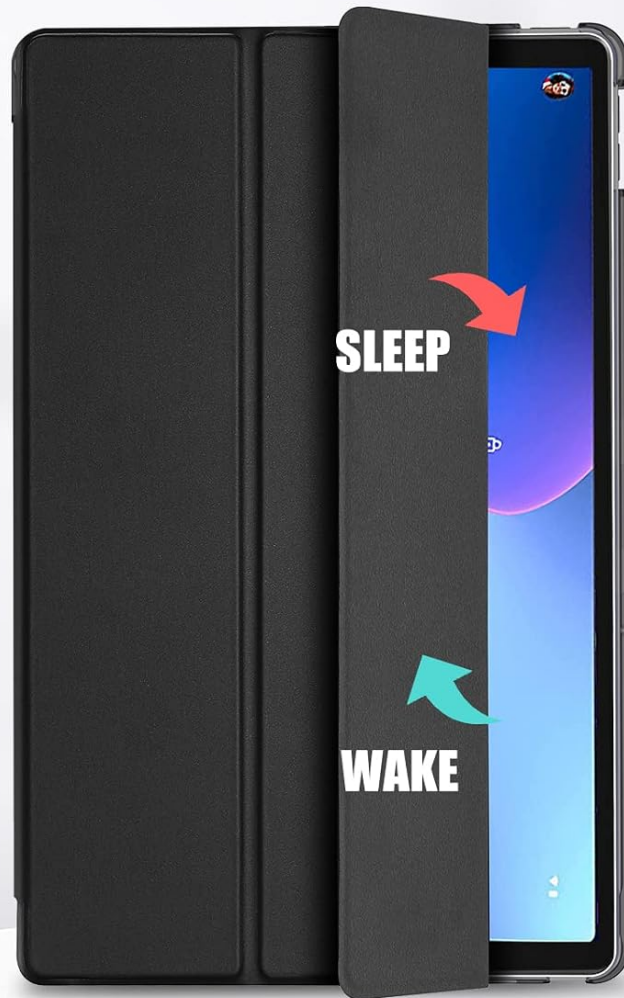 


Image 4.2: Illustrates how closing the cover activates sleep mode and opening it wakes the tablet, contributing to battery saving.

4.3 Translucent Frosted Back

The hard back shell features a translucent frosted finish. This design allows the original aesthetic of your tablet to show through while providing protection against fingerprints, smudges, and scratches.



TRANSLUCENT COVER DESIGN

Matte finish exterior, will prevent fingerprints and scratches



Image 4.3: Detail of the translucent frosted back, designed to prevent fingerprints and scratches while showcasing the tablet's original design.

 
4.4 Precise Cutouts

The case is engineered with precise cutouts to ensure full and unobstructed access to all tablet features, including cameras, speakers, charging ports, and buttons, without needing to remove the case.



PRECISE CUTOUTS

full access to all features without removing case



Resistant to dirt



Anti fall



Anti slip

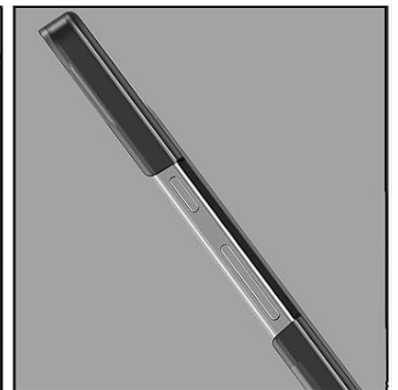 


Image 4.4: Highlights the precise cutouts for the camera, speakers, and charging port, ensuring full functionality.

4.5 Slim and Lightweight Design

The case maintains a slim profile and lightweight construction, adding minimal bulk to your tablet. This design enhances portability and comfort during use.

ULTRA SLIM AND LIGHT WEIGHT DESIGN

Lightweight design to maximize usability and comfort



Image 4.5: Shows the ultra-slim profile of the case, emphasizing its lightweight design for maximum usability and comfort.

5. MAINTENANCE

To keep your ProCase in optimal condition, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the exterior of the case with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these may damage the material.
- **Dust Removal:** For dust or debris accumulated inside the case, gently remove your tablet and clean both the tablet and the interior of the case with a dry, lint-free cloth.
- **Avoid Extreme Conditions:** Do not expose the case to extreme temperatures, direct sunlight for prolonged periods, or excessive moisture.

6. TROUBLESHOOTING

If you encounter any issues with your ProCase, consider the following common solutions:

- **Case Not Fitting:** Double-check your tablet's model number against the compatibility information in Section 2. Ensure the tablet is correctly aligned and gently pressed into all corners of the case.
- **Stand Instability:** Ensure the foldable cover is properly formed into a stable triangle. The magnetic closure helps maintain the stand's position. If the stand feels loose over time, it may be due to wear; try adjusting the fold for better support.
- **Auto Sleep/Wake Not Working:** Verify that the tablet's auto sleep/wake function is enabled in its settings. Ensure the case

cover is fully closed and making proper contact with the tablet screen.

- **Ports/Buttons Blocked:** Confirm that the tablet is correctly seated in the case and that no part of the case is misaligned, obstructing access.

7. SPECIFICATIONS

- **Product Dimensions:** 9.65 x 6.02 x 0.39 inches
- **Item Weight:** 8.1 ounces
- **Item Model Number:** PC-08363323
- **Manufacturer:** ProCase
- **Compatible Devices:** Lenovo Tab M10 Plus 3rd Gen 10.6 Inch 2022 (Models: TB125FU/TB128FU/TB128XU)
- **Shell Type:** Hard
- **Special Features:** Dual Standing Positions, Foldable, Magnet Secures, Translucent Frosted Back, Ultra Slim
- **Color:** Black

8. WARRANTY AND SUPPORT

ProCase products are designed for quality and durability. For specific warranty information or technical support, please refer to the product packaging or visit the official ProCase website. You may also contact ProCase customer service directly for assistance with any product-related inquiries.

For further assistance, please visit the [ProCase Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

