

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [wirsh](#) /
- > [wirsh Iced Tea Maker with 3QT Pitcher Instruction Manual](#)

### wirsh EP-1205

# wirsh Iced Tea & Coffee Maker Instruction Manual

Model: EP-1205



## PRODUCT OVERVIEW

The wirsh Iced Tea & Coffee Maker is designed for convenient preparation of your favorite cold beverages, including iced coffee, iced tea, lattes, lemonade, and flavored water. It features a durable glass pitcher, a reusable filter, and adjustable strength control for customized brewing.



Image: wirsh Iced Tea & Coffee Maker with a glass of freshly brewed iced tea.

### Key Features:

- **3-Quart Glass Pitcher:** Large capacity for brewing up to 12 cups, made from high-temperature resistant food-grade glass. Features a large handle for easy lifting and pouring.
- **Strength Control Dial:** Customize your beverage strength from mild to strong.
- **Reusable Filter Basket:** Works with ground coffee, tea bags, and loose-leaf teas, promoting eco-friendly use.
- **BPA-Free Components:** All water and coffee contact parts are BPA-free for your safety.

### SETUP

1. **Unpack and Clean:** Carefully remove all components from the packaging. Wash the glass pitcher, lid, and reusable filter basket with warm, soapy water before first use. Rinse thoroughly

and dry.

2. **Place the Pitcher:** Position the 3-quart glass pitcher securely on the brewing base.
3. **Add Water:** Open the water tank lid located at the top rear of the unit. Pour fresh, filtered water into the water tank up to the desired level indicated by the markings (2, 4, or 6 cups). Do not exceed the MAX level.
4. **Insert Filter Basket:** Place the reusable filter basket into its designated slot under the top lid.
5. **Add Tea/Coffee:** Add your preferred amount of ground coffee, tea bags, or loose-leaf tea into the reusable filter basket. Close the top lid securely.
6. **Add Ice to Pitcher:** For iced beverages, fill the glass pitcher with ice cubes up to the "ICE" mark. This helps to rapidly cool the brewed beverage.

## 3 QUART PITCHER

High Temperature  
Resistance Glass with Lid  
and Coffee/Ice Guide Marks



Image: Close-up of the 3-quart glass pitcher showing measurement markings for coffee and ice.

# REUSABLE REMOVABLE FILTER BASKET

WITH A REMOVEABLE FILTER BASKET THAT WORKS WITH GROUND COFFEE, TEA BAGS, & LOOSE TEA



Image: The reusable removable filter basket, compatible with various tea and coffee types.

## OPERATING INSTRUCTIONS

1. **Adjust Strength:** Use the strength selector dial on the front of the unit to choose your desired flavor strength. Slide the dial towards "MAX" for a stronger brew or towards "STRENGTH" for a milder brew.
2. **Start Brewing:** Press the power button located on the side of the unit. The indicator light will illuminate, and the brewing process will begin automatically.
3. **Brewing Process:** Hot water will be dispensed over the tea or coffee grounds, dripping into the pitcher below. For iced beverages, the hot brew will be cooled rapidly by the ice in the pitcher.
4. **Serving:** Once brewing is complete, the unit will automatically shut off. Carefully remove the pitcher from the base and serve your freshly brewed iced tea or coffee.



WILSH



STRENGTH



MAX





Image: The strength control dial on the front of the unit, allowing customization of brew intensity.

### Official Product Video:

Your browser does not support the video tag.

Video: Demonstrates how to make refreshing fruit tea using the wirsh Iced Tea Maker, showcasing the brewing process and final result.

## MAINTENANCE

Regular cleaning ensures optimal performance and longevity of your wirsh Iced Tea & Coffee Maker.

- **Glass Pitcher and Filter Basket:** The 3-quart glass pitcher and the reusable filter basket are dishwasher safe for convenient cleaning. Alternatively, wash them by hand with warm, soapy water and rinse thoroughly.
- **Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
- **Descaling:** Over time, mineral deposits may build up. Periodically descale the unit by brewing a solution of equal parts white vinegar and water. Follow with two cycles of plain water to rinse.

## TROUBLESHOOTING

If you encounter issues with your wirsh Iced Tea & Coffee Maker, please refer to the following common solutions:

- **Brew is too weak/strong:** Adjust the strength control dial on the front of the unit. Ensure you are using the correct amount of tea or coffee grounds for your desired strength.
- **Brew is cloudy:** Ensure you are using filtered water. Some tea types or water quality can contribute to cloudiness. Try different tea brands or water sources.
- **Unit not brewing:** Check if the unit is properly plugged into a working outlet. Ensure the water tank has sufficient water and the pitcher is correctly placed on the base. Press the power button firmly.
- **Strength lever does not stay:** If the strength selector dial does not remain in your chosen position, gently adjust it to find a stable point. If the issue persists, contact customer support.

## SPECIFICATIONS

| Feature            | Detail                   |
|--------------------|--------------------------|
| Product Dimensions | 10.8 x 6.6 x 13.7 inches |
| Item Weight        | 3.9 pounds               |
| Manufacturer       | Wirsh                    |
| Model Number       | EP-1205                  |
| Country of Origin  | China                    |
| Pitcher Capacity   | 3 Quarts (12 cups)       |

## SERVE COLD OR HOT DRINKS

Large capacity 3QT and holds up to 12 cups



3-Qt  
Pitcher with Lid



Image: Diagram showing the dimensions of the wirsh Iced Tea Maker.

### WARRANTY AND SUPPORT

Your wirsh Iced Tea & Coffee Maker comes with a **1-year hassle-free replacement warranty**. For any inquiries, troubleshooting assistance, or warranty claims, please contact wirsh customer service.

**Customer Service:** Available 7 days a week, 24 hours a day.

**Manufacturer:** Wirsh Direct

For more information and support, visit the official [wirsh Store on Amazon](#).