

[Manuals.plus](#) /

> [Bissell](#) /

> Bissell CleanView Compact Upright Vacuum, Fits in Dorm Rooms & Apartments, Lightweight with Powerful Suction and Removable Extension Wand, 3508

## Bissell 3508

# Bissell CleanView Compact Upright Vacuum User Manual

Model: 3508

## INTRODUCTION

The Bissell CleanView Compact upright vacuum is designed for efficient and convenient cleaning in various spaces, including dorm rooms and apartments. Weighing less than 8 pounds, it offers easy maneuverability and powerful suction. Its features include a removable extension wand for extended reach, a 23 ft power cord, a powerful rotating brush, and scatter-free technology for effective cleaning on different floor types. This manual provides instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance of your vacuum cleaner.

## PRODUCT OVERVIEW





**Figure 1.1:** The Bissell CleanView Compact Upright Vacuum, showcasing its main unit, crevice tool, and dusting brush.



## **Lightweight and Maneuverable**

Easy to transport at less than 8 pounds.

**Figure 1.2:** The vacuum demonstrating its lightweight and maneuverable design while cleaning a hard floor surface.



## Compact and Convenient

Great for dorms, apartments, and other small living spaces.

**Figure 1.3:** The compact design of the vacuum, ideal for storage and use in smaller living areas like dorms or apartments.

### SETUP

Follow these steps to assemble your Bissell CleanView Compact vacuum cleaner:

1. **Unpack Components:** Carefully remove all parts from the packaging. Ensure all components listed in the packing list are present.
2. **Attach Handle:** Insert the handle assembly into the main vacuum body until it clicks securely into place.
3. **Connect Hose:** Attach the flexible hose to the suction inlet on the main unit. Ensure a tight connection to prevent loss of suction.
4. **Attach Accessories:** Store the crevice tool and dusting brush on the designated holders on the vacuum body for easy access.
5. **Power Cord Management:** Wrap the power cord around the cord hooks for neat storage.

## OPERATING INSTRUCTIONS

### General Operation

- **Power On/Off:** Plug the power cord into a suitable electrical outlet. Press the power button located on the vacuum body to turn the unit on or off.
- **Vacuuming Floors:** Guide the vacuum head over the floor surface. The powerful rotating brush and scatter-free technology are designed to effectively pick up debris on both carpets and hard floors.



### Scatter-Free Technology

Capture messes on hard floors with less scatter.

**Figure 2.1:** Demonstrating the scatter-free technology on hard floors, effectively capturing debris without scattering.



## Powerful Suction

Convenient, powerful cleaning in one machine.

Figure 2.2: The vacuum's powerful suction at work on carpet, effectively removing embedded dirt and debris.

### Using Attachments

The removable extension wand and included tools allow for versatile cleaning:

- **Extension Wand:** Detach the extension wand from the main unit to reach high areas, corners, or under furniture.
- **Crevice Tool:** Use the crevice tool for tight spaces, edges, and narrow gaps.
- **Dusting Brush:** Attach the dusting brush for cleaning delicate surfaces, upholstery, and vents.


### MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your vacuum cleaner.

#### Emptying the Dirt Container

It is recommended to empty the dirt container after each use or when the debris reaches the "Full" line.

1. **Remove Dirt Container:** Press the release button to detach the dirt container from the vacuum body.
2. **Empty Debris:** Position the container over a trash bin and press the bottom release button to open the flap and empty the contents.
3. **Reattach Container:** Close the bottom flap securely and reattach the dirt container to the vacuum until it clicks into place.

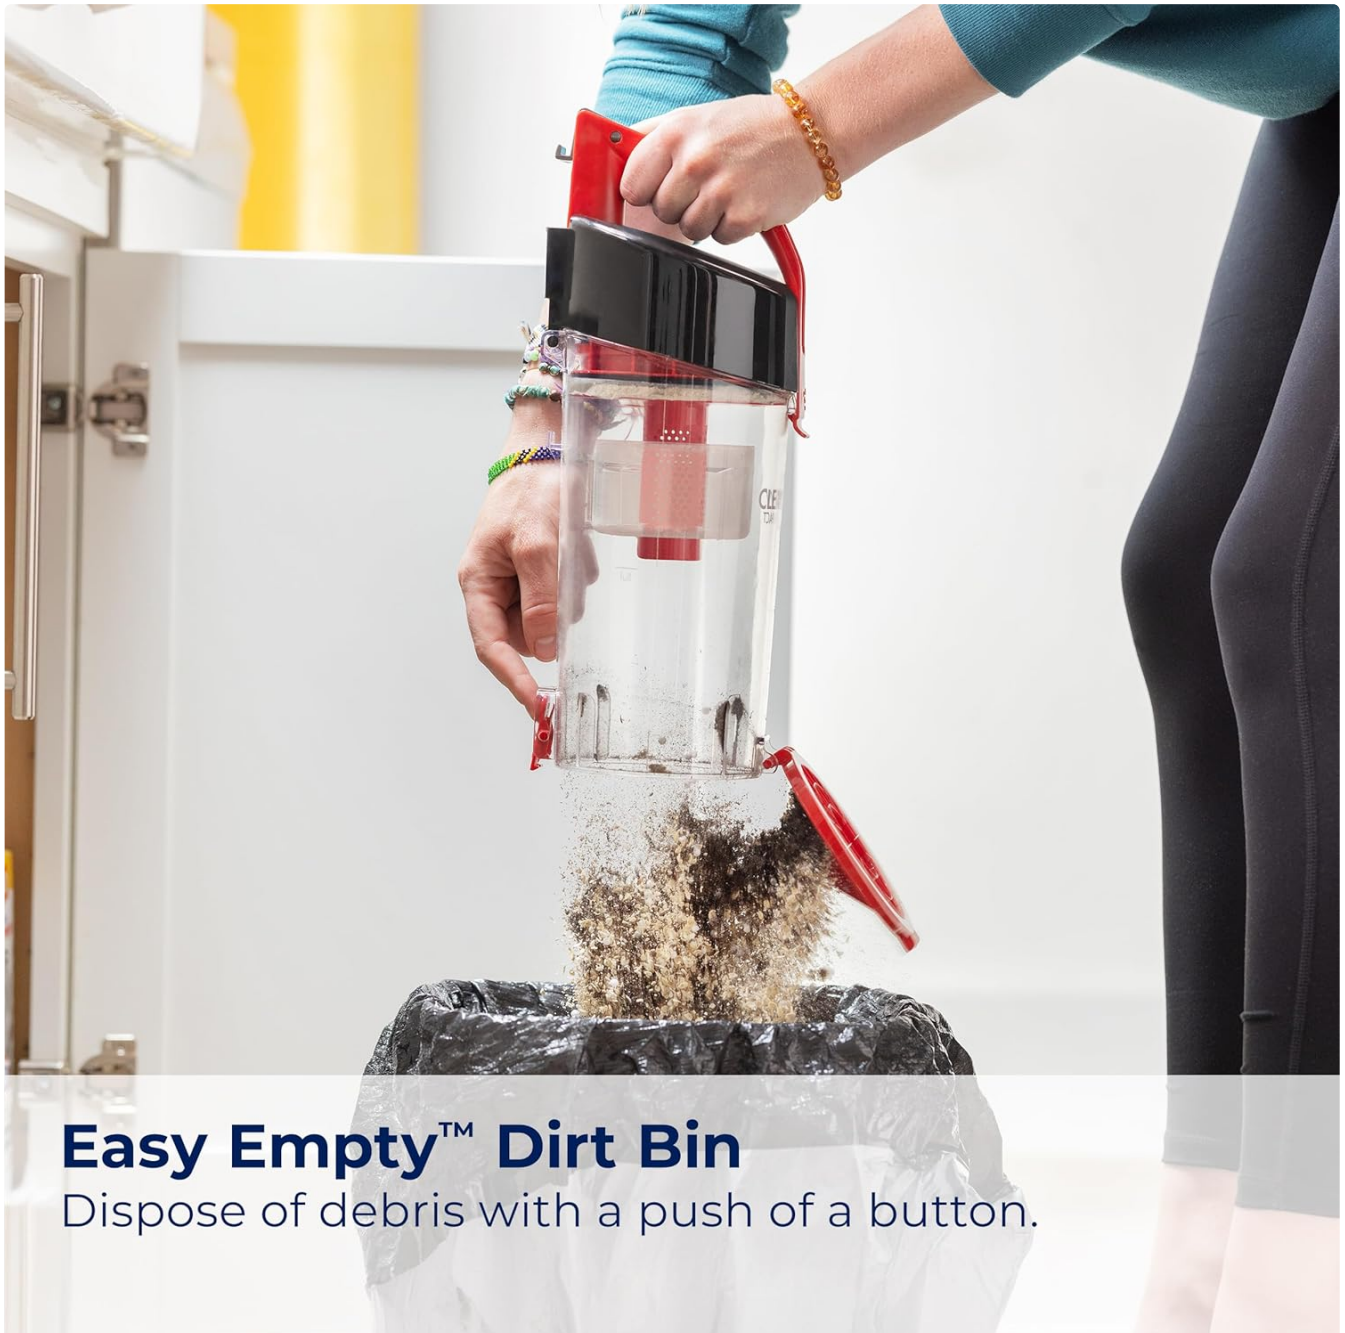

## Easy Empty™ Dirt Bin

Dispose of debris with a push of a button.

**Figure 3.1:** Illustration of the easy empty dirt bin feature, allowing for quick and hygienic disposal of collected debris.

### Cleaning the Washable Filter

The vacuum features a washable filter to maintain suction power. Clean the filter regularly, especially if you notice a decrease in suction.

1. **Access Filter:** Twist the top of the dirt container to access the filter assembly.
2. **Rinse Filter:** Remove the foam filter and rinse it under running water until clean. Do not use detergent.
3. **Air Dry:** Allow the filter to air dry completely for at least 24 hours before reinserting it. Ensure it is completely dry to prevent mold or damage to the motor.

4. **Reassemble:** Place the dry filter back into the dirt container and reassemble the unit.

## Checking for Clogs

If suction decreases or the vacuum makes unusual noises, check for clogs in the hose, extension wand, and floor nozzle. Clear any obstructions carefully.

## TROUBLESHOOTING

This section addresses common issues you might encounter with your Bissell CleanView Compact vacuum. For a comprehensive guide, please refer to the [Troubleshooting Guide \(PDF\)](#).

Problem	Possible Cause	Solution
Vacuum will not turn on	Not plugged in; Blown fuse/tripped breaker	Check electrical plug; Check/replace fuse or reset breaker
Loss of suction	Dirt container full; Filter dirty; Clog in hose/nozzle	Empty dirt container; Clean/replace filter; Clear any clogs
Brush roll not spinning	Brush roll jammed; Belt broken	Remove obstructions from brush roll; Contact support for belt replacement

## SPECIFICATIONS

Feature	Detail
Brand	Bissell
Model Name	CleanView Compact
Model Number	3508
Special Feature	Lightweight, Washable Filter
Filter Type	Disk
Included Components	Brush
Is Cordless?	No
Capacity	1 Liters
Wattage	700 watts
Recommended Uses	Pet Foundation ( <i>Note: This refers to BISSELL's charitable efforts, not a specific vacuum function.</i> )
Form Factor	Upright
Product Dimensions	11"L x 10"W x 25"H
Item Weight	8 pounds
Amperage	3.6 Amps
Manufacturer	BISSELL

Feature	Detail
Controller Type	Push Button
Control Method	Touch
Number of Speeds	1
Portable	Yes
Indoor/Outdoor Usage	Outdoor, Indoor
UPC	011120268621
Country of Origin	Vietnam

## WARRANTY & SUPPORT

For warranty information and customer support, please refer to the official Bissell website or the documentation included with your product. You can also find the [User Guide \(PDF\)](#) for additional details.

BISSELL proudly supports BISSELL Pet Foundation and its mission to help save homeless pets. Every purchase contributes to this cause.