

[Manuals.plus](#) /

› [YITAHOME](#) /

› YITAHOME Outdoor Patio Swing Chair Instruction Manual

YITAHOME FTPLPS-K01-BW

YITAHOME Outdoor Patio Swing Chair Instruction Manual

Model: FTPLPS-K01-BW

PRODUCT OVERVIEW

The YITAHOME Outdoor Patio Swing Chair is designed for comfort and durability, accommodating up to three persons. It features a sturdy powder-coated steel frame, an adjustable canopy for optimal shade, and removable cushions for easy cleaning. This versatile swing chair is suitable for various outdoor settings including gardens, patios, decks, backyards, and poolside areas.



Image: YITAHOME Outdoor Patio Swing Chair, showcasing its design and beige cushions.

SAFETY INFORMATION

- Ensure all bolts and nuts are securely tightened before use.
- Do not exceed the maximum weight capacity of 595 lbs.
- Avoid standing on the swing or using it in an unsafe manner.
- Regularly inspect the frame and components for any signs of wear or damage.
- Keep children under supervision when using the swing.

PARTS LIST

Before assembly, verify that all parts listed below are present and undamaged. Refer to the assembly video for visual identification of each component.



SOLID HOOK



COLLAPSIBLE TRAY



STURDY STEEL FRAME



NON-SLIP FEET

Image: Close-up of key components such as the solid hook, collapsible tray, sturdy steel frame, and non-slip feet, highlighting their features.

Part	Description	Quantity
A	Upper Frame Bar (Left)	2
B	Upper Frame Bar (Right)	2
C	Main Crossbar	1
D	Side Tray Assembly	2
E	Seat Support Bar	4
F	Bottom Crossbar	1
H	Spring Hook	2

Part	Description	Quantity
I	Seat Armrest	2
J	Seat Base	1
M	Canopy Fabric	1
N	Seat Cushions	3
N1	Pillow	1
O	M6x10mm Bolt	8
P	M8x60mm Bolt	2
Q	M8x30mm Bolt	2
R	M8x70mm Bolt	4
T	M6x30mm Bolt	4
V	M8x100mm Bolt	4
Y	Adjusting Knob	2
Y1	Washer for Knob	2
Z	M6 Nut	4
Z	M8 Nut	12
AA	Allen Wrench (M6)	1
AA	Allen Wrench (M8)	1
BB	Wrench	1

ASSEMBLY INSTRUCTIONS

Follow these steps carefully for proper assembly. It is recommended to have two people for assembly.

Assembly Video Tutorial

Video: Official YITAHOME assembly guide for the 3-person patio porch swing chair. This video provides a visual step-by-step walkthrough of the entire assembly process.

1. Step 1: Assemble the Main Frame

Connect the upper frame bars (A and B) to the main crossbar (C) using M8x100mm bolts (V) and M8 nuts (Z). Ensure all connections are secure. This forms the top support structure of the swing.



Image: The main frame of the swing chair being assembled in an outdoor setting.

2. Step 2: Attach the Bottom Crossbar

Secure the bottom crossbar (F) to the main frame using M6x30mm bolts (T) and M6 nuts (Z). This provides stability to the base of the swing.

3. Step 3: Install Side Tray Assemblies

Attach the two side tray assemblies (D) to the main frame using M6x30mm bolts (O). These trays offer convenient storage and cup holders.



Collapsible Tray

Image: A close-up view of the collapsible tray, highlighting its functionality and design.

4. Step 4: Assemble the Seat Base

Connect the seat armrests (I) to the seat base (J) using M8x70mm bolts (R) and M8 nuts (Z). This forms the main seating component.

5. Step 5: Attach Seat Support Bars

Insert the four seat support bars (E) into the designated slots on the seat base and secure them with M8x60mm bolts (P) and M8x30mm bolts (Q), along with M8 nuts (Z).

6. Step 6: Hang the Seat

Attach the spring hooks (H) to the main frame, then carefully hang the assembled seat onto the hooks. Ensure the seat is balanced and securely suspended.

7. Step 7: Install the Canopy

Drape the canopy fabric (M) over the top frame. Secure it in place using the adjusting knobs (Y) and washers (Y1) on both sides. Adjust the canopy angle as desired for shade.

ADJUSTABLE CANOPY BY ROTATING THE CONTROLLER

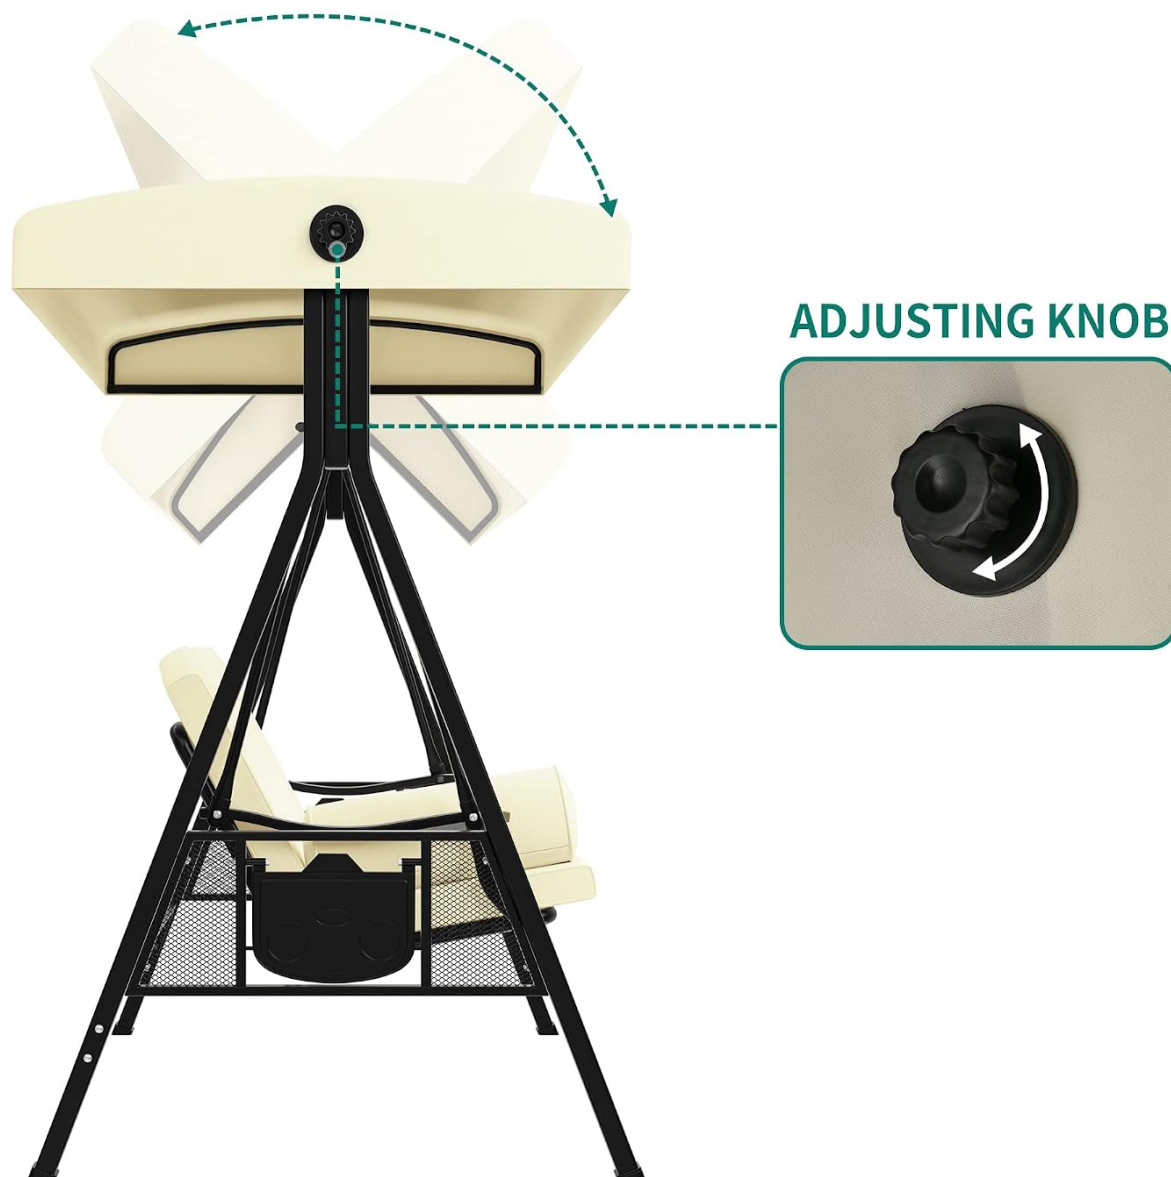


Image: The adjustable canopy mechanism, showing how it can be rotated to provide optimal shade.

8. Step 8: Place Cushions

Place the seat cushions (N) and the pillow (N1) onto the swing seat for added comfort. The cushions are removable for easy cleaning and storage.

WEIGHT CAPACITY 595LB SEATS UP TO 3



Image: The swing chair comfortably seating three people, illustrating its 595lb weight capacity.

OPERATING INSTRUCTIONS

To use your YITAHOME Outdoor Patio Swing Chair:

- **Seating:** Gently sit on the cushions. The swing is designed to accommodate up to three individuals.
- **Canopy Adjustment:** Rotate the adjusting knobs on either side of the canopy to change its angle, providing shade from the sun as needed.
- **Collapsible Trays:** Utilize the integrated side trays for holding beverages or small items. Fold them down when not in use.
- **Relaxation:** Enjoy the gentle swinging motion. The heavy-duty steel spring lock ensures a smooth and secure experience.

MAINTENANCE

Proper maintenance will extend the life of your swing chair:

- **Cleaning:** Wipe down the steel frame with a damp cloth and mild soap. Rinse thoroughly and dry completely to

prevent rust.

- **Cushions:** The seat cushions are removable for easy cleaning. Spot clean with a mild detergent or hand wash as needed. Allow to air dry completely before reattaching or storing.
- **Canopy:** Clean the canopy fabric with a soft brush and mild soap. Rinse well and allow to dry.
- **Seasonal Storage:** During harsh weather conditions or off-season, it is recommended to store the cushions and canopy indoors to protect them from extreme elements.
- **Fasteners:** Periodically check all bolts and nuts to ensure they remain tight. Re-tighten if necessary.



Image: The swing chair highlighting its UV-resistant and waterproof properties, suitable for various weather conditions.

TROUBLESHOOTING

If you encounter any issues with your swing chair, refer to the following common problems and solutions:

- **Swing is unstable or wobbly:** Check all bolts and nuts to ensure they are securely tightened. Ensure the swing is placed on a flat, level surface.

- **Canopy does not stay in position:** Verify that the adjusting knobs (Y) are fully tightened after setting the desired angle.
- **Squeaking noise during swinging:** Apply a silicone-based lubricant to the spring hooks and any moving metal joints.
- **Missing parts during assembly:** Double-check the packaging and parts list. If parts are genuinely missing, contact YITAHOME customer support.

SPECIFICATIONS

Feature	Detail
Brand	YITAHOME
Model Number	FTPLPS-K01-BW
Color	Beige
Product Dimensions	45.67"D x 78.74"W x 67.71"H
Frame Material	Alloy Steel
Finish Type	Powder Coated
Seat Depth	20.9 inches
Assembly Required	Yes
Item Weight	35 pounds
Weight Capacity	Up to 595 lbs
Seating Capacity	3 Person

PRODUCT SIZE



Image: A detailed diagram illustrating the dimensions of the YITAHOME Outdoor Patio Swing Chair.

WARRANTY & SUPPORT

YITAHOME products come with a manufacturer's warranty. For specific warranty details, claims, or technical support, please contact YITAHOME customer service directly. You can find contact information on the official YITAHOME website or through your purchase platform.

For additional assistance, visit the official YITAHOME Store: [YITAHOME Store on Amazon](#)

© 2023 YITAHOME. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question