

[Manuals.plus](#) /

› [SteamOne](#) /

› SteamOne EUES200B Vertical Steamer User Manual

SteamOne EUES200B

SteamOne EUES200B Vertical Steamer User Manual

Model: EUES200B | Brand: SteamOne

INTRODUCTION

Thank you for choosing the SteamOne EUES200B Vertical Steamer. This powerful and compact garment steamer is designed to efficiently de-wrinkle, refresh, and sanitize your clothes and textiles. With its rapid heat-up time and generous water tank capacity, it provides a convenient solution for daily garment care. Please read this manual carefully before first use to ensure safe and optimal operation of your device.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before using the steamer.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Always unplug the steamer from the electrical outlet when filling with water, emptying, or when not in use.
- Do not operate the steamer with a damaged cord or plug, or if the appliance has been dropped or damaged.
- Keep the steam head away from your body and hands during operation. Steam is hot and can cause burns.
- Use the comfort glove provided for added protection.
- Do not direct steam at people, pets, or electrical appliances.
- Use only distilled or demineralized water to prevent mineral buildup and prolong the life of the appliance.
- Ensure the water tank is securely in place before operating.
- This appliance is for household use only.

PACKAGE CONTENTS

Please check the box for the following items:

- SteamOne EUES200B Vertical Steamer Unit
- Reversible Multifunction Hanger

- Aluminum Rod (for stability)
- Triple Protection Thermal Hose
- 1.2 Liter Water Tank
- Mini-Board
- Comfort Glove
- User Manual (this document)



Cintre multifonction réversible



Support de tête



Mini planche



Gant



La vapeur SteamOne
défroisse et élimine
99,99%
des virus, germes et bactéries*

*Testés par des laboratoires indépendants



Cordon amovible



Image: The SteamOne EUES200B vertical steamer shown with its various accessories, including the reversible multifunction hanger, head support, mini-board, glove, and removable cord.

SETUP GUIDE

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.

2. **Assembly:**

- Insert the aluminum rod into the base unit. Ensure it is securely locked in place.
- Attach the reversible multifunction hanger to the top of the aluminum rod.
- Connect the thermal hose to the steam outlet on the base unit. Ensure a tight connection.





Image: The fully assembled SteamOne EUES200B vertical steamer, showing the base, pole, hose, and steam head with hanger.

3. **Filling the Water Tank:**

- Remove the 1.2L water tank from the base unit.
- Open the tank cap and fill with clean, distilled or demineralized water. Do not exceed the maximum fill line.
- Close the cap securely and place the water tank back into the base unit, ensuring it is properly seated.



Image: A person's hands are shown carefully placing the transparent water tank into the black base unit of the SteamOne steamer.

4. **Power Connection:** Plug the power cord into a suitable electrical outlet (230V).

OPERATING INSTRUCTIONS

1. **Power On and Heat-up:** Once plugged in, the steamer will begin to heat up. It is ready for use in approximately 45 seconds. The indicator light will signal when it's ready.
2. **Selecting Steam Mode:** The steamer features 3 power modes: Eco, Medium, and Maximum. Use the variator button to select the appropriate steam output for your fabric type.
3. **Steaming Garments:**
 - Hang the garment on the reversible multifunction hanger. For optimal results, gently pull the fabric taut with one hand while steaming with the other.
 - Hold the steam head a few centimeters away from the fabric and move it slowly downwards, allowing the steam to penetrate the fibers.
 - For delicate areas or stubborn wrinkles, use the mini-board for support.
 - Always wear the comfort glove to protect your hand from hot steam.



Image: A person is using the SteamOne steamer to de-wrinkle a red long-sleeved shirt, holding the fabric taut while applying steam.



Image: A person is using the SteamOne steamer to de-wrinkle a beige knitted sweater, holding the steam head directly against the fabric.



Image: Close-up of the SteamOne steamer head emitting a visible plume of steam, with a white shirt in the background.



Image: A person is using the SteamOne steamer to de-wrinkle a white collared shirt, holding the fabric taut while applying steam.



Image: A person is using the SteamOne steamer to sanitize a blue fabric mask and a black oven mitt, demonstrating its versatility beyond clothing.

4. **Automatic Start & Stop System:** The steamer features an automatic start and stop system for steam delivery, which helps conserve water and energy. Steam will be generated when the head is in use and pause when not.
5. **Finishing:** After steaming, allow the garment to cool and dry completely before wearing or storing.
6. **Power Off:** Unplug the steamer from the electrical outlet when you are finished using it.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your SteamOne steamer.

- **Emptying the Water Tank:** After each use, empty any remaining water from the tank. This prevents stagnant water and mineral buildup.
- **Descaling:** The steamer features an integrated anti-limescale system. However, depending on water hardness, periodic descaling may still be necessary. Refer to the manufacturer's website or contact support for specific descaling instructions if needed.
- **Cleaning the Exterior:** Wipe the exterior of the steamer with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the steamer in a cool, dry place, away from direct sunlight and moisture.

TROUBLESHOOTING

If you encounter issues with your steamer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No steam or very little steam.	Water tank empty. Steamer not heated up. Mineral buildup (limescale). Hose kinked or blocked.	Fill the water tank. Wait 45 seconds for heat-up. Perform descaling procedure. Straighten the hose; check for blockages.
Water leaking from steam head.	Condensation in hose. Overfilling the water tank. Steamer not fully heated.	Hold steam head upright to allow condensation to drain back. Do not overfill the tank. Allow steamer to fully heat before use.
Steamer not turning on.	Not plugged in correctly. Power outlet issue.	Ensure plug is fully inserted. Test the outlet with another appliance.

SPECIFICATIONS

Feature	Detail
Brand	SteamOne
Model Number	EUES200B
Color	White
Product Dimensions (L x W x H)	26.8 x 16.8 x 34.3 cm
Weight	9.4 kg
Water Tank Capacity	1.2 Liters
Power	2000W (as per product title/description), 2300W (as per specifications)
Voltage	230 Volts
Material	Stainless Steel (steam head soleplate)
Heat-up Time	45 seconds
Steam Output	Up to 45g/min
Autonomy	80 minutes
Cable Length	2 meters
Product Benefits	Disinfection, Wrinkle Removal, Odor Elimination, Sterilization

WARRANTY AND SUPPORT

For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official SteamOne website.

If you require technical assistance, spare parts, or have any questions not covered in this manual, please contact SteamOne customer support. Contact details can typically be found on the manufacturer's website or on your purchase receipt.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question