

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Outsunny](#) /

› [Outsunny 5-Piece Outdoor Dining Set \(Model 84B-926\) Instruction Manual](#)

Outsunny 84B-926

Outsunny 5-Piece Outdoor Dining Set Instruction Manual

Model: 84B-926

INTRODUCTION

This manual provides comprehensive instructions for the assembly, safe operation, and maintenance of your Outsunny 5-Piece Outdoor Dining Set. This set includes one square dining table and four adjustable reclining folding chairs, designed for outdoor use. Please read this manual thoroughly before assembly and use to ensure proper function and longevity of your product.

SAFETY INFORMATION

- Always assemble the product on a soft, clean surface to prevent damage.
- Ensure all bolts, screws, and knobs are securely tightened before use. Re-tighten periodically.
- Do not exceed the weight capacity: Chairs 285 lbs (129 kg), Table 110 lbs (50 kg).
- Keep children away during assembly. Small parts may pose a choking hazard.
- Place the dining set on a flat, stable surface to prevent tipping.
- Avoid exposing the set to extreme weather conditions for prolonged periods to extend its lifespan.
- Do not stand on the chairs or table.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, contact customer support.

- 1 x Square Dining Table
- 4 x Adjustable Reclining Folding Chairs

- Assembly Hardware (screws, bolts, wrench, etc. - specific items may vary)
- Instruction Manual



Image: The complete Outsunny 5-Piece Outdoor Dining Set, featuring a square table and four chairs, arranged on a patio.

SETUP AND ASSEMBLY

Assembly is required for this dining set. Follow these steps carefully. It is recommended to have two people for table assembly.

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, soft surface to prevent scratches.
2. **Assemble the Table:**
 - Attach the table legs to the tabletop using the provided hardware. Ensure all connections are secure but do not overtighten initially.

- Once all legs are attached, gently tighten all screws and bolts.
- Place the table upright on a level surface.



Patio Dining Set

To indulge in delicious food
in the fresh air



Image: The dining table and chairs fully assembled and positioned on an outdoor patio.

3. **Prepare the Chairs:** The chairs are designed to be foldable. No complex assembly is typically required for the chairs beyond unfolding them.
- Unfold each chair by extending the frame until it locks into place.
 - Ensure the chair is stable before sitting.



FOLDABLE CHAIRS



- Easy to transport -



- Save space -

Image: An Outsunny chair shown in its folded position, demonstrating its compact storage capability.

OPERATING INSTRUCTIONS

Adjusting Chair Recline

The chairs feature a 7-level adjustable backrest for customized comfort.

1. To recline the backrest, gently lift the armrests slightly while seated.
2. Push the backrest to your desired angle.
3. Release the armrests to lock the backrest into one of the seven available positions.
4. Ensure the backrest is securely locked before leaning back fully.



7-LEVEL BACKREST

Just recline back and enjoy
the outdoor lounging



Image: A visual guide illustrating how to adjust the 7-level backrest of the chair by manipulating the armrests.

Folding Chairs for Storage

The chairs can be folded for convenient storage or transport.

1. Ensure the backrest is in its most upright position.
2. Locate the folding mechanism, typically near the seat or leg joints.
3. Follow the specific instructions for your chair model to release the lock and fold the chair flat.
4. Store in a dry, protected area when not in use for extended periods.



FOLDABLE CHAIRS



- Easy to transport -



- Save space -

Image: An Outsunny chair shown in its folded position, highlighting its space-saving design for storage or transport.

MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your dining set.

- **Cleaning:** Wipe down the aluminum frames and polystyrene tabletop with a damp cloth and mild soap. Rinse thoroughly and dry completely to prevent water spots. The breathable textilene fabric on the chairs can be cleaned with a soft brush and mild soapy water.
- **Weather Protection:** While the aluminum frames are powder-coated for weather resistance, it is recommended to cover the set during heavy rain, snow, or extreme temperatures, or store it indoors during off-seasons to prolong its life.
- **Hardware Check:** Periodically check and tighten all bolts and screws to ensure the stability and safety of the furniture.
- **Tabletop Drainage:** The wood-like slat tabletop design facilitates quick drainage. Ensure slats remain clear of debris

to maintain this function.



STABLE & COMFY

Sit well for a better dining experience



- Breathable
Textelene Cover -



- Sturdy
Aluminium Frame -

Image: A close-up view of the chair's breathable textilene fabric and sturdy aluminum frame, highlighting features for comfort and durability.



WOOD-LIKE TABLE TOP

Wood grain finish for a natural feel



Slat design helps quick drainage



Image: A detailed view of the table's wood-like slat top, demonstrating its design for quick water drainage.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---|---|--|
| Chair feels unstable or wobbly. | Loose hardware. Uneven surface. | Check and tighten all bolts and screws. Move the chair to a level surface. |
| Backrest does not recline or lock properly. | Mechanism obstructed or damaged. Incorrect operation. | Ensure no debris is blocking the mechanism. Review operating instructions for reclining. If damaged, contact customer support. |
| Table wobbles. | Loose leg connections. Uneven surface. | Check and tighten all table leg connections. Place the table on a flat, stable surface. |

SPECIFICATIONS

Model Number: 84B-926

Material: Aluminum (powder-coated), PS (Polystyrene) with woodgrain finish, Sling Fabric (Textilene)

Table Dimensions (L x W x H): 31.5" x 31.5" x 29.25" (80 cm x 80 cm x 74.3 cm)

Chair Dimensions (Overall W x D x H): 21.75" x 26.75" x 43" (55.2 cm x 68 cm x 109.2 cm)

Chair Folded Dimensions (L x W x H): 34.25" x 21.75" x 6.75" (87 cm x 55.2 cm x 17.1 cm)

Chair Seat Height: 17.25" (43.8 cm)

Chair Weight Capacity: 285 lbs (129 kg)

Table Weight Capacity: 110 lbs (50 kg)

Item Weight (Total): Approximately 56 lbs (25.4 kg)

Assembly Required: Yes

Color: Black



Image: A detailed diagram illustrating the key dimensions of both the dining chair and the square dining table.

CUSTOMER SUPPORT

For any questions, missing parts, or assistance with your Outsunny 5-Piece Outdoor Dining Set, please contact Outsunny customer support. Refer to your purchase documentation for specific contact details or visit the official Outsunny website.

Manufacturer: Aosom LLC

