

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [GardePro](#) /

› [GardePro E8 WiFi Trail Camera User Manual](#)

GardePro E8

GardePro E8 WiFi Trail Camera User Manual

Model: E8

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your GardePro E8 WiFi Trail Camera. The GardePro E8 is designed for capturing wildlife images and videos, offering features such as Wi-Fi connectivity, high-resolution imaging, and robust night vision capabilities. Please read this manual thoroughly before using the camera to ensure proper functionality and longevity.

2. PRODUCT OVERVIEW

2.1 Key Features

- **Wi-Fi and Bluetooth Connectivity:** Connects to the GardePro Mobile app for camera operation within Wi-Fi signal range.
- **Enhanced Wi-Fi Signal:** Equipped with an antenna for stable Wi-Fi connection and data transmission.
- **Advanced Video Recording:** Records H.264 1296p or 1080p videos with sound, requiring less storage space. Allows seamless preview without prior download.
- **Night Vision:** Features 940nm infrared technology with adaptive illumination, providing night vision up to 100ft.
- **High-Resolution Imaging:** Captures up to 64MP pictures.
- **Durable Design:** IP66 waterproof rating.
- **Motion Detection:** 0.1s motion detection with 3 detection zones.

2.2 Camera Components

The GardePro E8 trail camera features a robust exterior and an intuitive internal interface.



Figure 1: Front view of the GardePro E8 WiFi Trail Camera, showing the lens, IR LEDs, and antenna.

When opened, the camera reveals its control panel and screen.

Perfect Motion Detection Performance

Preactivated Technology with 3 Detection Zones Design



0.1S Fast
Trigger speed



120° Wide
Detection Angle



5 Continuous
Shooting



90ft Detection
Distance

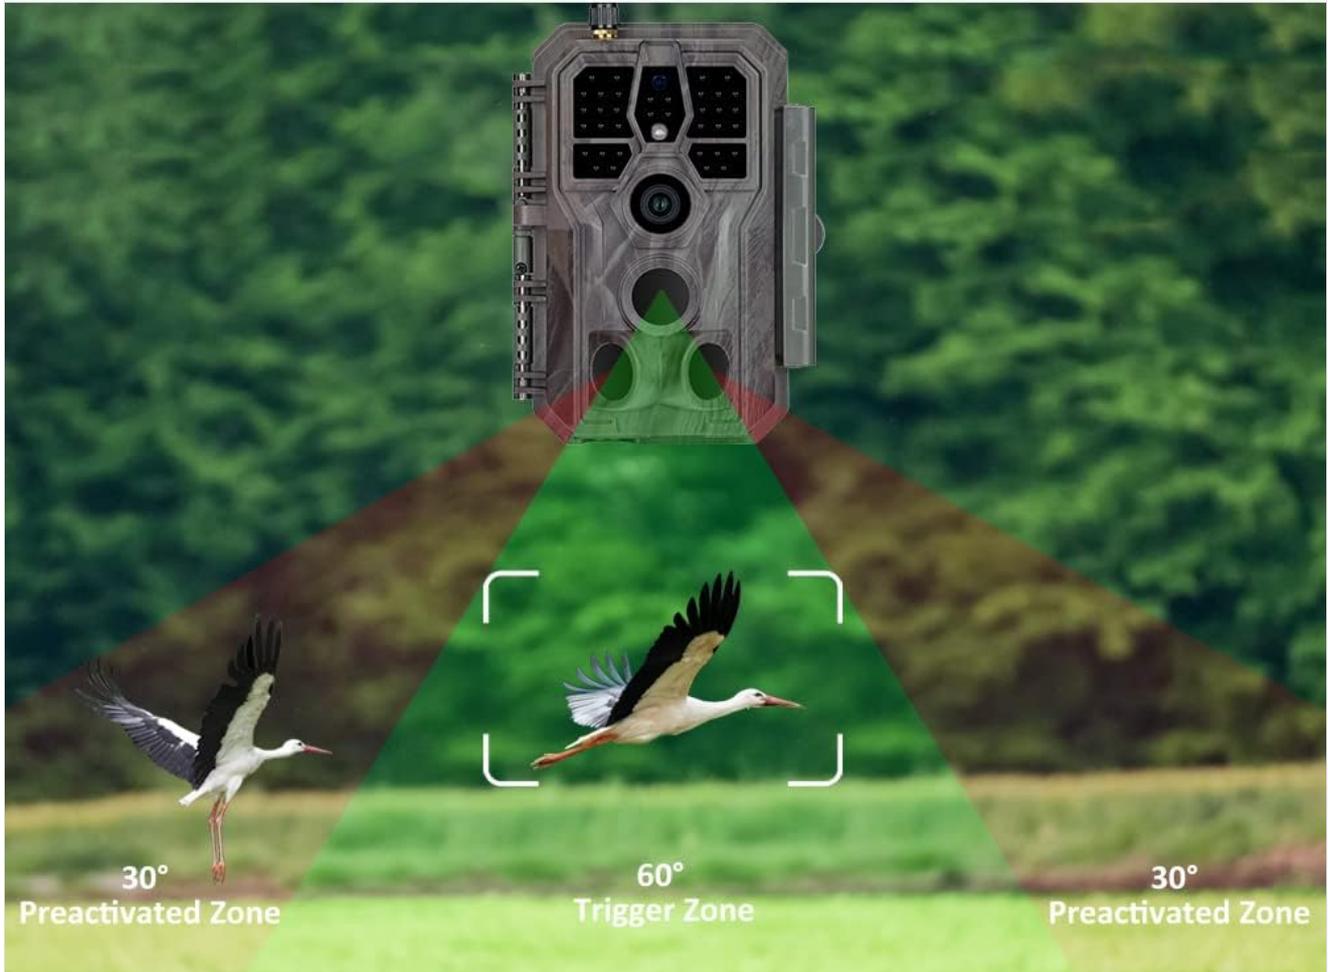


Figure 2: Internal view of the GardePro E8, displaying the 2.4-inch color screen, navigation buttons, and power switch.

3. SETUP

3.1 Battery Installation

1. Open the camera housing.
2. Insert 8 AA batteries into the battery compartment, ensuring correct polarity.
3. Close the camera housing securely.

3.2 SD Card Installation

1. Locate the SD card slot inside the camera.
2. Insert a compatible SD card (up to 512GB, not included) into the slot until it clicks into place.
3. It is recommended to format the SD card using the camera's menu before first use.

3.3 Mounting the Camera

The camera can be mounted using the included strap or a wall mount.



Figure 3: The GardePro E8 camera secured to a tree using the provided mounting strap.

1. **Tree Mount:** Thread the provided strap through the slots on the back of the camera and secure it around a tree or pole. Adjust the camera angle as needed.
2. **Wall Mount:** Use a compatible wall mount (sold separately) to attach the camera to a flat surface.

3.4 App Installation

1. Download the 'GardePro Mobile' app from your device's app store (available for Android and iOS).
2. Install the app on your smartphone or tablet.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

Locate the power switch inside the camera housing. Slide it to 'ON' to power on the camera or 'OFF' to power it off.

4.2 Basic Settings

Use the internal screen and navigation buttons to access the camera's menu. Set parameters such as date, time, capture

mode (photo, video, or hybrid), and resolution.

4.3 Wi-Fi Connection and App Control

The GardePro E8 connects to your mobile device via Wi-Fi for remote control and file management.



Figure 4: A smartphone displaying the GardePro Mobile app interface, connected to the E8 camera.

1. Ensure the camera is powered on.
2. Open the GardePro Mobile app on your device.
3. Follow the app's instructions to connect to the camera's Wi-Fi network. The camera's antenna provides a reliable signal.
4. Once connected, you can adjust settings, preview images/videos, and download files directly to your phone.

4.4 Video Recording

The camera records H.264 video files in 1296p or 1080p resolution with audio. This format optimizes storage space and allows for direct preview within the app.

4.5 Night Vision

The E8 camera utilizes 940nm infrared technology for night vision, providing clear images in low-light conditions up to 100 feet without visible flash.

Brilliant Night Vision Clear Images in Total Darkness



**Up to 100ft
Night Vision Range**



**Starlight
Optical Lens**



**Advanced
No-Glow IR leds**



The image displays a night vision capture of a rabbit running in a field. An inset window shows a clearer, zoomed-in view of the rabbit. A camera is mounted on a tree trunk on the left, with an orange beam of light directed towards the rabbit. At the bottom, a diagram shows a night vision icon, a dashed line labeled '100ft', and a white rabbit silhouette.

Figure 5: Example of a night vision image captured by the GardePro E8, demonstrating its clarity in darkness.

4.6 Motion Detection

The camera features a 0.1-second trigger speed and three motion detection zones to capture activity effectively.

IP66 Waterproof & Dustproof

Built for Any Climate



IP66
Waterproof



-4~140°F
-20~60°C



Figure 6: Diagram showing the three motion detection zones (preactivated and trigger zones) of the GardePro E8 camera.

5. MAINTENANCE

5.1 Cleaning

- Gently clean the camera lens and IR LEDs with a soft, dry cloth.
- Wipe the camera housing with a damp cloth as needed. Avoid abrasive cleaners.

5.2 Battery Replacement

Replace batteries when the low battery indicator appears on the screen or in the app to ensure continuous operation.

5.3 SD Card Management

Regularly format the SD card to maintain optimal performance and prevent data corruption. Back up important files before formatting.

5.4 Waterproofing

The camera has an IP66 waterproof rating, protecting it from dust and strong jets of water. Ensure the housing is securely

latched to maintain its waterproof seal.

Comfortable User Experience

Super Easy to Set Up and Operate



Max Support 512GB
SD Card (Not Included)



2.4" Huge
Color Screen



User Friendly
UI/Settings



Ergonomic
Keypad Design



Figure 7: The GardePro E8 camera operating in rainy conditions, highlighting its IP66 waterproof design.

6. TROUBLESHOOTING

- **Camera Not Powering On:** Check battery installation and ensure batteries are charged.
- **Wi-Fi Connection Issues:** Ensure you are within the camera's Wi-Fi range. Restart both the camera and your mobile device. Verify the GardePro Mobile app is up to date.
- **Poor Image/Video Quality:** Clean the camera lens. Check settings for resolution and night vision modes. Ensure sufficient lighting for daytime captures.
- **Motion Detection Not Triggering:** Adjust motion sensor sensitivity in the camera settings. Ensure the camera's field of view is clear of obstructions.
- **SD Card Errors:** Format the SD card using the camera's menu. If errors persist, try a different SD card.


7. SPECIFICATIONS

Feature	Specification
Model Name	GardePro E8
Image Resolution	Up to 64MP
Video Resolution	1296p, 1080p (H.264)
Night Vision Range	100 Feet
Trigger Speed	0.1s
Detection Angle	120 degrees (total with preactivated zones)
Water Resistance	IP66 Waterproof
Connectivity	Wi-Fi, Bluetooth
Storage	SD Card (up to 512GB, not included)
Power Source	Battery Powered (8 AA batteries) or Solar Powered with SP350 Solar Panel (Sold Separately)
Mounting Type	Wall Mount, Tree Mount
Operating Temperature	-20°C to 60°C (-4°F to 140°F)
Material	Acrylonitrile Butadiene Styrene (ABS)
Dimensions	19.2 x 12.6 x 8.5 cm
Weight	520 g

8. WARRANTY AND SUPPORT

The GardePro E8 WiFi Trail Camera typically includes a return policy of 30 days from the date of purchase. For specific warranty details, including duration and coverage, please refer to the product packaging or contact GardePro customer support directly. For technical assistance or further inquiries, please visit the official GardePro website or contact their support team.

Related Documents - E8

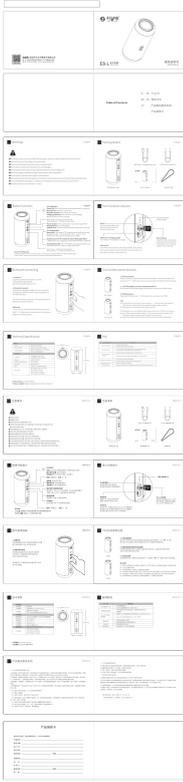


[E8 Bluetooth Speaker User Manual](#)

This user manual provides comprehensive instructions for the E8 Bluetooth Speaker, covering setup, operation, features, and troubleshooting. Learn how to connect devices, use TWS functionality, and understand button controls and LED indicators for optimal performance.



[GardePro E6 Trail Camera Instruction Manual](#)


Comprehensive instruction manual for the GardePro E6 Trail Camera, covering setup, features, operation, Wi-Fi connection, advanced settings, mounting, troubleshooting, and warranty information.

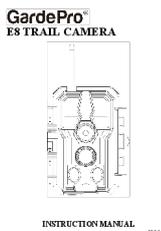

[GardePro E8 Trail Camera Instruction Manual V5.2](#)

Comprehensive instruction manual for the GardePro E8 Wi-Fi Trail Camera (V5.2), covering setup, operation, features like Wi-Fi/Bluetooth connectivity, night vision, and troubleshooting. Learn how to use your GardePro E8 effectively.

GardePro[®]
A3 TRAIL CAMERA

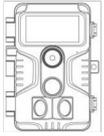


INSTRUCTION MANUAL

Ver 1.3

[GardePro A3 Trail Camera Instruction Manual](#)

Comprehensive instruction manual for the GardePro A3 Trail Camera, covering setup, operation, features, and technical specifications for wildlife observation and security.

GardePro[®]
E8 CAMARA TRAIL

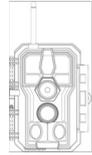


MANUAL DE INSTRUCCIONES v1.2

[Ver en Amazon](#)

[GardePro E8 Cámara Trail - Manual de Instrucciones](#)

Manual completo de instrucciones para la cámara GardePro E8 Trail Camera, cubriendo instalación, configuración, modos de operación, conexión Wi-Fi y solución de problemas.

GardePro[®]
TRAIL CAMERA
E8P
E8P MAX

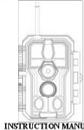

INSTRUCTION MANUAL

Doc 11.1

Aplicación de Modelo: E8P (incluye modelo: E8P, E8PCT, E8PDT, E8PMT) (incluye modelo: E8P4G, E8P4C, E8P4D)

[GardePro E8P Series Trail Camera Instruction Manual](#)

Comprehensive instruction manual for GardePro E8P and E8P Max series trail cameras. Learn about setup, operation, Wi-Fi connectivity, features, and troubleshooting for optimal wildlife monitoring.