

PERFASCIN RCRTU001

PERFASCIN Replacement Remote Control User Manual

Model: RCRTU001

INTRODUCTION

This manual provides instructions for the PERFASCIN RCRTU001 Replacement Remote Control, designed for various RCA Class 4K Ultra HD LED TVs. This remote control is an infrared (IR) device and requires no programming or pairing for operation. Simply insert batteries, and it is ready for use.

Compatible RCA TV Models:

- RCRTU001
- RTU4300
- RTU6549-C
- RTU5820
- RTU6050
- LED6090
- RTU4002
- RTU5540-B
- RLDED4016A-H

PACKAGE CONTENTS

- 1x PERFASCIN RCRTU001 Replacement Remote Control

Note: AAA Alkaline Batteries are not included and must be purchased separately.

SETUP

Inserting Batteries

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open it.

3. Insert two (2) 1.5V AAA Alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.





Image: Back of the remote control with the battery cover removed, illustrating the battery insertion process. Two AAA battery slots are visible.

Important: Ensure correct battery polarity. Incorrect insertion can damage the remote control.

Important: Do not mix old and new batteries, or different types of batteries.

OPERATING INSTRUCTIONS

The PERFASCIN RCRTU001 remote control is designed to function immediately with compatible RCA TVs without any additional setup. Point the remote directly at your television's infrared receiver.

Key Functions Overview





Image: Front view of the PERFASCIN RCRTU001 remote control, displaying the layout of all buttons.

Remote Control Button Functions

Button	Function
POWER	Turns the television on or off.
MUTE	Mutes or restores the television's audio.
0-9 (Number Buttons)	Directly select channels or input numerical values.
AUDIO	Selects audio modes or tracks.
FAV+, FAV-	Navigates through favorite channels.
P.MODE	Cycles through picture modes (e.g., Standard, Dynamic, Movie).
S.MODE	Cycles through sound modes (e.g., Standard, Music, Movie).
VOL+, VOL-	Adjusts the volume level up or down.

Button	Function
CH+, CH-	Changes channels up or down.
INPUT	Selects the input source (e.g., HDMI 1, AV, Component).
SLEEP	Sets the sleep timer for the television.
ASPECT	Adjusts the screen aspect ratio.
INFO	Displays current channel information or program details.
MENU	Opens the television's main menu.
Navigation Buttons (Up, Down, Left, Right)	Navigates through menu options.
OK	Confirms selections in menus.
EXIT	Exits the current menu or on-screen display.
CH.LIST	Displays the channel list.
EPG	Accesses the Electronic Program Guide.
PLAY/PAUSE, STOP, PREV, NEXT, FR, FF	Media playback controls (functionality depends on TV support).
CC	Activates or deactivates Closed Captions.
MTS	Selects Multi-channel Television Sound options.
FREEZE	Pauses the current image on screen.
REPEAT	Repeats media playback (functionality depends on TV support).
Colored Buttons (Red, Green, Yellow, Blue)	Context-sensitive functions within menus or specific applications.

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries simultaneously with new AAA Alkaline batteries.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Avoid Exposure:** Keep the remote control away from direct sunlight, heat sources, and moisture.

TROUBLESHOOTING

Troubleshooting Guide

Problem	Possible Cause	Solution
Remote is not working.	Dead or incorrectly inserted batteries.	Replace batteries with new 1.5V AAA Alkaline batteries, ensuring correct polarity.

Problem	Possible Cause	Solution
Remote control range is reduced.	Weak batteries. Obstruction between remote and TV.	Replace batteries. Ensure a clear line of sight to the TV's IR receiver.
Specific buttons are not responding.	Button malfunction or TV incompatibility for advanced functions.	Check if other buttons work. If only specific advanced functions fail, your TV model might not support them via this remote. If basic functions fail, consider replacing the remote.
Remote works intermittently.	Low battery power. Loose battery connection.	Replace batteries. Ensure batteries are seated firmly in the compartment.

If the issue persists after attempting these solutions, please contact customer support.

SPECIFICATIONS

- **Model:** RCRTU001 (PERFASCIN ANG-MBE253-RCA-2-BALCK2-US)
- **Brand:** PERFASCIN
- **Compatible Devices:** RCA Class 4K Ultra HD LED Televisions
- **Connectivity Technology:** Infrared (IR)
- **Power Supply:** 2 x 1.5V AAA Alkaline Batteries (not included)
- **Product Dimensions:** 7 x 2 x 0.65 inches (approximately 17.8 x 5.1 x 1.65 cm)
- **Item Weight:** 2.3 ounces (approximately 65 grams)
- **Special Feature:** Ergonomic design
- **Max Number of Supported Devices:** 1 (Television)

WARRANTY AND SUPPORT

For any questions, concerns, or assistance with your PERFASCIN RCRTU001 Replacement Remote Control, please contact PERFASCIN customer service. While specific warranty details are not provided in this manual, standard consumer rights apply.

Contact Information: Please refer to the seller's contact information on your purchase platform or the PERFASCIN official website for support.

Note: The manufacturer is PERFASCIN.



© 2025 PERFASCIN. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.