



Manuals.plus /

› **Generico** /

› Generico Lever Presser Foot Instruction Manual for Necchi and Elna Sewing Machines

Generico Lever Presser Foot

Generico Lever Presser Foot Instruction Manual

Model: Lever Presser Foot | Brand: Generico

1. INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of the Generico Lever Presser Foot. This accessory is designed to enhance the functionality of compatible sewing machines, ensuring precise and efficient sewing tasks.

Compatible Sewing Machine Models:

- Necchi Lock 614 MK2
- Necchi Dex 704
- Necchi 744
- Necchi 745
- Necchi 845
- Elna PRO4DC
- Elna PRO4DE
- Elna PRO5DC
- Elna PRO5DE

2. SETUP AND INSTALLATION

Before installing the lever presser foot, ensure your sewing machine is turned off and unplugged from the power source for safety. Refer to your sewing machine's manual for specific instructions on changing presser feet, as procedures may vary slightly between models.



Figure 1: The Generico Lever Presser Foot. This image shows the presser foot from a side angle, highlighting its lever mechanism and attachment point.

Installation Steps:

1. **Prepare the Machine:** Turn off and unplug your sewing machine. Raise the needle to its highest position and lift the presser foot lever.
2. **Remove Existing Foot:** Locate the small screw or lever that secures the current presser foot to the presser foot bar. Loosen or release it to detach the old foot.
3. **Attach New Foot:** Position the Generico Lever Presser Foot under the presser foot bar, aligning the pin on the foot with the groove on the bar.
4. **Secure the Foot:** Lower the presser foot lever so that the foot snaps into place or tighten the screw to secure it firmly. Ensure the foot is stable and does not wobble.
5. **Test Attachment:** Gently lower and raise the presser foot lever to confirm the foot is correctly attached and moves smoothly.

3. OPERATING INSTRUCTIONS

The Generico Lever Presser Foot functions similarly to a standard presser foot but may offer specific advantages depending on its design (e.g., for specific fabric types or techniques). Always ensure the foot is correctly installed before beginning any sewing project.

- **Fabric Placement:** Place your fabric under the presser foot, ensuring it is flat and properly aligned with your seam allowance guides.
- **Lowering the Foot:** Use the presser foot lever on your machine to lower the foot onto the fabric. This action engages the feed dogs and holds the fabric securely for stitching.

- **Sewing:** Begin sewing at a moderate speed. The presser foot will guide the fabric evenly as the feed dogs move it through the machine.
- **Lifting the Foot:** After completing a seam or when repositioning fabric, use the presser foot lever to raise the foot.

For optimal results, always use the appropriate needle and thread for your fabric type and project.

4. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your Generico Lever Presser Foot.

- **Cleaning:** Periodically clean the presser foot to remove lint, dust, and thread residue. Use a soft brush or cloth. Avoid harsh chemicals that could damage the finish.
- **Inspection:** Regularly inspect the foot for any signs of wear, bending, or damage. A damaged presser foot can affect stitch quality and potentially harm your machine.
- **Storage:** When not in use, store the presser foot in a clean, dry place, preferably in a dedicated accessory box, to prevent loss or damage.

5. TROUBLESHOOTING

If you encounter issues while using the Generico Lever Presser Foot, consider the following common solutions:

- **Foot Not Attaching Securely:**
 - Ensure the presser foot is correctly aligned with the presser foot bar's groove or screw.
 - Verify that the securing screw (if applicable) is tightened sufficiently.
 - Check for any obstructions on the presser foot bar or the foot itself.
- **Fabric Not Feeding Evenly:**
 - Confirm the presser foot is fully lowered onto the fabric.
 - Ensure the feed dogs are engaged and functioning correctly (refer to your machine's manual).
 - Check if the fabric is placed flat and not bunched up under the foot.
- **Stitches Are Uneven or Skipped:**
 - While often related to needle or tension, a damaged or improperly installed presser foot can contribute. Inspect the foot for damage.
 - Ensure the correct presser foot is being used for the specific sewing task.

For persistent issues, consult your sewing machine's instruction manual or contact a qualified service technician.

6. SPECIFICATIONS

Feature	Detail
Product Type	Lever Presser Foot
Brand	Generico
Manufacturer	Singer Catania
ASIN	B09VCCRJVR
First Available Date	11 March 2022
Compatibility	Necchi Lock 614 MK2, Dex 704, 744, 745, 845; Elna PRO4DC, PRO4DE, PRO5DC, PRO5DE

7. WARRANTY AND SUPPORT

Specific warranty details for the Generico Lever Presser Foot are not provided in the available product information. For warranty claims, technical support, or further inquiries, please contact the seller or the manufacturer directly. Keep your purchase receipt as proof of purchase.

Seller Information (as per product data): [Centro Singer Catania](#)

For general sewing machine operation and maintenance, refer to your sewing machine's original instruction manual.