

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Atlanta](#) /

› [Atlanta 1981/15 Quartz Alarm Clock for Children - Football Design User Manual](#)

Atlanta 1981/15

Atlanta 1981/15 Quartz Alarm Clock - Football Design User Manual

Model: 1981/15

INTRODUCTION

Thank you for choosing the Atlanta 1981/15 Quartz Alarm Clock. This manual provides essential information for the safe and efficient operation of your new alarm clock. Please read these instructions carefully before use and retain them for future reference.

IMPORTANT SAFETY INFORMATION

- Keep the alarm clock away from water and high humidity.
- Do not expose the device to extreme temperatures or direct sunlight.
- Use only the specified battery type (1 x AA 1.5V).
- Insert batteries with correct polarity (+/-).
- Remove exhausted batteries promptly to prevent leakage.
- Do not dispose of batteries in fire.
- Keep batteries out of reach of children.
- Do not attempt to disassemble or repair the clock yourself. Refer to qualified personnel for service.

PACKAGE CONTENTS

- 1 x Atlanta 1981/15 Quartz Alarm Clock
- 1 x User Manual (this document)

Note: Battery (1 x AA) is not included and must be purchased separately.

PRODUCT OVERVIEW

The Atlanta 1981/15 alarm clock features a vibrant football design, a silent sweeping second hand, and a

soft silicone-coated casing. It is designed for easy use with a clear analog display and convenient functions.



Figure 1: Front View. This image shows the front of the Atlanta 1981/15 alarm clock, highlighting the blue casing and the football-themed dial with clear hour and minute markers.



Figure 2: Side View. This image displays the side profile of the alarm clock, featuring the blue silicone casing and the silver ON/OFF switch for the alarm function located on the right side.

Key Features:

- **Easy-to-Read Dial:** Clear analog display with a vibrant football motif.
- **Silent Sweeping Second Hand:** Ensures quiet operation without a ticking sound.
- **Snooze Function:** Interrupts the alarm for approximately 5 minutes.
- **Dial Illumination:** Light function for checking time in the dark.

- **Soft Silicone Casing:** Durable and pleasant to touch.
- **Crescendo Alarm:** Alarm sound gradually increases in volume.

SETUP

1. Battery Installation

1. Locate the battery compartment cover on the back of the alarm clock.
2. Slide or gently pry open the cover.
3. Insert one (1) AA 1.5V battery, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover securely.



Figure 3: Back View. This image shows the rear of the alarm clock, detailing the battery compartment at the bottom and the time/alarm setting knobs located above it.

2. Setting the Time

1. Locate the "TIME SET" knob on the back of the clock (usually the right knob when facing the back).
2. Rotate this knob clockwise or counter-clockwise until the hour and minute hands display the correct current time.

3. Setting the Alarm

1. Locate the "ALARM SET" knob on the back of the clock (usually the left knob when facing the back).
2. Rotate this knob until the alarm hand points to your desired alarm time.
3. Ensure the alarm ON/OFF switch (located on the side of the clock) is in the "ON" position to activate the alarm.

OPERATING INSTRUCTIONS

Activating/Deactivating the Alarm

- To activate the alarm, slide the ON/OFF switch on the side of the clock to the "ON" position.
- To deactivate the alarm, slide the ON/OFF switch to the "OFF" position.

Using the Snooze Function

- When the alarm sounds, press the large button located on the top of the clock. This will temporarily silence the alarm.
- The alarm will sound again after approximately 5 minutes.
- To fully turn off the alarm, slide the ON/OFF switch on the side to the "OFF" position.

Using the Dial Illumination

- To illuminate the clock face in low light conditions, press the large button located on the top of the clock.
- The light will remain on as long as the button is pressed.



Figure 4: Illuminated Dial. This image shows the front of the alarm clock with its dial illuminated, making it easy to read the time in the dark. The top button activates this light.

MAINTENANCE

Cleaning

- Wipe the clock with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or chemical sprays, as these may damage the casing or dial.

Battery Replacement

- When the clock starts to lose time or the alarm becomes weak, it is time to replace the battery.
- Follow the "Battery Installation" steps in the Setup section to replace the AA battery.
- Dispose of old batteries according to local regulations.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---------|----------------|----------|
|---------|----------------|----------|

| Problem | Possible Cause | Solution |
|---------------------------------------|--|---|
| Clock not working / Hands not moving. | Battery is dead or incorrectly inserted. | Check battery polarity or replace with a new AA battery. |
| Alarm does not sound. | Alarm switch is OFF, alarm time is not set correctly, or battery is low. | Ensure alarm switch is ON. Verify alarm hand position. Replace battery if needed. |
| Alarm sounds at the wrong time. | Alarm hand is set incorrectly. | Adjust the "ALARM SET" knob to the correct desired time. |
| Dial illumination not working. | Battery is low or dead. | Replace the AA battery. |

SPECIFICATIONS

| | |
|-------------------------------|--|
| Brand | Atlanta |
| Model Number | 1981/15 |
| Color | Blue |
| Material | Plastic with Silicone Coating |
| Display Type | Analog |
| Power Source | 1 x AA 1.5V Battery (not included) |
| Dimensions (L x W x H) | Approximately 4 x 10 x 10 cm (1.6 x 3.9 x 3.9 inches) |
| Weight | Approximately 110 grams (0.24 lbs) |
| Special Features | Crescendo Alarm, Silent Sweeping Second Hand, Dial Illumination, Snooze Function |

WARRANTY AND SUPPORT

Specific warranty information for this product may vary by region and retailer. Please refer to the documentation provided at the time of purchase or contact your retailer for details regarding warranty coverage.

For technical support or inquiries, please contact the manufacturer or your point of purchase. Keep your purchase receipt as proof of purchase.