

Britax E1C233C

Britax Highpoint Belt-Positioning Booster Seat Instruction Manual

Model: E1C233C

1. INTRODUCTION

Thank you for choosing the Britax Highpoint Belt-Positioning Booster Seat. This manual provides essential information for the safe and correct use of your booster seat. Please read all instructions carefully before installation and use, and keep this manual in a safe place for future reference.

The Britax Highpoint booster seat is designed to accommodate growing children, offering a higher weight and height capacity than many other brands. It easily converts from a high-back to a backless booster, ensuring your child can ride safely for longer.

2. SAFETY GUIDELINES

Always prioritize your child's safety. Adhere to the following guidelines:

- **Weight and Height Limits:** This booster seat is suitable for children weighing between 40 and 120 pounds, and with a height between 44 and 63 inches.
- **Proper Belt Positioning:** Ensure the vehicle's lap belt is positioned low across the child's hips, touching the thighs, and the shoulder belt rests across the middle of the child's shoulder and chest.
- **Secure Installation:** Always secure the booster seat in the vehicle, even when unoccupied, to prevent it from becoming a projectile in a crash.
- **No Added FR Chemicals:** The fabrics are naturally flame-retardant without added FR chemicals.



Image: Child properly secured in the Britax Highpoint Booster Seat, demonstrating the SecureGuard clip and shoulder belt

guide.

3. SETUP AND INSTALLATION

The Britax Highpoint booster seat offers versatile installation options to ensure a secure fit for your child and vehicle.

3.1. Headrest Adjustment

The 10-position quick-adjust headrest allows you to easily customize the fit as your child grows, ensuring optimal head and neck support.

1. Locate the adjustment handle at the back of the headrest.
2. Squeeze the handle and simultaneously raise or lower the headrest to the desired height.
3. Release the handle to lock the headrest into position. Ensure the shoulder belt guide is slightly above your child's shoulders.



SAFE RIDE FOR YOUR GROWING CHILD

Image: The adjustable headrest of the Britax Highpoint booster seat, showing its range of motion for growing children.

3.2. LATCH Connectors (Lower Anchors)

For enhanced stability, the booster seat can be secured using the vehicle's lower anchors.

1. Locate the lower anchor connectors at the base of the booster seat.
2. Attach the connectors to your vehicle's lower anchor bars.
3. Push down firmly on the booster seat while pulling the adjustment strap to tighten the LATCH connection, minimizing movement.

10-POSITION QUICK-ADJUST HEADREST

Creates a Comfortable, Secure Fit
as Your Child Grows



Image: Close-up of the premium lower anchor connectors, designed to secure the car seat firmly in the vehicle.

3.3. Seat Belt Routing with SecureGuard Clip

The SecureGuard clip and color-coded seat belt guides ensure proper positioning of the vehicle's seat belt.

1. Place the booster seat in the desired seating position in your vehicle.
2. Have your child sit in the booster seat.
3. Route the vehicle's lap belt through the red SecureGuard clip located between your child's legs. This helps keep the lap belt properly positioned over the hips.
4. Guide the vehicle's shoulder belt through the red color-coded shoulder belt guide on the headrest.
5. Buckle the vehicle's seat belt. Ensure there are no twists in the belt and it fits snugly.

SAFE TO MACHINE WASH & DRY

Naturally Flame-Retardant Fabrics



Image: A child demonstrating the use of the SecureGuard clip and color-coded seat belt guides for safe buckling.

3.4. Converting to Backless Booster

The Highpoint booster seat can be easily converted to a backless booster for older children.

1. Ensure the booster seat is removed from the vehicle.
2. Locate the release mechanisms for the backrest (refer to the product's physical labels for exact locations).
3. Detach the backrest from the booster base.
4. When using as a backless booster, ensure the vehicle's seat belt is still properly positioned using the SecureGuard clip.

SAFETY FIT FOR A BIG KID

Easily Transitions From a High
Back to a Backless Booster



Image: The Britax Highpoint booster seat shown in both its high-back and backless configurations, highlighting its adaptability.

3.5. Removable Cup Holders

The booster seat includes removable cup holders for convenience.

- To remove, gently pull the cup holder straight out from its slot.
- To re-attach, align the cup holder with the slot and push firmly until it clicks into place.

4. OPERATING THE BOOSTER SEAT

Once installed, ensure your child is correctly seated and buckled for every ride.

- Always ensure the vehicle's seat belt is properly routed through the SecureGuard clip and shoulder belt guide.
- Check that the seat belt is snug against your child's body and not twisted.
- Encourage your child to keep the shoulder belt properly positioned and not to slouch or move out of position.

SAFE CONNECTIONS

Premium Lower Anchor
Connectors Secure
Car Seat in the
Vehicle



Image: A child seated in the Britax Highpoint booster seat, demonstrating the slim and lightweight design that allows for comfortable fit in most vehicles.

5. MAINTENANCE AND CLEANING

The Britax Highpoint features SafeWash fabrics for easy cleaning.

- **Removable Cover:** The car seat cover is removable and safe to machine wash and dry. Follow the care instructions on the fabric label.
- **Spot Cleaning:** For minor spills, spot clean with a damp cloth and mild soap.
- **Cup Holders:** The removable cup holders can be easily washed by hand or in a dishwasher.

SLIM & LIGHTWEIGHT

Easy to Move From
Car to Car
and Fits 3
Across in Most
Vehicles



Image: A woman demonstrating the machine-washable and dryable SafeWash fabric cover of the Britax Highpoint booster seat.

6. TROUBLESHOOTING

If you encounter any issues with your Britax Highpoint booster seat, refer to the following common solutions:

- **Loose Installation:** Ensure the LATCH connectors are fully engaged and the strap is tightened. For seat belt installation, pull the shoulder belt firmly to remove slack.
- **Seat Belt Twisting:** Always ensure the seat belt is flat against your child's body and not twisted. Re-route the belt if necessary.
- **Headrest Adjustment Difficulty:** Check that the adjustment handle is fully squeezed before attempting to move the headrest.

For further assistance, please contact Britax customer support.

7. SPECIFICATIONS

Feature	Specification
---------	---------------

Product Dimensions	16 x 21 x 27.5 inches
Item Model Number	E1C233C
Minimum Weight Recommendation	40 Pounds
Maximum Weight Recommendation	120 Pounds
Minimum Height Recommendation	44 Inches
Maximum Height Recommendation	63 Inches
Material Type	Foam, Polyester
Material Composition	Plastic
Style	Highpoint
Number of Reclining Positions	10
Orientation	Forward Facing
Item Weight	12 pounds
Installation Type	Seat Belt



Image: Visual representation of the Britax Highpoint booster seat dimensions: 27.5 inches high, 16 inches wide, and 21 inches deep.

8. PRODUCT VIDEOS

Video: A detailed review of the Britax Highpoint Booster Seat, including unboxing and installation steps. This video provides a practical guide to setting up the booster seat in a vehicle.

Video: A demonstration of the Britax Highpoint Booster Seat's features, emphasizing its ability to grow with your child and ease of use for parents.

Video: An overview of the Britax Highpoint Backless Belt-Positioning Booster Seat, showcasing its design and functionality for child safety.

9. WARRANTY AND SUPPORT

For warranty information, product registration, or customer support, please visit the official Britax website or contact their customer service department. Keep your proof of purchase for any warranty claims.

© 2026 Britax. All rights reserved.