



FL-804P

Mainstays Personal Rechargeable USB Portable Tabletop Fan User Manual

Model: FL-804P

IMPORTANT SAFETY INSTRUCTIONS

Please read and understand all safety instructions before using this product. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not immerse the fan or USB cable in water or other liquids.
- Do not operate the fan with a damaged cord or plug, or after the fan malfunctions or has been dropped or damaged in any manner.
- Keep the fan out of reach of children and pets.
- Ensure the power source matches the fan's requirements (5 Volts USB).
- Do not insert fingers or any objects into the fan grille when it is operating.
- Unplug the fan from the power source when not in use, before cleaning, or when moving it.
- Do not block air openings or operate near curtains or other materials that could block airflow.
- Use only the provided USB cable for charging.

PRODUCT OVERVIEW

The Mainstays Personal Rechargeable USB Portable Tabletop Fan (Model FL-804P) is designed for personal cooling in various settings. It features a compact and lightweight design, a 3.54-inch (9 cm) blade diameter, and a manual control with three speed settings (High-Medium-Low). The fan can be powered by its internal 3200mAh rechargeable battery or via USB. Its adjustable air-out angle allows for directed airflow.



Figure 1: Mainstays Personal Rechargeable USB Desktop Fan in its retail packaging.



Figure 2: Front view of the fan, showing the purple grille and central button.



Figure 3: Side view illustrating the fan's adjustable tilt mechanism.



Figure 4: The fan positioned on a desk, demonstrating its compact size for personal spaces.



Figure 5: The included 48-inch USB charging cable.

SETUP

1. **Unboxing:** Carefully remove the fan and all accessories from the packaging. Ensure all components are present: the fan unit and the USB charging cable.
2. **Initial Charge:** Before first use, it is recommended to fully charge the fan. Connect the small end of the provided USB cable (Figure 5) to the charging port on the back or side of the fan, and the larger end to a compatible USB power adapter (not included) or a computer USB port. The charging indicator light (if present) will typically change color or turn off when fully charged.
3. **Placement:** Place the fan on a stable, flat surface. Ensure there is adequate space around the fan for proper airflow and to prevent obstruction of the air intake/output.

OPERATING INSTRUCTIONS

The fan features a simple one-button control for power and speed adjustment.

1. **Power On/Off:** Press the power button located on the front base of the fan once to turn it on to the lowest speed setting. Press it again to cycle through the speed settings. Press and hold the button for a few seconds to turn the fan off.

2. **Adjusting Fan Speed:** With the fan on, repeatedly press the power button to cycle through the three available speed settings: Low, Medium, and High. The fan will operate at the selected speed until changed or turned off.
3. **Adjusting Airflow Angle:** The fan head can be manually tilted vertically to direct the airflow. Gently hold the fan base and tilt the fan grille up or down to your desired angle (refer to Figure 3).
4. **Power Source:** The fan can operate on its internal rechargeable battery for portable use, or it can be continuously powered via the USB cable when connected to a USB power source.

MAINTENANCE

Regular cleaning will help maintain the fan's performance and extend its lifespan.

- **Cleaning:** Ensure the fan is turned off and unplugged before cleaning. Use a soft, dry cloth to wipe the exterior surfaces of the fan. For dust accumulation on the blades or inside the grille, use a soft brush or a vacuum cleaner with a brush attachment to gently remove dust. Do not use abrasive cleaners, solvents, or immerse the fan in water.
- **Storage:** When not in use for extended periods, store the fan in a cool, dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on.	Battery is depleted. USB cable not properly connected. Power button not pressed correctly.	Charge the fan using the USB cable. Ensure USB cable is securely connected to both the fan and the power source. Press the power button firmly.
Weak airflow.	Fan is on low speed setting. Obstruction in front or back of fan. Dust accumulation on blades.	Increase fan speed by pressing the power button. Ensure fan is placed in an open area. Clean the fan blades and grille as per maintenance instructions.
Fan stops unexpectedly.	Battery is depleted.	Recharge the fan.

SPECIFICATIONS

- **Model Number:** FL-804P
- **Color:** Purple
- **Product Dimensions:** 5.08 x 15.24 x 19.05 cm (2 x 6 x 7.5 inches)
- **Item Weight:** 1 kg (2.2 lbs)
- **Voltage:** 5 Volts
- **Material:** Plastic
- **Number of Speeds:** 3 (Low, Medium, High)
- **Battery Capacity:** 3200mAh
- **Blade Diameter:** 3.54 inches (9 cm)
- **Power Source:** Battery Powered / USB
- **Special Features:** Portable, High Velocity, Adjustable Air-out Angle

WARRANTY AND SUPPORT

Specific warranty information for this product is not available in the provided data. For warranty claims, technical support, or any product-related inquiries, please contact the retailer or manufacturer directly. Keep your purchase receipt as proof of purchase.