

[Manuals.plus](#) /

› [Doc Johnson](#) /

› Doc Johnson A-Play Expander - Rechargeable Inflating Silicone Anal Plug with Remote Instruction Manual

Doc Johnson 0300-15-AM

Doc Johnson A-Play Expander Instruction Manual

Model: 0300-15-AM

INTRODUCTION

Welcome to the Doc Johnson A-Play Expander user manual. This device is designed for personal use and features both vibrating and expanding functions, controllable directly on the unit or via a wireless remote. Please read these instructions carefully before first use to ensure safe and proper operation.

IMPORTANT SAFETY INFORMATION

- Consult a healthcare professional before use if you have any medical conditions.
- Discontinue use immediately if you experience any discomfort or pain.
- This product is for external and internal anal use only.
- Do not use if the product appears damaged.
- Keep out of reach of children.
- Use only with water-based lubricants. Oil-based lubricants can damage silicone.
- Ensure the wide base is always external for safe removal.
- The remote uses 1 AAA battery (not included).

PACKAGE CONTENTS

- 1 x A-Play Expander Device
- 1 x Wireless Remote Control
- 1 x USB Charging Cable
- 1 x Fabric Storage Bag



DOC JOHNSON®

120
UNIQUE
SENSATIONS



A
PLAY

EXPANDER / 5.75"

SILICONE • RECHARGEABLE • WIRELESS REMOTE


Image showing the A-Play Expander device and its remote control packaged in its retail box.

PRODUCT OVERVIEW

The A-Play Expander is crafted from luxurious velvet-touch silicone and features a wide base for comfortable and safe use. It is designed to be waterproof and warms to body temperature.



Image of the Doc Johnson A-Play Expander, a black silicone anal plug with a textured tip and a wide base, shown alongside its matching black wireless remote control.

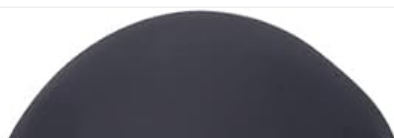



Front view of the black silicone A-Play Expander device, highlighting its ergonomic shape and textured tip.





Side view of the black silicone A-Play Expander device, showing its curved profile and wide base.

CHARGING INSTRUCTIONS

The A-Play Expander is USB-rechargeable.

1. Locate the charging port on the device. This is typically a small magnetic contact point.
2. Connect the included USB charging cable to the device's charging port.
3. Connect the other end of the USB cable to a standard USB power adapter (not included) or a computer USB port.
4. The indicator light on the device will illuminate during charging and turn off or change color when fully charged.
5. A full charge takes approximately 2 hours and provides up to 40 minutes of usage time.





Image of the black USB charging cable with magnetic contact points, used for recharging the A-Play Expander.



Close-up view of the USB charging cable, showing the USB-A connector and the magnetic charging pins.

REMOTE CONTROL BATTERY INSTALLATION

The wireless remote control requires 1 AAA battery (not included).

1. Locate the battery compartment on the back of the remote control.
2. Open the compartment cover.
3. Insert 1 AAA battery, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.





Top view of the black wireless remote control for the A-Play Expander, showing the power button and the function control button.



Side profile of the black wireless remote control, illustrating its slim design.

OPERATING INSTRUCTIONS

Device Controls

The device can be operated directly using the buttons on its base.

- **Power Button:** Press and hold to turn the device ON/OFF.
- **Function Button:** Press to cycle through vibration patterns and expansion levels.

Remote Control Operation

The wireless remote provides convenient control over the device's functions.

- **Power Button (bottom button):** Press and hold to turn the device ON/OFF.
- **Function Button (top button):** Press to cycle through 10 vibrating speeds and 12 expanding speeds. Functions can be used independently or simultaneously.

Vibration Modes

The A-Play Expander features 10 distinct vibration speeds/patterns. Press the function button to cycle through them.

Expansion Modes

The device offers 12 expanding speeds/levels. Press the function button to adjust the expansion.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your A-Play Expander.

- Clean the device thoroughly before and after each use with warm water and a mild, toy-safe cleaner.
- Rinse thoroughly and pat dry with a lint-free cloth.
- Do not use cleaners containing alcohol, petroleum, or acetone, as these can damage the silicone.
- The device is waterproof, allowing for easy cleaning under running water.

STORAGE

Store the A-Play Expander in a clean, dry place, away from direct sunlight and extreme temperatures.

Use the included fabric storage bag for discreet travel and storage.

Avoid storing with other toys made of different materials to prevent material degradation.

TROUBLESHOOTING

- **Device not turning on:**
 - Ensure the device is fully charged. Refer to "Charging Instructions."
 - Check if the power button is pressed and held sufficiently.
- **Remote not controlling device:**
 - Ensure the remote has a fresh AAA battery and it is inserted correctly.
 - Make sure the device is turned on.
 - Ensure the remote is within range of the device.
- **Weak vibration or expansion:**
 - The device may need recharging.

PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	0300-15-AM
Brand	Doc Johnson
Material	ABS / Silicone
Color	Black
Total Length	5.75 in. (14.6 cm)
Insertable Length	5 in. (12.7 cm)
Width/Diameter	1.5 in. (3.8 cm)
Circumference	4.75 in. (12.1 cm)
Vibration Speeds	10
Expansion Speeds	12

Feature	Detail
Power Source (Device)	USB Rechargeable (Lithium Polymer battery included)
Power Source (Remote)	1 x AAA Battery (not included)
Charging Time	Approx. 2 hours
Usage Time	Approx. 40 minutes
Waterproof	Yes
Safety Features	Phthalate-Free, Body-Safe, Nonporous, Odorless, Wide Base

WARRANTY AND SUPPORT

Specific warranty information is not explicitly provided in the product details. For warranty claims, technical support, or further inquiries, please contact Doc Johnson customer service directly.
Visit the official Doc Johnson website for more information: [Doc Johnson Official Website](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question