

## Maxim 50752BKGLD

# Maxim Rincon 14W 1 LED Outdoor Wall Sconce Instruction Manual

Model: 50752BKGLD

## IMPORTANT SAFETY INSTRUCTIONS

---

Please read and understand all instructions before beginning installation. Failure to follow these instructions may result in electric shock, fire, or other hazards that could cause injury or property damage.

- **WARNING:** Risk of electric shock. Disconnect power at the fuse box or circuit breaker before installation or servicing.
- All electrical connections must be in accordance with local codes and ordinances, National Electric Code (NEC), and ANSI/NFPA 70-1999.
- Consult a qualified electrician if you are unsure about the installation process.
- This fixture is designed for outdoor use. Ensure all connections are properly sealed to prevent water intrusion.
- **Proposition 65 Warning:** This product may contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.
- Do not attempt to modify the fixture. Any modifications may void the warranty and create safety hazards.

## PACKAGE CONTENTS

---

Verify that all components are present before beginning installation.

- 1 x Rincon LED Outdoor Wall Sconce Fixture
- 1 x Mounting Hardware Kit (screws, wire nuts, mounting plate)
- 1 x Instruction Manual



Image: The Maxim Rincon 14W 1 LED Outdoor Wall Sconce, featuring a black and gold finish with clear glass panels.

## PRODUCT SPECIFICATIONS

<b>Brand</b>	Maxim
<b>Model Name</b>	Rincon
<b>Model Number</b>	50752BKGLD
<b>Dimensions (L x W x H)</b>	7" x 4" x 10"
<b>Wattage</b>	14 Watts
<b>Light Source Type</b>	LED
<b>Voltage</b>	120 Volts
<b>Material</b>	Aluminum
<b>Finish Type</b>	Black / Gold
<b>Indoor/Outdoor Usage</b>	Outdoor
<b>Assembly Required</b>	Yes



Image: Diagram showing the dimensions of the Rincon outdoor wall sconce: 10 inches tall, 7 inches wide, and 7 inches deep.

## INSTALLATION INSTRUCTIONS

---

Professional installation is recommended. Ensure power is disconnected at the circuit breaker before proceeding.

### Tools Required (Not Included):

- Phillips head screwdriver
- Flathead screwdriver
- Wire strippers
- Electrical tape
- Safety glasses

### Installation Steps:

1. **Turn off Power:** Locate the circuit breaker controlling the light fixture and turn it OFF. Verify power is off using a voltage tester.
2. **Prepare Mounting Surface:** Ensure the wall surface is clean, dry, and structurally sound to support the fixture.
3. **Attach Mounting Plate:** Secure the mounting plate (included in hardware kit) to the junction box on the wall using the provided screws. Ensure the plate is level and firmly attached.
4. **Make Electrical Connections:** Carefully connect the fixture's wires to the house wiring using wire nuts.
  - Connect the **black** (hot) wire from the fixture to the **black** (hot) wire from the junction box.
  - Connect the **white** (neutral) wire from the fixture to the **white** (neutral) wire from the junction box.
  - Connect the **green or bare copper** (ground) wire from the fixture to the **green or bare copper** (ground) wire from the junction box.

Ensure all connections are secure and covered with wire nuts. Wrap electrical tape around wire nuts for added security.

5. **Mount the Fixture:** Carefully align the fixture with the mounting plate and secure it using the provided screws. Ensure the fixture is flush against the wall and stable.
6. **Seal (Optional but Recommended):** For outdoor installations, apply a bead of weather-resistant sealant around the perimeter of the fixture where it meets the wall to prevent water penetration.
7. **Restore Power:** Turn the power back ON at the circuit breaker.

## OPERATING YOUR SCONCE

---

The Maxim Rincon LED Outdoor Wall Sconce operates via a standard wall switch (not included).

- To turn the light **ON**, flip the connected wall switch to the 'ON' position.
- To turn the light **OFF**, flip the connected wall switch to the 'OFF' position.

This fixture is equipped with integrated LED lighting and does not require bulb replacement.

## CARE AND MAINTENANCE

---

Proper care ensures the longevity and appearance of your outdoor wall sconce.

- **Cleaning:** Clean the fixture regularly with a soft, damp cloth. Do not use abrasive cleaners, solvents, or polishes as they may damage the finish or electrical components. Mild soap and water can be used for stubborn dirt, followed by a rinse with clean water and thorough drying.
- **Inspection:** Periodically inspect the fixture for any signs of damage, loose connections, or wear. If any issues are found, disconnect power and consult a qualified electrician.
- **LED Care:** The integrated LED light source is designed for long-term use and does not require replacement. Do not attempt to disassemble the LED module.

## TROUBLESHOOTING GUIDE

---

Before attempting any troubleshooting, ensure power is disconnected at the circuit breaker.

Problem	Possible Cause	Solution
---------	----------------	----------

Light does not turn on.	<ol style="list-style-type: none"> <li>1. Power is off at the circuit breaker.</li> <li>2. Loose wire connections.</li> <li>3. Faulty wall switch.</li> <li>4. Integrated LED failure.</li> </ol>	<ol style="list-style-type: none"> <li>1. Ensure the circuit breaker is ON.</li> <li>2. Check all wire connections and tighten if necessary (with power OFF).</li> <li>3. Test the wall switch with another device or replace it.</li> <li>4. Contact customer support if the LED is suspected to be faulty.</li> </ol>
Light flickers or dims.	<ol style="list-style-type: none"> <li>1. Loose wire connections.</li> <li>2. Incompatible dimmer switch (if applicable).</li> <li>3. Voltage fluctuations.</li> </ol>	<ol style="list-style-type: none"> <li>1. Check and secure all wire connections (with power OFF).</li> <li>2. Ensure any dimmer switch used is compatible with LED fixtures.</li> <li>3. Consult an electrician to check household voltage.</li> </ol>

## WARRANTY AND CUSTOMER SUPPORT

---

This Maxim Rincon LED Outdoor Wall Sconce is covered by a Manufacturer's Warranty.

For specific warranty details, claims, or technical assistance, please contact Maxim Lighting customer support directly. Keep your purchase receipt as proof of purchase.

**Maxim Lighting Contact Information:**

Please refer to the official Maxim Lighting website or your purchase documentation for the most current contact details.