

Manuals.plus /

› WONNIE /

› WONNIE 16.9" Portable Blu ray DVD Player User Manual

WONNIE W-BR146

WONNIE 16.9" Portable Blu-ray DVD Player User Manual

Model: W-BR146

1. INTRODUCTION

Thank you for purchasing the WONNIE 16.9" Portable Blu-ray DVD Player. This device is designed to provide high-quality portable entertainment with its 14.1" 1080P HD swivel screen, long-lasting rechargeable battery, and versatile media playback options. This manual will guide you through the setup, operation, and maintenance of your new player to ensure optimal performance and enjoyment.

2. WHAT'S IN THE BOX

Upon opening your WONNIE Portable Blu-ray DVD Player package, please ensure all the following items are present:

- 1 x Blu-ray DVD Player
- 1 x Remote Control
- 1 x AC Adaptor
- 1 x Car Charger
- 1 x RCA Cable
- 1 x User Manual

PACKAGE



Remote Control



AC Adaptor



Car Charger



RCA Cable



User Manual

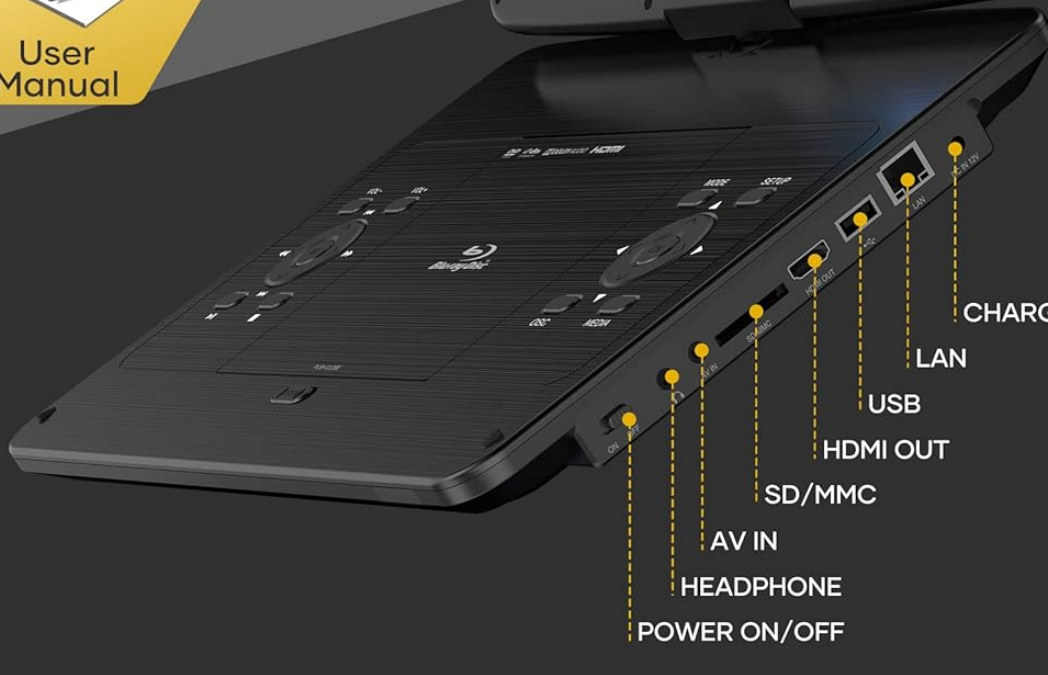 


Image: All components included in the WONNIE Portable Blu-ray DVD Player package.

Video: An unboxing demonstration showing the contents of the WONNIE Portable Blu-ray DVD Player package.

3. PRODUCT FEATURES

The WONNIE Portable Blu-ray DVD Player is equipped with advanced features for an enhanced viewing experience:

- **1080P HD Swivel Screen:** Enjoy crisp, clear visuals on the 14.1-inch 1080P HD screen. The screen can swivel 270° and flip 180°, allowing for comfortable viewing from various angles.

14.1" FULL HD LARGE SCREEN

1080P HD Output Realistic And Vivid Visuals



Image: The player's 14.1-inch Full HD screen showcasing vivid visuals.

LAST MEMORY FUNCTION

NOTE: Please press the stop button first and turn off the player, or remove the disc and then turn off the player



270° & 180° Swivel Screen



Image: Illustration of the screen's swivel and flip functionality.

- **Surround Audio:** Built-in surround sound system provides an immersive audio experience. A 3.5mm jack is available for connecting external speakers or headphones.

BUILT-IN DUAL AUDIO SPEAKERS

Which Gives You More Realistic and Clearer
Surround Sound



Image: The player's dual audio speakers for enhanced sound.

- **HDMI High-Definition Output:** Connect the player to a TV or projector via the HDMI output port (HDMI cable not included) for a larger viewing experience.

HDMI OUTPUT

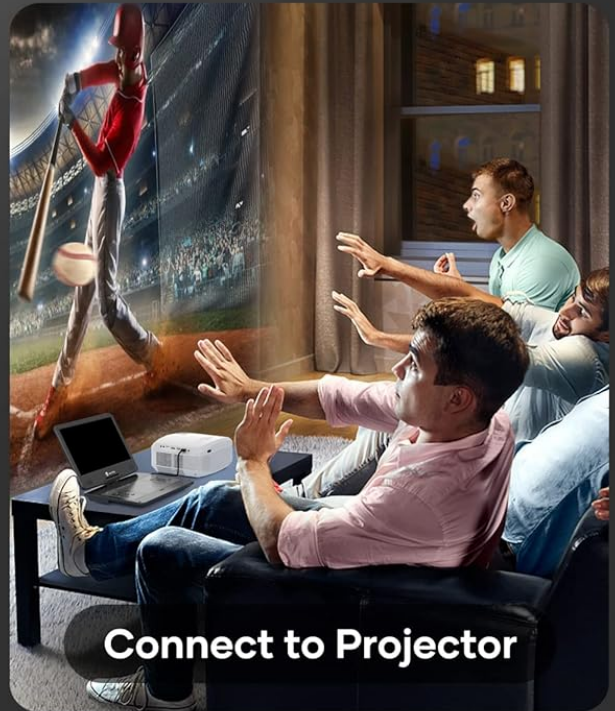 


Image: Examples of connecting the player to external displays and car use.

- **Multiple Disc Formats Support:** Compatible with a wide range of disc formats including BD, BD-R, BD-RE, CD, DVD, CD-R/RW, DVD-R/+R, DVD+RW/-RW, VCD, and SVCD. Blu-ray discs are Region A/1, while DVDs are all regions.
- **USB/SD/MMC Playback:** Supports USB and SD/MMC cards (max 32GB FAT32) for playing various media files. Supported video formats include MP4/MOV/AVI/MPG/MPEG/DAT/FLV/VPB/VOB/RMVB/ASF. Supported audio formats include MP3/WMA. Supported picture formats include JPG/JPEG.

SUPPORTED PLAYBACK FORMATS



Blu-ray Formats: BD,BD-R,BD-RE



DVD Formats: BD,BD-R,BD-RE,CD,DVD,VCD,SVCD,
DVD-R/+R,DVD+RW/-RW,CD-R/+R,CD+RW/-RW



Video Formats: MP4,MOV,AVI,MPG,MPEG,DAT,FLV,
VPB,VOB/RMVB/ASF



Audio Formats: MP3, WMA



Image Formats: JPEG, PNG



USB/Micro SD: Max to 32GB FAT32, Resolution
up to 1920*1080@30fps HD Video File Playback



Image: Overview of supported media formats and inputs.

- **Last Memory Function:** The player can resume playback from where it was last stopped. To utilize this feature, ensure you press the stop button before turning off the device or removing the disc.



Image: The player's 5000mAh rechargeable battery for extended use.

Video: A detailed demonstration of the WONNIE Portable Blu-ray Player's features, including screen quality, battery life, and connectivity options.

4. SETUP

Follow these steps to set up your portable Blu-ray DVD player:

1. **Charging the Battery:** Before first use, fully charge the player using the provided AC adaptor. Connect the AC

adaptor to the DC IN 12V port on the player and plug it into a wall outlet. The charging indicator light will show the charging status.

2. **Power On/Off:** Locate the Power ON/OFF switch on the side of the player. Slide it to the 'ON' position to power on the device.
3. **Inserting a Disc:** Gently open the disc cover. Place your Blu-ray or DVD disc onto the spindle with the label side facing up. Press down gently until it clicks into place. Close the disc cover firmly.
4. **Connecting to Power in Car:** Use the provided car charger to power the player in your vehicle. Plug the car charger into the DC IN 12V port and the other end into your car's cigarette lighter socket.

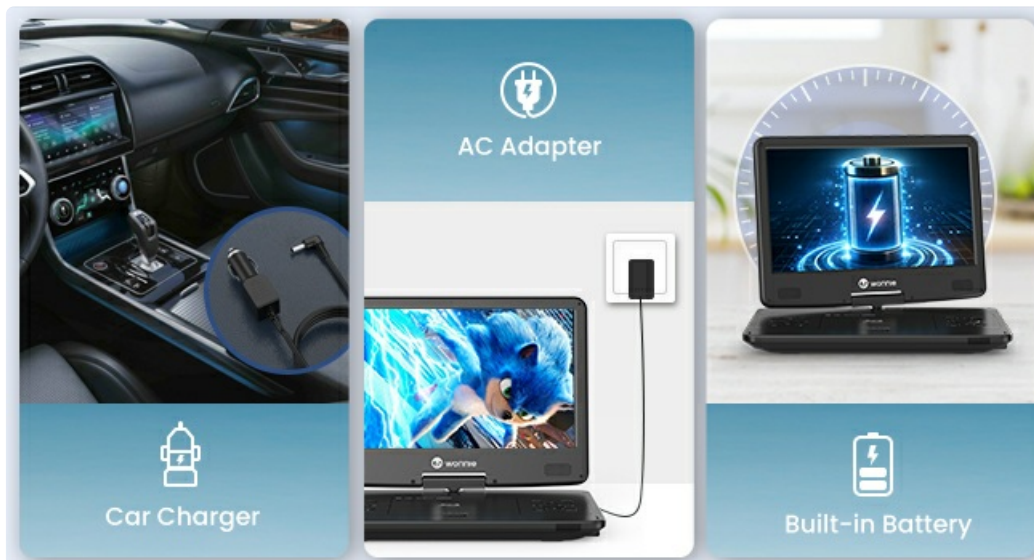 


Image: Powering options for the player, including car charger and AC adapter.

5. OPERATING INSTRUCTIONS

Learn how to operate your WONNIE Portable Blu-ray DVD Player:

5.1 Basic Playback

- After inserting a disc and powering on, the player will automatically detect the disc and begin playback.
- Use the control buttons on the player or the remote control to navigate menus, play, pause, stop, fast forward, and rewind.

5.2 Using USB/SD/MMC

- Insert a USB drive into the USB port or an SD/MMC card into the SD/MMC slot.
- Press the 'MEDIA' button on the player or remote to switch to USB or SD/MMC mode.
- Navigate through your files using the directional buttons and press 'OK' to select and play.

5.3 HDMI Output

- Connect one end of an HDMI cable (not included) to the HDMI OUT port on the player and the other end to your TV or projector's HDMI input.
- Select the corresponding HDMI input on your TV or projector to display the player's content.

Video: A demonstration of the WONNIE Portable Blu-ray DVD Player in use, highlighting its screen quality and ease of operation.

6. MAINTENANCE

To ensure the longevity and optimal performance of your player, follow these maintenance guidelines:

- **Cleaning the Screen:** Use a soft, lint-free cloth to gently wipe the screen. For stubborn smudges, slightly dampen the cloth with water or a screen-cleaning solution. Avoid harsh chemicals.
- **Cleaning the Disc Lens:** If discs are not reading properly, use a specialized disc lens cleaner. Do not attempt to clean the lens manually with cotton swabs or other objects.
- **General Cleaning:** Wipe the exterior of the player with a soft, dry cloth. Avoid getting liquids into the ports or openings.
- **Storage:** When not in use for extended periods, store the player in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge it regularly, even if not in use.

7. TROUBLESHOOTING

If you encounter issues with your WONNIE Portable Blu-ray DVD Player, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Player does not power on.	Low battery; Power switch off; AC adaptor not connected properly.	Charge the battery; Slide power switch to ON; Check AC adaptor connection.
No disc playback.	Disc inserted incorrectly; Disc is dirty or scratched; Incorrect region code (for Blu-ray).	Reinsert disc correctly; Clean or replace disc; Ensure Blu-ray disc is Region A/1.
No sound.	Volume too low; Mute function active; External speakers/headphones not connected properly.	Increase volume; Deactivate mute; Check connections of external audio devices.
No picture on external display (HDMI).	HDMI cable not connected; Incorrect input selected on TV/projector.	Connect HDMI cable securely; Select correct HDMI input on TV/projector.
USB/SD card not recognized.	Card/drive not formatted to FAT32; Unsupported file format; Card/drive capacity too large.	Ensure FAT32 format; Check file formats; Max capacity 32GB.

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Detail
Model Number	W-BR146
Screen Size	14.1 Inches
Display Type	LCD
Product Dimensions	15 x 3.6 x 13 inches
Item Weight	3.3 pounds
Battery Type	2 Lithium Metal batteries (included)
Supported Disc Formats	BD, BD-R, BD-RE, CD, DVD, CD-R/RW, DVD-R/+R, DVD+RW/-RW, VCD, SVCD
Blu-ray Region	Region A/1
DVD Region	All Regions
USB/SD/MMC Support	Max 32GB FAT32, 1920*1080@30fps HD video playback
Video Formats	MP4/MOV/AVI/MPG/MPEG/DAT/FLV/VPB/VOB/RMVB/ASF
Audio Formats	MP3/WMA
Picture Formats	JPG/JPEG
Connectivity	HDMI Out, AV In, Headphone Jack, USB, SD/MMC, LAN, DC In

9. WARRANTY AND SUPPORT

WONNIE provides a new replacement or full refund for 1 year from the date of purchase. If you have any questions, require technical assistance, or need to claim warranty service, please contact WONNIE customer support directly. Refer to the contact information provided in your product packaging or visit the official WONNIE website for the most up-to-date support details.