

[Manuals.plus](#) /

› [FAMICOZY](#) /

› FAMICOZY 4.5" No Ticking Analog Alarm Clock User Manual

FAMICOZY B09VG2PKKC

FAMICOZY 4.5" No Ticking Analog Alarm Clock User Manual

Model: B09VG2PKKC

Brand: FAMICOZY

INTRODUCTION

Thank you for choosing the FAMICOZY 4.5" No Ticking Analog Alarm Clock. This manual provides detailed instructions for setting up, operating, and maintaining your new alarm clock. Designed for simplicity and quiet operation, it features a silent sweeping second hand, a gradual rise alarm, and a soft backlight for easy readability.



Figure 1: Front view of the FAMICOZY 4.5" Analog Alarm Clock.

KEY FEATURES

- **Silent Noiseless Operation:** The second hand moves quietly, ensuring no ticking sound to disturb sleep or concentration.
- **Easy Operation:** Simple two-knob control for time and alarm setting, with a side switch for alarm activation.
- **Large, Readable Display:** 4.72 x 3.66 x 2.55 inch dimensions with large black sans serif numbers on a white face for clear visibility.
- **Crescendo Alarm:** Alarm starts quietly and gradually increases in volume to provide a gentle wake-up.
- **Snooze Function:** A large top button provides an extra 5 minutes of sleep, repeatable within one hour.
- **Soft Backlight:** Pressing the top button illuminates the entire dial softly for 5 seconds, allowing easy nighttime viewing without glare.
- **Battery Operated:** Requires two AA batteries (not included) for cordless operation.

PACKAGE CONTENTS

- 1 x FAMICOZY 4.5" Analog Alarm Clock (Black)
- 1 x User Manual

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the clock.
2. Open the battery door.
3. Insert two AA batteries (not included) according to the polarity indicators (+ and -) inside the compartment. Carbon Zinc batteries are advised.
4. Close the battery door securely.

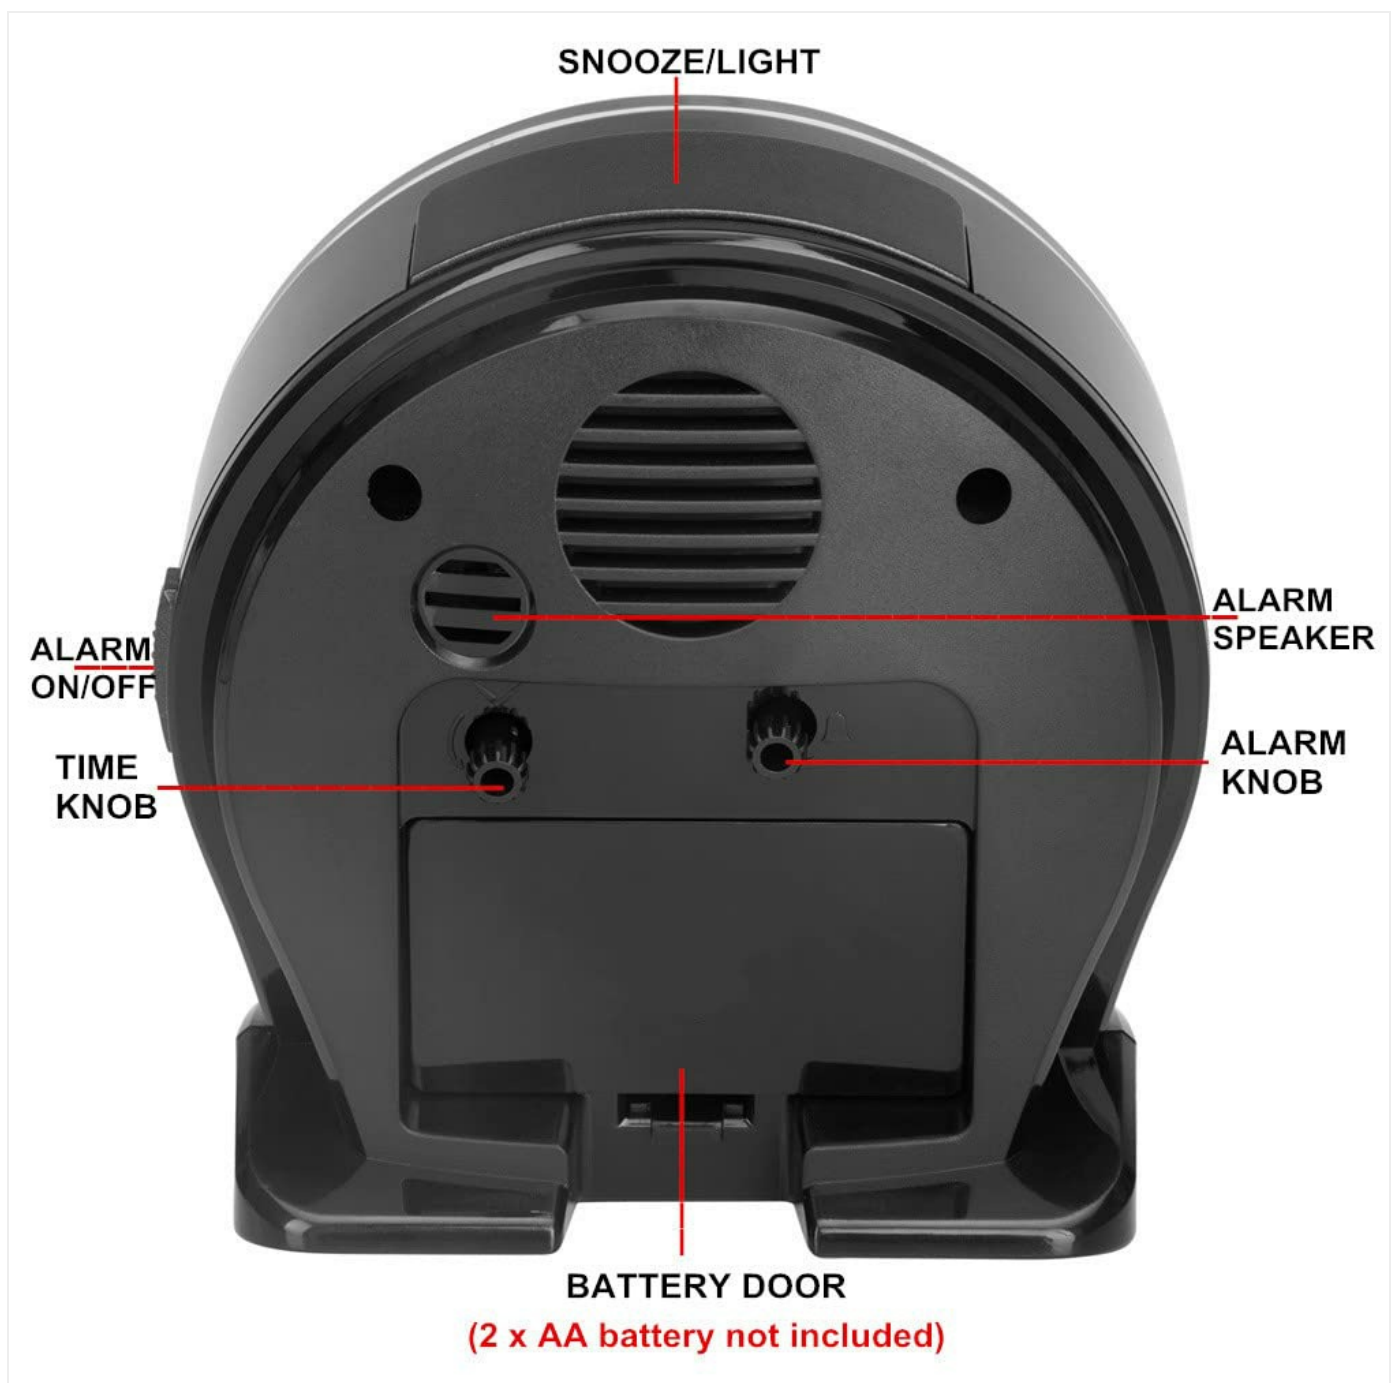


Figure 2: Rear view of the clock with labeled controls and battery door.

2. Setting the Time

1. Locate the **TIME KNOB** on the back of the clock (refer to Figure 2).
2. Rotate the **TIME KNOB** clockwise or counter-clockwise until the hour and minute hands indicate the correct time.

3. Setting the Alarm

1. Locate the **ALARM KNOB** on the back of the clock (refer to Figure 2).
2. Rotate the **ALARM KNOB** until the alarm hand points to your desired wake-up time.
3. Ensure the alarm ON/OFF switch on the side of the clock is in the "ON" position to activate the alarm.

OPERATING INSTRUCTIONS

Alarm ON/OFF Switch

The alarm can be easily turned on or off using the protruded switch located on the side of the clock.



Figure 3: Side view highlighting the alarm ON/OFF switch.

Snooze Function

When the alarm sounds, press the large **SNOOZE/LIGHT BUTTON** located on the top of the clock. This will temporarily silence the alarm for approximately 5 minutes. You can repeat this action multiple times within a one-hour period.

Soft Backlight

To illuminate the clock face in the dark, press the large **SNOOZE/LIGHT BUTTON** on the top of the clock. The soft light will illuminate the entire dial for about 5 seconds, providing clear visibility without being dazzling.

Press top button for 5 seconds light



Soft light spread the entire face
Easy to read time in dark

Figure 4: Clock face illuminated by the soft backlight.

Silent Operation Demonstration

The FAMICOZY alarm clock features a silent sweeping second hand, eliminating the traditional ticking sound. This video demonstrates the quiet operation and the crescendo alarm feature.

Video 1: Demonstration of the silent sweeping second hand and crescendo alarm.

MAINTENANCE

- **Cleaning:** Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the clock starts losing time or the alarm weakens. Always use fresh AA batteries.
- **Storage:** If storing the clock for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock not working or losing time.	Low or dead batteries. Incorrect battery installation.	Replace with fresh AA batteries, ensuring correct polarity.
Alarm not sounding.	Alarm ON/OFF switch is in the "OFF" position. Alarm time not set correctly. Low batteries.	Move the side switch to "ON". Re-set the alarm time. Replace batteries.
Backlight not working.	Low batteries. Button not pressed firmly.	Replace batteries. Press the SNOOZE/LIGHT button firmly.
Clock makes a "click" sound at alarm time even when off.	This is a characteristic of some analog alarm mechanisms.	To avoid this sound, ensure the alarm hand is set to a time far from the current time if the alarm function is not desired.

SPECIFICATIONS

Feature	Detail
Brand	FAMICOZY
Color	Black
Display Type	Analog
Style	Antique Traditional
Special Features	Simple operation, soft LED night light, gradual rise alarm, non-ticking, cordless battery operated
Product Dimensions	3.66"W x 4.72"H x 2.55"D (approximate, based on images)
Power Source	Battery Powered (2 x AA batteries required, not included)
Age Range (Description)	Adult Teens Kids
Room Type	Bedroom, Living Room, Dining Room, Kitchen, Kids Room, Bathroom, Classroom, Study Room, Home Office
Shape	Round
Indoor/Outdoor Usage	Indoor
Material	Plastic (Hard Plastic frame)
Watch Movement	Quartz
Item Weight	6.2 ounces (0.39 Pounds)
Manufacturer	FAMICOZY
ASIN	B09VG2PKKC

Feature	Detail
Country of Origin	China

Note: Product dimensions are approximate and may vary slightly.



Figure 5: Product dimensions.

WARRANTY AND SUPPORT

For warranty information or technical support, please contact the seller directly through your purchase platform. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question