

FABULETTA FSV001

FABULETTA FSV001 Cordless Vacuum Cleaner User Manual

1. INTRODUCTION

Thank you for choosing the FABULETTA FSV001 Cordless Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance.

Please read this manual thoroughly before first use and retain it for future reference.

The FABULETTA FSV001 is a versatile 6-in-1 lightweight stick vacuum designed for various cleaning tasks. It features a 250W brushless motor providing 24,000Pa suction, a detachable battery offering up to 45 minutes of runtime, an LED display for operational feedback, and a high-efficiency filtration system.

2. SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, please observe the following safety precautions:

- Read all instructions before using the appliance.
- This appliance is intended for household use only. Do not use outdoors or on wet surfaces.
- Do not allow children to operate the vacuum cleaner. Close supervision is necessary when used near children.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without the dust cup and filters in place.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not handle the charger or appliance with wet hands.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Turn off all controls before unplugging.
- Exercise extra care when cleaning on stairs.
- If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not modify or attempt to repair the appliance yourself.

3. PACKAGE CONTENTS

Verify that all components are present in the package:

- Main Motor Unit
- Extension Wand
- Motorized Floor Brush
- Detachable Battery Pack
- Power Adapter
- Crevice Tool
- Dusting Brush
- Wall Mount Bracket with Screws
- Additional HEPA Filter
- User Manual

4. PRODUCT OVERVIEW

Familiarize yourself with the various parts of your FABULETTA FSV001 Cordless Vacuum Cleaner.



This image displays the FABULETTA FSV001 Cordless Vacuum Cleaner in its various configurations. It shows the main motor unit, the extension wand, the motorized floor brush, and two common attachments: the crevice tool and the dusting brush. Additionally, two spare HEPA filters are shown, highlighting the comprehensive accessory package. The central blue circular display indicates the vacuum's LED interface.

Key Components:

- **Main Motor Unit:** Contains the 250W brushless motor, dust cup, and LED display.
- **Detachable Battery:** Provides power to the unit. Can be charged separately or while attached.
- **Extension Wand:** Connects the main unit to the floor brush or other attachments for extended reach.
- **Motorized Floor Brush:** Features LED lights and a flexible swivel for cleaning various floor types.
- **Crevice Tool:** Ideal for narrow gaps and corners.
- **Dusting Brush:** Suitable for delicate surfaces and upholstery.
- **HEPA Filter:** Part of the multi-stage filtration system.

5. ASSEMBLY

Follow these steps to assemble your vacuum cleaner:

1. **Attach the Extension Wand:** Insert the top end of the extension wand into the main motor unit until it clicks securely into place.
2. **Attach the Floor Brush:** Insert the bottom end of the extension wand into the motorized floor brush until it clicks securely.
3. **Install the Battery:** Slide the detachable battery pack into the slot on the main motor unit until it locks. Ensure it is fully seated.
4. **Attach Accessories:** For handheld use, remove the extension wand and attach the crevice tool or dusting brush directly to the main motor unit.

6. CHARGING THE BATTERY

Before first use, fully charge the battery. The battery can be charged while attached to the main unit or separately.

1. **Charging on Unit:** Connect the power adapter to the charging port on the main motor unit. Plug the adapter into a wall outlet.
2. **Charging Separately:** Remove the battery pack from the main unit. Connect the power adapter directly to the charging port on the battery pack. Plug the adapter into a wall outlet.

The LED display will indicate charging status. A full charge takes approximately **4 hours**. Once fully charged, the vacuum provides up to **45 minutes** of runtime in Low Mode, 30 minutes in Standard Mode, and 15 minutes in MAX mode.

7. OPERATION

Power On/Off and Suction Adjustment:

1. Press the power button on the main unit to turn the vacuum on. It will start in the default suction mode.
2. Press the mode button (often indicated by a fan icon or similar) to cycle through the three suction levels: Low, Standard, and MAX. The LED display will show the current suction level.
3. Press the power button again to turn the vacuum off.

Using Attachments:

- **Motorized Floor Brush:** Use for general floor cleaning on carpets and hard floors. The integrated LED lights illuminate dark areas. The flexible 180° swivel and 90° up/down movement allow for easy maneuverability.
- **Crevice Tool:** Attach directly to the main unit or extension wand for cleaning tight spaces, corners, and edges.
- **Dusting Brush:** Attach for cleaning delicate surfaces, upholstery, curtains, and keyboards.

LED Display:

The LED display provides real-time information, including:

- Current suction level.
- Battery charge indicator.
- Brush roller cleaning indication.
- HEPA filter cleaning indication.

8. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

Emptying the Dust Cup:

1. Ensure the vacuum is turned off and disconnected from the charger.
2. Locate the dust cup release button, usually near the main motor unit.
3. Press the button to open the dust cup and empty its contents into a trash bin.
4. Close the dust cup securely until it clicks.

Cleaning the HEPA Filter:

The HEPA filter is washable. It is recommended to clean the filter regularly to prevent weak suction and blockage. An additional HEPA filter is included for convenience.

1. Twist and pull to remove the filter assembly from the dust cup.
2. Separate the HEPA filter from the mesh filter.
3. Rinse the HEPA filter and mesh filter under cold running water until the water runs clear.
4. Allow all filter parts to air dry completely for at least 24 hours before reassembling and placing back into the vacuum. Do not use a dryer or other heating methods.

Cleaning the Brush Roller:

1. Turn off the vacuum and detach the motorized floor brush.
2. Locate the brush roller release tab or lock on the side of the floor brush.
3. Remove the brush roller.
4. Use scissors or a cleaning tool to cut and remove any tangled hair or debris from the brush roller.
5. Reinsert the brush roller and secure it in place.

9. TROUBLESHOOTING

Refer to the following table for common issues and their solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is not charged or not properly installed.	Charge the battery fully. Ensure the battery pack is securely inserted.
Weak suction	Dust cup is full. Filter is clogged. Obstruction in nozzle or hose.	Empty the dust cup. Clean or replace the HEPA filter. Check for and remove any blockages.
Brush roller not spinning	Hair or debris tangled in brush roller. Obstruction in floor brush.	Clean the brush roller. Remove any obstructions from the floor brush.
Short runtime	Battery not fully charged. Using MAX suction mode frequently.	Ensure battery is fully charged. Use lower suction modes for longer runtime.

If the problem persists after attempting these solutions, please contact customer support.

10. SPECIFICATIONS

Feature	Specification
Brand	FABULETTA
Model Number	FSV001
Motor	250W Brushless Motor
Maximum Suction Power	24,000 Pa (22 Decimeters)
Battery Type	7 x 2200 mAh Lithium-Ion
Runtime	Up to 45 minutes (Low Mode)
Charging Time	4 Hours
Dust Cup Capacity	1 Liter
Noise Level	63 dB
Filter Type	HEPA Filter (Washable)
Weight	4 pounds (approx. 1.8 kg)
Product Dimensions	9 x 8 x 41 inches
Special Features	LED Display, Self-Standing Design, Headlight, 3 Suction Modes

11. WARRANTY AND SUPPORT

FABULETTA offers a **12-month satisfactory after-sales service** for this product. If you encounter any issues or have questions regarding your FABULETTA FSV001 Cordless Vacuum Cleaner, please contact our customer support team. Provide your model number and purchase details for efficient assistance. For further support, please visit the official FABULETTA website or contact your retailer.