

WONNIE W-1538

WONNIE Portable DVD Player W-1538 User Manual

Model: W-1538 | Brand: WONNIE

1. INTRODUCTION

Thank you for purchasing the WONNIE Portable DVD Player W-1538. This device offers a high-resolution 15.4-inch screen, long battery life, and versatile playback options for your entertainment needs at home or on the go. This manual provides essential information for safe and efficient use of your new portable DVD player. Please read it thoroughly before operation and retain it for future reference.

2. SAFETY INFORMATION

- Do not expose the device to rain or moisture to prevent fire or electric shock.
- Avoid placing the device near heat sources such as radiators, heat registers, stoves, or other heat-producing appliances.
- Use only attachments/accessories specified by the manufacturer.
- Unplug the device during lightning storms or when unused for long periods.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way.

3. PACKAGE CONTENTS

Please check that all items are present and in good condition:

- WONNIE Portable DVD Player W-1538
- AC Power Adapter
- Car Power Adapter
- AV Cable
- Remote Control
- User Manual (this document)

4. PRODUCT OVERVIEW

Familiarize yourself with the main components and ports of your portable DVD player.



Image: Side view of the WONNIE W-1538 Portable DVD Player, highlighting the DC IN, AV IN, AV OUT, Headphone Jack, SD Card Slot, and USB Port.

Controls and Ports:

- **DC IN:** Connect the AC or car power adapter for power and charging.
- **AV IN:** Connect external video sources (e.g., camcorder) using the AV cable.
- **AV OUT:** Connect to a TV or projector to display content on a larger screen.
- **Headphone Jack:** For private listening.
- **SD Card Slot:** Insert an SD card for media playback.
- **USB Port:** Connect a USB drive for media playback.
- **Power Switch:** Turns the device on or off.
- **Control Buttons:** Play/Pause, Stop, Fast Forward, Rewind, Menu, Volume, etc. (located on the player and remote control).

5. SETUP

5.1 Charging the Battery

The device has a built-in 5000mAh rechargeable lithium-ion battery. For first-time use, fully charge the battery.

1. Connect the AC power adapter to the DC IN port on the player.
2. Plug the AC adapter into a wall outlet. The charging indicator will illuminate.
3. A full charge provides approximately 6 hours of continuous playback.

Alternatively, use the car power adapter to charge the device via your vehicle's cigarette lighter socket.

15.4"



迫力の高画質大画面

映像だけでなくメニューや字幕まで見やすい

Image: The WONNIE W-1538 Portable DVD Player being used in a car, with illustrations of AC adapter, car adapter, and battery life indicator.

5.2 Initial Power On

After charging, slide the Power Switch to the 'ON' position. The screen will light up, and the main menu will appear.

6. OPERATING INSTRUCTIONS

6.1 Disc Playback (DVD/CD)

1. Open the disc cover gently.
2. Place a DVD or CD onto the disc spindle with the label side facing up.
3. Close the disc cover. The player will automatically detect and begin playback.
4. Use the Play/Pause, Stop, Fast Forward, Rewind, and Volume buttons on the player or remote control to manage playback.

Supported Disc Formats: DVD, CD-R (RW), DVD-R (+R), DVD-RW (+RW), CVD (SVCD), VCD (DVCD), CD. **Note: Blu-ray discs are NOT supported.**

This player is region-free and supports CPRM technology, allowing playback of DVDs from various regions and recorded digital broadcasts.

便利な3電源対応

どこでも利用できる



3電源対応



Image: The WONNIE W-1538 Portable DVD Player showing a world map on its screen, illustrating its region-free capability and support for multiple media formats.

6.2 USB/SD Card Playback

1. Insert a USB drive into the USB port or an SD card into the SD card slot.
2. The player will typically prompt you to select the media source. If not, navigate to the 'Media' or 'Source' menu option.
3. Browse your files and select the video, image, or music file you wish to play.

Supported File Formats: VOB, AVI, MPEG1, MPEG2, XVID (Video); MP3 (Audio); JPG, JPEG (Image).

6.3 Resume Function

The player features a resume function. If the device is powered off during disc or media playback, it will automatically resume from the last played position when powered on again.

6.4 AV Input/Output

AV Input: Connect an external video source (e.g., camcorder, game console) to the AV IN port using the provided AV cable. Select 'AV IN' as the source from the player's menu.

AV Output: Connect the AV OUT port to a TV or projector using the AV cable to enjoy content on a larger display. The player's screen will mirror the output.



Image: The WONNIE W-1538 Portable DVD Player connected to a large television screen, demonstrating its AV output capability for dual display.

6.5 Screen Rotation

The LCD screen can rotate 270 degrees and fold flat, allowing for various viewing angles and compact storage. This feature is ideal for mounting in a car or for comfortable personal viewing.

耐久性があるダブルスピーカー

音量をより大きく、よりクリアに



Image: A child and an adult watching the WONNIE W-1538 Portable DVD Player, with smaller images demonstrating the screen's 90-degree and 180-degree rotation capabilities.

6.6 Picture Settings

If the image quality appears poor, you can adjust the display settings:

1. Go to 'System Settings' ().
2. Select 'Display Settings' ().

3. Choose 'Panel Quality' ().
4. Adjust parameters such as sharpness, brightness, saturation, and hue to your preference.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the player. For the screen, use a specialized screen cleaning cloth and solution if necessary. Do not use abrasive cleaners or solvents.
- **Disc Care:** Handle discs by their edges. Keep them clean and free of scratches. Store discs in their cases when not in use.
- **Storage:** When not in use for extended periods, store the player in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery:** To prolong battery life, avoid fully discharging the battery frequently. Charge it regularly, even if not in use.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Player does not power on.	Battery is depleted or power adapter is not connected properly.	Connect the AC or car adapter and ensure it's plugged in correctly. Charge the battery.
No disc playback.	Disc is dirty, scratched, or inserted incorrectly. Unsupported disc format.	Clean the disc, reinsert it correctly. Check if the disc format is supported (Blu-ray is not supported).
No USB/SD card playback.	USB drive/SD card is not inserted correctly or contains unsupported file formats.	Ensure the USB drive/SD card is fully inserted. Check if file formats are supported (VOB, AVI, MPEG1, MPEG2, XVID, MP3, JPG, JPEG).
Poor image quality.	Display settings are not optimized.	Adjust sharpness, brightness, saturation, and hue in 'System Settings' -> 'Display Settings' -> 'Panel Quality'.
Player freezes or fails to play after prolonged use.	System overload or temporary software issue.	Reset to factory settings: 'System Settings' -> 'Other Settings' -> 'Initialize Settings'.
No sound or low volume.	Volume is too low, or external speakers/headphones are not connected properly.	Increase volume. Check headphone or external speaker connections.

9. SPECIFICATIONS

Feature	Detail
Brand	WONNIE
Model Number	W-1538
Screen Size	15.4 inches
Display Type	LED LCD
Resolution	1280 x 800

Feature	Detail
Battery Capacity	5000mAh
Continuous Playback	Up to 6 hours
Disc Formats Supported	DVD, CD-R (RW), DVD-R (+R), DVD-RW (+RW), CVD (SVCD), VCD (DVCD), CD (Blu-ray not supported)
Media/File Formats Supported	Video: VOB, AVI, MPEG1, MPEG2, XVID; Audio: MP3; Image: JPG, JPEG
Connectivity	AV Input, AV Output, USB, SD Card Slot, Headphone Jack
Power Source	AC Adapter, Car Adapter, Built-in Lithium-ion Battery
Dimensions (L x W x H)	38 cm x 27 cm x 4.5 cm
Special Features	270° Screen Rotation, Region-Free, CPRM Support, Resume Function, Dual Speakers
Country of Origin	China

10. WARRANTY AND SUPPORT

This WONNIE Portable DVD Player W-1538 comes with a **36-month manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

The warranty does not cover:

- Damage caused by accident, abuse, misuse, flood, fire, earthquake, or other external causes.
- Damage caused by operating the product outside the permitted or intended uses described in this manual.
- Damage caused by service performed by anyone who is not an authorized service provider of WONNIE.

For warranty claims or technical support, please contact WONNIE customer service through the retailer where you purchased the product or visit the official WONNIE website for contact information.

© 2026 WONNIE. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question