

Inscabin D4

Inscabin D4 Internet Radio User Manual

Model: D4

1. INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Inscabin D4 Internet Radio. Please read this manual thoroughly before using the device to ensure proper functionality and to prevent damage.

2. SAFETY INFORMATION

- Do not expose the device to rain or moisture.
- Do not disassemble the unit. Refer all servicing to qualified personnel.
- Ensure proper ventilation around the device.
- Use only the power adapter supplied with the unit.
- Avoid placing the device near heat sources or in direct sunlight.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Inscabin D4 Internet Radio Unit
- Power Adapter
- Remote Control
- User Manual (this document)



Image 3.1: Contents of the Inscabin D4 Internet Radio package, including the radio unit, power adapter, remote control, and user manual.

4. PRODUCT OVERVIEW

The Inscabin D4 is a versatile internet radio featuring Bluetooth connectivity, Spotify Connect, dual alarm clock functionality, and app control, all displayed on a full-color screen.



Image 4.1: Front view of the Inscabin D4 Internet Radio, showcasing the color screen, control buttons, and dual speakers.

4.1 Key Features

- Access to over 25,000 internet radio stations worldwide.
- Bluetooth for wireless audio streaming from smartphones or tablets.
- Spotify Connect for direct music streaming.
- Dual alarm clock functionality.
- Full-color TFT screen displaying program information, album artwork, and weather.
- App control for convenient operation.
- Mains or battery power operation for portability.

5. SETUP

5.1 Initial Power-On

1. Connect the power adapter to the DC IN port on the back of the radio.
2. Plug the power adapter into a wall outlet.
3. Press the **Power/Standby** button to turn on the radio.
4. The display will light up, and the initial setup wizard will appear.

5.2 Network Connection

The Inscabin D4 requires an internet connection to access internet radio stations and Spotify Connect features.

1. During the initial setup, select your preferred language.
2. The radio will scan for available Wi-Fi networks. Select your network from the list.
3. Enter your Wi-Fi password using the navigation buttons and the **OK** button.
4. Once connected, the Wi-Fi icon will appear on the display.
5. If connection issues occur, ensure the radio is within range of your Wi-Fi router.

6. OPERATING INSTRUCTIONS

6.1 Internet Radio

- From the main menu, select "Internet Radio".
- Browse stations by location, genre, or search for specific stations.
- Use the navigation buttons to select a station and press **OK** to start playback.
- Adjust volume using the dedicated volume knob or buttons.

6.2 Bluetooth Streaming

- Select "Bluetooth" from the main menu.
- The radio will enter pairing mode, indicated on the screen.
- On your smartphone or tablet, enable Bluetooth and search for "Inscabin D4".
- Select the radio to pair. Once connected, you can stream audio from your device.

6.3 Spotify Connect

- Ensure your Inscabin D4 is connected to the same Wi-Fi network as your smartphone or tablet running the Spotify app.
- Open the Spotify app on your device and play a song.

- Tap the "Devices Available" icon (usually a speaker or computer icon) at the bottom of the Spotify app.
- Select "Inscabin D4" from the list of available devices to stream music directly to your radio.

6.4 Dual Alarm Clock

- Access the "Alarm" settings from the main menu.
- Configure Alarm 1 and Alarm 2 independently, setting time, source (buzzer, internet radio), and recurrence.
- Ensure the radio is in standby mode for alarms to activate.

6.5 App Control

The Inscabin D4 can be controlled via a smartphone app (e.g., AirMusic or similar, as suggested by reviews). Refer to the radio's settings menu for a QR code or specific app name.

- Download the recommended control app from your device's app store.
- Ensure your smartphone and the radio are on the same Wi-Fi network.
- Open the app and follow the on-screen instructions to connect to your Inscabin D4.
- The app allows for remote control of functions such as station selection, volume, and mode switching.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the radio. Do not use abrasive cleaners or solvents.
- **Storage:** If storing the device for an extended period, disconnect it from the power source and store it in a cool, dry place.
- **Software Updates:** Periodically check for software updates through the radio's system settings to ensure optimal performance and access to new features.

8. TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|--|---|---|
| No power | Power adapter not connected; power outlet faulty. | Ensure power adapter is securely connected and the outlet is functional. |
| Cannot connect to Wi-Fi | Incorrect password; out of range; network issue. | Verify password; move radio closer to router; restart router. |
| Internet radio buffering/disconnecting | Weak Wi-Fi signal; internet connection instability. | Improve Wi-Fi signal strength; check internet service provider. |
| Bluetooth pairing failure | Device not in pairing mode; radio not discoverable. | Ensure radio is in Bluetooth mode and discoverable; restart both devices. |
| Display not working | Brightness set too low; device malfunction. | Adjust display brightness in settings; power cycle the device. |

9. SPECIFICATIONS



Image 9.1: Dimensions of the Inscabin D4 Internet Radio, showing length, width, and height measurements.

- **Model:** D4
- **Item Model Number:** 054114379934
- **Connectivity:** Bluetooth, WLAN (Wi-Fi)
- **Tuner Technology:** Internet Radio, FM Radio
- **Power Source:** Mains (AC Adapter), Battery Powered
- **Material Type:** Crystal (likely referring to display or finish)
- **Signal Format:** Digital
- **Compatible Devices:** Tablet (for app control/streaming)
- **Package Dimensions:** 33.2 x 19.8 x 14.5 cm
- **Item Weight:** 1.74 kg

10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included in your product packaging or visit the official Inscabin website. Keep your proof of purchase for warranty claims.

Online Support: www.inscabin.com