

[manuals.plus](#) /› [TERIOS](#) /› [TERIOS Wireless Controller User Manual](#)

TERIOS B08L7T1VC7

TERIOS Wireless Controller User Manual

Model: B08L7T1VC7 | Brand: TERIOS

1. SETUP GUIDE

1.1 Initial Connection

To connect your TERIOS Wireless Controller to your PlayStation 4 system for the first time, follow these steps:

1. Turn on your PlayStation 4 system.
2. Connect the TERIOS controller to the PS4 system using the provided USB cable.
3. Press the **Home button** (PS button) on the controller.
4. Once the controller's light bar starts flashing, indicating it is connecting to the console, you can remove the USB cable. The controller is now paired and can be used wirelessly.

For subsequent use, simply press the **Home button** to turn on your controller, and it will automatically reconnect to the system.



Figure 1: TERIOS Wireless Controller, showing its main buttons and ergonomic design.

1.2 Charging the Controller

The controller is equipped with a 1000mAh lithium-ion battery for extended playtime. To charge the controller:

1. Connect the provided USB cable to the charging port on the controller.
2. Connect the other end of the USB cable to a USB port on your PlayStation 4 system or a compatible USB wall adapter.
3. The controller's light bar will indicate charging status. A full charge typically takes 2-3 hours.

A fully charged controller provides approximately 12-14 hours of continuous use.



Figure 2: Visual representation of the controller's 1000mAh battery and estimated continuous use time.

2. OPERATING INSTRUCTIONS

2.1 Basic Controls

The TERIOS Wireless Controller features a familiar layout for intuitive gameplay, including:

- **Dual Analog Sticks:** For precise movement and camera control.
- **Directional Pad (D-pad):** For menu navigation and specific in-game actions.
- **Action Buttons (X, Circle, Square, Triangle):** For primary in-game interactions.
- **Shoulder Buttons (L1, R1) and Trigger Buttons (L2, R2):** For various actions like aiming, shooting, or using items.
- **SHARE Button:** To share screenshots and video clips.

- **OPTIONS Button:** To access in-game menus and options.
- **Touch Pad:** A multi-touch pad that extends gaming possibilities.
- **Built-in Speaker:** Enhances immersion with sound effects directly from the controller.
- **3.5mm Stereo Headset Jack:** For connecting headphones or a headset.



Figure 3: Overview of the controller's features including built-in speaker, touch pad, wireless capability, vibration, turbo, and battery.

2.2 Advanced Features

2.2.1 Turbo Function

The Turbo feature allows for rapid, continuous input of a button press by simply holding it down. This can be useful in games requiring fast button mashing.

- To assign Turbo: Hold the **TURBO button** and then press the desired action button (A, B, X, Y, L1, L2, R1, R2). Release both buttons. Now, holding the assigned button will activate Turbo fire.
- To clear all Turbo settings: Press the **CLEAR button**.

Note: The Turbo feature has only one speed and cannot be adjusted.



Figure 4: Illustration of the Turbo function, enabling rapid fire with a single button press.

2.2.2 Advanced Buttons Programming (Mappable Buttons)

The controller features mappable F1/F2 buttons on the back, allowing you to assign any single input key to them for quick access during gameplay. These buttons are designed to require some force to prevent accidental presses.



Figure 5: Depiction of the mappable advanced buttons (M1/M2) on the rear of the controller and its ergonomic design.

2.2.3 Audio Features and Setup

The controller includes a 3.5mm stereo headset jack for audio output and microphone input. To ensure proper headset functionality on your PS4 system:

1. Plug your headphone cable into the 3.5mm jack on the controller.
2. On your PS4 system, go to **Settings**.
3. Select **Devices**.
4. Select **Audio Devices**.
5. Under **Output to Headphones**, select **All Audio** to ensure all game and chat audio is routed to your headset.
6. Adjust the **Volume Control (Headphones)** using the D-pad.
7. Adjust the **Microphone Level** by speaking into your microphone and setting the input volume to the 'Good' range.

Video 1: A guide on how to adjust headset and microphone settings on the PS4 system for the TERIOS controller.

3. MAINTENANCE AND CARE

3.1 Cleaning

To maintain the longevity and appearance of your controller:

- Wipe the controller regularly with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution, then wipe dry immediately.
- Avoid using harsh chemicals, abrasive cleaners, or solvents, as these can damage the controller's finish.

3.2 Storage

When not in use, store the controller in a cool, dry place away from direct sunlight, extreme temperatures, and excessive humidity. This helps prevent damage to internal components and preserves battery life.

4. TROUBLESHOOTING

4.1 Connection Issues

If your controller is not connecting or staying connected:

- Ensure the controller is fully charged.
- Verify the USB cable is securely connected to both the controller and the PS4 system.
- Try a different USB port on your PS4 system.
- If the controller was previously paired, try pressing the **Home button** to re-establish connection.
- If issues persist, try resetting the controller. Locate the small reset button on the back of the controller (often near the L2 shoulder button) and use a thin object (like a straightened paperclip) to press and hold it for 3-5 seconds. Then, attempt to re-pair the controller with the PS4 using the USB cable.

4.2 Audio Issues with Headset Jack

If you experience problems with audio through the headset jack (e.g., no sound, low volume, static):

- Ensure your headset is fully plugged into the controller's 3.5mm jack.
- Check the PS4 audio settings: Go to **Settings > Devices > Audio Devices**
- Confirm **Output to Headphones** is set to **All Audio**.
- Adjust the **Volume Control (Headphones)** to an audible level.
- If using a microphone, ensure the **Microphone Level** is adjusted correctly.
- Test with a different headset to rule out a headset-specific issue.

4.3 Turbo Function Not Working

If the Turbo function does not activate:

- Ensure you are holding the **TURBO button** simultaneously with the desired action button when assigning it.

- Confirm the button you are trying to assign Turbo to is one of the supported fire buttons (A, B, X, Y, L1, L2, R1, R2).
- If you have pressed the **CLEAR button**, all Turbo settings will be reset. Re-assign the Turbo function.

5. PRODUCT SPECIFICATIONS

Feature	Specification
Model Number	B08L7T1VC7
Compatibility	PS4, PS4 Pro, PS4 Slim
Connectivity	Wireless (Bluetooth 4.2), Wired (USB)
Battery Type	Lithium Polymer
Battery Capacity	1000 mAh
Charging Time	Approx. 2-3 hours
Continuous Use Time	Approx. 12-14 hours
Weight	12.3 ounces (approx. 348 grams)
Dimensions	6.73 x 4.84 x 2.64 inches
Special Features	Built-in Speaker, Touch Pad, Dual Vibration, Turbo Auto Fire, Advanced Buttons Programming

6. WARRANTY AND SUPPORT

6.1 Warranty Information

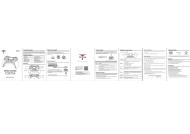
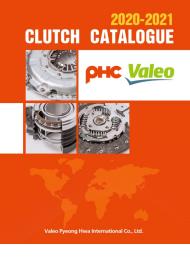
This product is typically covered by a 30-day return/replacement policy from the date of purchase. Please refer to your purchase documentation or contact the seller for specific warranty terms and conditions.

6.2 Customer Support

For further assistance, technical support, or inquiries regarding your TERIOS Wireless Controller, please contact TERIOS Official customer support. They aim to respond and assist within 24 hours.

You may also find additional information and support resources on the official TERIOS website or through the provided [User Manual \(PDF\)](#).

Related Documents - B08L7T1VC7

	<p><u>TERIOS P4-5SH Wireless Controller for PS4: User Manual and Features</u></p> <p>Comprehensive guide to the TERIOS P4-5SH wireless controller for PS4, featuring Hall Effect joysticks for no drift, built-in speaker, programmable buttons, and turbo function. Learn about setup, charging, operation, and troubleshooting.</p>
	<p><u>TERIOS P4-5S Wireless Controller for PS4: Quick Start Guide & Features</u></p> <p>Get started with your TERIOS P4-5S Wireless Controller for PS4. This guide covers product description, parameters, connection, charging, settings, turbo function, reset, package contents, and important precautions for PS4, PS4 Pro, and PS4 Slim.</p>
	<p><u>TERIOS T23 Wireless Controller for Nintendo Switch - Quick Start Guide</u></p> <p>Quick start guide for the TERIOS T23 Wireless Controller for Nintendo Switch. Learn how to connect, use turbo and vibration functions, program back buttons, and troubleshoot.</p>
	<p><u>Impocali Clutch Catalogue and Troubleshooting Guide</u></p> <p>Comprehensive clutch catalogue and troubleshooting manual for various automotive applications, featuring part numbers, vehicle compatibility, and diagnostic guidance from Impocali.</p>