



Manuals.plus /

› Tiptiper /

› Tiptiper Black Nightstand with Charging Station (Model B09VGXJCHM) Instruction Manual

## Tiptiper B09VGXJCHM

# Tiptiper Black Nightstand with Charging Station

MODEL: B09VGXJCHM

[Contents](#)   [Assembly](#)   [Introduction](#)   [Operation](#)   [Maintenance](#)   [Safety Information](#)   [Troubleshooting](#)   [Package](#)   [Specifications](#)   [Warranty & Support](#)

## 1. Introduction

---

This manual provides essential instructions for the assembly, operation, and maintenance of your Tiptiper Black Nightstand with Charging Station. Please read this guide thoroughly before assembly and use to ensure proper function and safety. Keep this manual for future reference.



Image 1.1: The Tiptiper Black Nightstand with Charging Station, featuring three drawers and an integrated charging unit on the top shelf.

## 2. Safety Information

---

### Important Safety Warnings:

- Always follow assembly instructions carefully.
- Do not exceed the maximum weight recommendation of 50 pounds (22.7 kg) on the tabletop.
- Keep fingers away from pinch points during assembly and when operating drawers.
- Ensure the charging station is properly connected to a suitable power outlet. Do not overload the electrical outlets.
- Avoid placing liquids directly on the charging station or near electrical components.

## 3. Package Contents

---

Please refer to the detailed parts list included in your product packaging to verify all components are present before beginning assembly. If any parts are missing or damaged, contact customer support immediately.

## 4 Assembly Instructions

## 4. Assembly Instructions

---

Assembly is required for this nightstand. Please follow the step-by-step installation manual provided in the product packaging. It is recommended to assemble the unit on a soft, clean surface to prevent scratches.

**Tools Recommended for Assembly:** Allen Key, Screwdriver.



Image 4.1: Product dimensions for assembly planning. The nightstand measures 13.8 inches deep, 17.7 inches wide, and 26.8 inches high.

Ensure all screws and fasteners are tightened securely, but do not overtighten to avoid damaging the wood material.

## 5. Operating Instructions

---

### 5.1. Charging Station

The nightstand features an integrated charging station for convenient power access. This unit includes:

- 2 Standard AC Plug Outlets (125V/12A)
- 2 USB Ports (5V/2.1A)
- 1 On/Off Switch for power control

To use, plug the nightstand's power cord into a wall outlet. Use the on/off switch to activate or deactivate the charging station. Connect your electronic devices to the AC outlets or USB ports as needed.



Image 5.1: Close-up view of the integrated charging station with two AC outlets, two USB ports, and a power switch.

Your browser does not support the video tag.

Video 5.1: Demonstration of the Tiptiper Nightstand with Charging Station, showcasing its features and functionality.

## 5.2. Storage Drawers

The nightstand is equipped with three sliding drawers for organized storage. These drawers are designed for smooth operation.

- The top drawer is suitable for frequently accessed items.
- The lower drawers provide additional space for personal belongings.



Image 5.2: Close-up of the smooth drawer slides, ensuring easy opening and closing.



Image 5.3: The nightstand with its three drawers open, illustrating the available storage space.

## 6. Maintenance

---

To maintain the appearance and longevity of your nightstand, follow these care instructions:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- **Spills:** Promptly clean up any spills to prevent staining or water damage.
- **Dusting:** Regularly dust with a dry, soft cloth.

- **Inspection:** Periodically check all fasteners and re-tighten if necessary to ensure stability.



Image 6.1: Demonstrating how to clean the nightstand surface with a soft cloth.

## 7. Troubleshooting

If you encounter any issues with your Tiptiper Nightstand, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Charging station not working	Power switch off, not plugged in, or overloaded.	Ensure the power switch is ON. Verify the nightstand is plugged into a live wall outlet. Reduce the number of devices connected if overloaded.
Drawers are stiff or do not slide smoothly	Misaligned slides, debris in tracks, or loose fasteners.	Check for any obstructions in the drawer tracks. Ensure all assembly fasteners for the drawer slides are tight. Realign drawers if necessary.
Nightstand feels wobbly	Loose assembly fasteners.	Carefully re-tighten all assembly screws and bolts. Ensure the nightstand is on a level surface.

## 8. Specifications

Feature	Detail
Brand	Tiptiper
Model	B09VGXJCHM
Product Dimensions (D x W x H)	13.8" x 17.7" x 26.8" (35.05 cm x 44.96 cm x 68.07 cm)
Maximum Weight Recommendation	50 Pounds (22.7 kg)
Color	Black
Material Type	Engineered Wood
Number of Drawers	3
Charging Station	2 AC Outlets, 2 USB Ports, On/Off Switch
Indoor/Outdoor Usage	Indoor

## 9. Warranty and Support

---

For warranty information or customer support, please refer to the documentation included with your purchase or contact Tiptiper customer service directly. Keep your purchase receipt as proof of purchase.