



[Manuals.plus](#) /

> [SZHKHXD](#) /

> Remote Control for Etec 32E800 40E750 40E700 32E700 32A66 32E40 48E700LC 32EF20 & Ario HC3269 FC4669 RM188 TV Television

SZHKHXD 32E800, 40E750, 40E700, 32E700, 32A66, 32E40, 48E700LC, 32EF20, HC3269, FC4669, RM188

Remote Control User Manual

For Etec and Ario TV Models

INTRODUCTION

This manual provides instructions for the SZHKHXD replacement remote control, compatible with various Etec and Ario TV models including 32E800, 40E750, 40E700, 32E700, 32A66, 32E40, 48E700LC, 32EF20, HC3269, FC4669, and RM188. This remote is designed as a direct functional replacement for your original TV remote.



Figure 1: Front view of the SZHKHXD replacement remote control, showing all buttons and layout.

SETUP

Battery Installation

The remote control requires 2 AAA batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Figure 2: Back view of the remote control with the battery cover removed, illustrating the battery compartment ready for AAA battery insertion.

Once batteries are installed, the remote is ready for use. No programming is typically required for this replacement remote.

OPERATING INSTRUCTIONS

This remote control is designed to function identically to your original TV remote. Simply point the remote at your television and press the desired button.

Key Functions Overview

- **Power Button (Red):** Turns the TV on or off.
- **Number Buttons (0-9):** Directly select channels.
- **VOL +/-:** Adjusts the volume up or down.
- **CH +/-:** Changes the channel up or down.
- **MUTE:** Mutes or unmutes the TV sound.
- **MENU:** Accesses the TV's main menu.
- **Navigation Buttons (Up, Down, Left, Right, ENTER):** Navigate through menus and confirm selections.
- **EXIT:** Exits the current menu or screen.
- **INPUT/SOURCE:** Changes the input source (HDMI, AV, etc.).
- **DISPLAY:** Shows current channel information.
- **GUIDE:** Opens the electronic program guide (if supported by TV).

- **LAST:** Returns to the previously viewed channel.
- **ASPECT:** Adjusts the screen aspect ratio.
- **SLEEP:** Sets a sleep timer.
- **PICTURE:** Accesses picture settings.
- **AUDIO/MTS:** Adjusts audio settings or selects Multi-channel Television Sound.

For specific advanced functions, please refer to your television's original user manual.

MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the remote. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it stops working. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops:** Protect the remote from physical impact. Dropping it can damage internal components.
- **Liquid Exposure:** Keep the remote away from liquids. If it gets wet, remove batteries immediately and allow it to dry completely before reinserting them.

TROUBLESHOOTING

If you experience issues with your remote control, try the following troubleshooting steps:

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA batteries.
 - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
 - Make sure you are within the effective range of the TV's IR sensor.
- **Specific Buttons Not Working:**
 - Clean the button area with a soft, dry cloth to remove any debris that might be preventing proper contact.
 - If only a few buttons are unresponsive after battery replacement, the remote might be faulty and require replacement.
- **Interference:**
 - Bright lights, especially fluorescent lights, can sometimes interfere with IR signals. Try using the remote in different lighting conditions.
 - Other electronic devices emitting IR signals might cause interference.

If the issue persists after trying these steps, please contact the seller or manufacturer for further assistance.

SPECIFICATIONS

| Feature | Detail |
|---------|--------|
|---------|--------|

| Feature | Detail |
|--|--|
| Model Compatibility | Etec 32E800, 40E750, 40E700, 32E700, 32A66, 32E40, 48E700LC, 32EF20 & Ario HC3269, FC4669, RM188 TV Television |
| Connectivity Technology | Infrared (IR) |
| Controller Type | Button Control |
| Power Source | 2 x AAA Batteries (not included) |
| Max Number of Supported Devices | 1 (Television) |
| Special Feature | Ergonomic Design |
| Manufacturer | SZHKHXD |
| Country of Origin | China |

WARRANTY AND SUPPORT

This product is a replacement remote control. For specific warranty information, please refer to the terms provided by the seller, SZHKHXD, at the time of purchase. Typically, replacement parts may come with a limited warranty against manufacturing defects.

For technical support or inquiries regarding your remote control, please contact the seller directly through the platform where the purchase was made. Ensure you have your order details ready for faster assistance.



© 2024 SZHKHXD. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.