

Select Sound BT-1005

Select Sound BT-1005 Portable Bluetooth Speaker User Manual

Model: BT-1005

1. INTRODUCTION

Thank you for choosing the Select Sound BT-1005 Portable Bluetooth Speaker. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.

2. SAFETY INFORMATION

- Do not expose the speaker to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not disassemble or attempt to repair the speaker yourself. This will void the warranty.
- Keep the speaker away from water and other liquids.
- Use only the provided charging cable or a certified equivalent.
- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners.

3. PACKAGE CONTENTS

Please check the package for the following items:

- Select Sound BT-1005 Portable Bluetooth Speaker
- USB Charging Cable
- Auxiliary Audio Cable
- Remote Control
- User Manual (this document)

4. PRODUCT OVERVIEW

Familiarize yourself with the speaker's components and controls.



Figure 4.1: Front view of the Select Sound BT-1005 Portable Bluetooth Speaker, showing the main unit and included remote control.



Figure 4.2: Top view of the Select Sound BT-1005 speaker, highlighting the control panel and handle, as held by a user.

Control Panel (Top)

- **MIC Input:** For connecting an external microphone.
- **AUX Input:** For connecting external audio devices via a 3.5mm audio cable.

- **TF CARD Slot:** For playing music from a MicroSD/TF card.
- **USB Port:** For playing music from a USB flash drive.
- **DC 5V:** Charging port.
- **ON/OFF Switch:** Powers the speaker on or off.
- **Mode Button (M):** Switches between Bluetooth, AUX, USB, and TF Card modes.
- **Play/Pause Button:** Plays or pauses audio.
- **Previous/Volume Down Button (-VOL):** Short press for previous track, long press to decrease volume.
- **Next/Volume Up Button (+VOL):** Short press for next track, long press to increase volume.
- **LED Indicator:** Shows charging status and mode.

5. SETUP

5.1 Charging the Speaker

1. Connect the USB charging cable to the DC 5V port on the speaker.
2. Connect the other end of the USB cable to a USB power adapter (not included) or a computer's USB port.
3. The LED indicator will illuminate during charging and turn off when fully charged.
4. A full charge typically takes approximately 3-4 hours.

5.2 Powering On/Off

Slide the ON/OFF switch to the 'ON' position to power on the speaker. Slide it to the 'OFF' position to power off.

6. OPERATING INSTRUCTIONS

6.1 Bluetooth Mode

1. Power on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing LED.
2. On your smartphone, tablet, or laptop, enable Bluetooth and search for available devices.
3. Select "BT-1005" from the list of devices.
4. Once paired, the speaker will emit a confirmation sound, and the LED will stop flashing.
5. You can now play audio from your connected device through the speaker.

6.2 AUX Mode

1. Connect one end of the 3.5mm auxiliary audio cable to the AUX input on the speaker.
2. Connect the other end to the audio output jack of your external device (e.g., MP3 player, computer).
3. Press the Mode button (M) until the speaker enters AUX mode.
4. Control playback and volume from your connected device.

6.3 USB/TF Card Mode

1. Insert a USB flash drive into the USB port or a TF card into the TF CARD slot.
2. The speaker will automatically detect the storage device and begin playing audio files. If not, press the

Mode button (M) to switch to the correct mode.

3. Use the Play/Pause, Previous, and Next buttons on the speaker or remote control to manage playback.

6.4 Using the Remote Control

The included remote control allows for convenient operation from a distance. Functions include:

- Power On/Off
- Mode Selection
- Volume Up/Down
- Play/Pause
- Previous/Next Track
- Mute

7. MAINTENANCE

7.1 Cleaning

Wipe the speaker's exterior with a soft, dry, lint-free cloth. Do not use liquid cleaners, aerosols, or solvents.

7.2 Storage

When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures. It is recommended to fully charge the battery every 3 months to maintain battery health.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Charge the speaker for at least 30 minutes.
Cannot pair via Bluetooth.	Speaker is not in pairing mode or too far from device.	Ensure speaker is in Bluetooth mode (flashing LED). Move device closer to speaker. Forget "BT-1005" on your device and try pairing again.
No sound.	Volume too low, incorrect mode, or faulty cable.	Increase volume on both speaker and connected device. Ensure correct mode is selected. Check AUX cable connection if applicable.
USB/TF card not playing.	Unsupported file format, card/drive not inserted correctly.	Ensure audio files are in a supported format (e.g., MP3). Reinsert the USB drive or TF card. Press Mode button to select correct input.

9. SPECIFICATIONS

- **Brand:** Select Sound
- **Model:** BT-1005
- **Compatible Devices:** Smartphone, Tablet, Laptop

- **Special Features:** Bluetooth
- **Audio Output Mode:** Surround Sound
- **Speaker Amplification Type:** Active
- **Power Source:** Battery
- **Average Battery Life:** 5 Hours
- **Connector Type:** Auxiliary, Bluetooth, USB
- **Mounting Type:** Tabletop Mount
- **Bluetooth Technology:** Supported
- **Dimensions:** 39.1 x 25.7 x 17.4 cm
- **Weight:** 1.56 kg

10. WARRANTY AND SUPPORT

This product comes with a limited manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, troubleshooting assistance, or warranty claims, please contact Select Sound customer service through their official website or the retailer where the product was purchased.

Please note: Specifications and product appearance are subject to change without prior notice.