

[Manuals.plus](#) /

› [FUNAI](#) /

› Funai DVD/VCR Combo Player Instruction Manual

FUNAI DVD/VCR Combo

Funai DVD/VCR Combo Player Instruction Manual

Model: DVD/VCR Combo | Brand: FUNAI

[Introduction](#)

[Setup](#)

[Operating Instructions](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Funai DVD/VCR Combo player. This versatile unit allows you to enjoy both DVD discs and VHS tapes. Please read this manual thoroughly before using the product to ensure proper function and longevity.



Figure 1: Front view of the Funai DVD/VCR Combo Player.

2. SETUP

2.1 Unpacking

Carefully remove the DVD/VCR Combo player from its packaging. Ensure all accessories, including the remote control and necessary cables, are present. Retain the packaging for future transport or storage.

2.2 Connecting to Your Television

The Funai DVD/VCR Combo player offers multiple connectivity options to your television. Choose the connection type that best suits your TV's available ports for optimal performance.

- **Composite Video Connection:** Use the yellow (video), red (right audio), and white (left audio) RCA cables. Connect these to the corresponding input jacks on your television.
- **Component Video Connection:** For improved picture quality, use component video cables (red, green, blue for video) along with red and white RCA cables for audio. Connect these to the matching input jacks on your television.

- **HDMI Connection:** If your unit supports HDMI (check specifications), use an HDMI cable to connect the player's HDMI output to an HDMI input on your TV. This provides the best audio and video quality with a single cable.

After connecting the cables, select the appropriate input source on your television (e.g., AV1, Component, HDMI1) to view the player's output.

2.3 Powering On

Plug the power cord into an electrical outlet. Press the **POWER** button on the front panel of the unit or on the remote control to turn on the player.

3. OPERATING INSTRUCTIONS

3.1 Playing a DVD

1. Ensure the unit is powered on and your TV is set to the correct input source.
2. Press the **DVD** button on the front panel or remote to select DVD mode.
3. Press the **OPEN/CLOSE** button to open the disc tray.
4. Place a DVD disc onto the tray with the label side facing up.
5. Press the **OPEN/CLOSE** button again to close the disc tray. The disc will load, and playback should begin automatically. If not, press the **PLAY** button.

3.2 Playing a VHS Tape

1. Ensure the unit is powered on and your TV is set to the correct input source.
2. Press the **VCR** button on the front panel or remote to select VCR mode.
3. Insert a VHS tape into the VCR slot. The unit will automatically load the tape.
4. Playback should begin automatically. If not, press the **PLAY** button.
5. Use the **REW** (Rewind) and **FFWD** (Fast Forward) buttons for navigation.

3.3 Recording on VHS (if applicable)

This unit features a 4-head VCR with recording capabilities. To record, ensure a blank VHS tape is inserted and the unit is in VCR mode.

1. Select the desired input source for recording (e.g., TV channel, external device connected to A/V inputs).
2. Press the **REC** button on the front panel or remote control. The recording will begin.
3. To stop recording, press the **STOP** button.

3.4 Front Panel Controls

The front panel provides essential controls for both DVD and VCR functions:

- **POWER:** Turns the unit on or off.
- **DVD/VCR Selector:** Switches between DVD and VCR modes.
- **OPEN/CLOSE (DVD):** Opens and closes the DVD disc tray.
- **PLAY:** Starts playback.
- **STOP:** Stops playback or recording.
- **PAUSE:** Pauses playback.
- **REW/FFWD:** Rewinds or fast forwards tapes/discs.
- **REC (VCR):** Initiates recording on a VHS tape.
- **TRACKING (VCR):** Adjusts picture quality during VHS playback.
- **A/V Inputs:** Front-panel audio/video input jacks for connecting external devices.

4. MAINTENANCE

4.1 Cleaning the Unit

- Wipe the exterior of the unit with a soft, dry cloth. Do not use liquid or aerosol cleaners.
- For DVD lens cleaning, use a specialized DVD lens cleaning disc.
- For VCR head cleaning, use a dry-type VCR head cleaning tape sparingly. Excessive use can damage the VCR heads.

4.2 General Care

- Avoid placing the unit in direct sunlight or near heat sources.
- Ensure adequate ventilation around the unit to prevent overheating.
- Do not block ventilation openings.
- Keep the unit away from moisture and dust.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord unplugged.	Check power cord connection to outlet and unit.
No picture/sound	Incorrect TV input selected; A/V cables loose or incorrectly connected.	Select correct TV input (e.g., AV1, HDMI); Check all cable connections.
Disc/Tape not playing	Disc/tape inserted incorrectly; Disc/tape is dirty or damaged.	Ensure disc/tape is inserted correctly; Clean disc/tape; Try another disc/tape.
Remote control not working	Batteries are dead or inserted incorrectly; Obstruction between remote and unit.	Replace batteries; Ensure clear line of sight to the unit's sensor.

6. SPECIFICATIONS

Brand: FUNAI

Model Name: DVD/VCR Combo

Item Weight: 8.94 pounds

Product Dimensions: 21 x 13.4 x 6.9 inches

Color: Black

Special Features: Recording, Still frame & slow motion

Media Type: CD, DVD, VHS

VCR Type: 4-head VCR

Audio Output Mode: Stereo, Dolby Digital stream out

Supported Audio Format: Stereo

Connector Types: HDMI, Composite Video, Component Video

Connectivity Technology: HDMI, composite video, component video

7. WARRANTY & SUPPORT

This Funai DVD/VCR Combo player is a renewed product. Renewed products are eligible for replacement or refund under the Amazon Renewed Guarantee if you are not satisfied with your purchase. For specific details regarding the Amazon Renewed Guarantee, please refer to the Amazon Renewed Store or your purchase documentation.

For further assistance or technical support, please contact the seller or Amazon customer service.