

[Manuals.plus](#) /

> [Beautiful](#) /

> Beautiful 1.7L One-Touch Electric Kettle User Manual

Beautiful 19016

Beautiful 1.7L One-Touch Electric Kettle User Manual

Model: 19016 | Brand: Beautiful



Front view of the Beautiful 1.7L One-Touch Electric Kettle in Black Sesame color, showcasing its sleek design and digital display.

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Beautiful 1.7L One-Touch Electric Kettle. Designed for ease of use, this kettle features a touch-activated display and preset temperature programs for various tea types. Please read this manual thoroughly before first use and retain it for future reference.

IMPORTANT SAFETY INFORMATION

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or electric kettle in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Extreme caution must be used when moving an appliance containing hot water.
- The kettle is only to be used with the stand provided.

PARTS AND FEATURES

Familiarize yourself with the components of your Beautiful Electric Kettle:

- Kettle Body (Double wall stainless steel)
- Lid
- Spout
- Handle
- Touch-Activated Display (illuminates when active)
- Power Base (360° rotational)
- Power Cord



Diagram showing key features of the kettle, including the 7-cup capacity, touch-activated display, 60-minute keep warm setting, and 4 preset temperatures.

SETUP

1. Unpack the kettle and all accessories. Remove any packaging materials.
2. Place the power base on a dry, flat, stable, and heat-resistant surface.
3. Ensure the power cord is fully extended and not tangled.
4. Before first use, fill the kettle with water to the MAX fill line. Boil the water, then discard it. Repeat this process 2-3 times to clean the interior.

OPERATING INSTRUCTIONS

Follow these steps to operate your electric kettle:

1. **Fill the Kettle:** Open the lid and fill the kettle with the desired amount of fresh, cold water. Do not fill below the MIN mark or above the MAX mark. The kettle can boil up to 7 cups of water.
2. **Place on Base:** Place the kettle securely onto the power base.
3. **Plug In:** Plug the power cord into a standard electrical outlet. The touch-activated display will illuminate.
4. **Select Temperature:**
 - Touch the desired preset temperature button on the display:
 - **White Tea:** 165°F (74°C)
 - **Green Tea:** 175°F (79°C)
 - **Oolong/Coffee:** 195°F (91°C)
 - **Black Tea/Boil:** 212°F (100°C)
 - Alternatively, use the + and - buttons to adjust the temperature to your specific preference.
5. **Start Boiling:** Press the power button () to begin the heating process. The display will show the current water temperature as it heats.
6. **Audible Indicator:** The kettle will beep when the water has reached the selected temperature.
7. **Keep Warm Function:** Press the "Warm" button to activate the 60-minute Keep Warm mode, which maintains the water temperature.
8. **Pouring:** Carefully lift the kettle from its base and pour the hot water.
9. **Auto Shut-Off:** The kettle features an automatic shut-off function once the water reaches the set temperature or if it boils dry, enhancing safety.



A hand demonstrating interaction with the touch-activated display of the kettle to select temperature settings.

CARE AND MAINTENANCE

Proper care ensures the longevity and performance of your kettle.

- **Cleaning:**

- Always unplug the kettle from the power outlet and allow it to cool completely before cleaning.
- Wipe the exterior of the kettle with a damp cloth. Do not use abrasive cleaners or scouring pads.
- The interior can be cleaned by hand. Do not immerse the kettle body or power base in water or any other liquid.

- **Descaling:** Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas.

- To descale, fill the kettle with a mixture of 1 part white vinegar to 2 parts water.
- Boil the mixture and let it stand for at least 30 minutes, or longer for heavy buildup.
- Empty the kettle and rinse thoroughly with fresh water several times.
- For stubborn deposits, a non-abrasive descaling solution designed for kettles can be used following the product's instructions.

- **Storage:** When not in use, store the kettle in a clean, dry place. You can wrap the cord around the base for neat storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle does not heat.	Not plugged in; power outlet not working; kettle not properly seated on base; boil-dry protection activated.	Ensure kettle is plugged in and outlet is functional. Re-seat kettle firmly on base. If boil-dry activated, allow to cool for 15 minutes before refilling.
Water takes too long to boil.	Limescale buildup; overfilled kettle.	Descal the kettle (see Maintenance section). Do not fill above the MAX line.

Problem	Possible Cause	Solution
Kettle leaks.	Overfilled kettle; lid not closed properly.	Do not fill above the MAX line. Ensure the lid is securely closed.
Display not illuminating.	Kettle not plugged in or not receiving power.	Check power connection and outlet.

SPECIFICATIONS

Model Name:	19016
Brand:	Beautiful
Capacity:	1.7 Liters (approx. 7 cups)
Power:	1500 Watts
Material:	Double wall stainless steel
Special Features:	Automatic Shut-Off, Boil Dry Protection, Temperature Control, 60-minute Keep Warm
Preset Temperatures:	165°F (White), 175°F (Green), 195°F (Oolong/Coffee), 212°F (Black/Boil)
Item Weight:	4.09 pounds
Package Dimensions:	13 x 9 x 9 inches
UPC:	829486190360

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the warranty card included with your purchase or visit the official Beautiful Kitchenware website. Keep your proof of purchase for warranty claims.

Manufacturer: Beautiful Kitchenware

