

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Soundcore](#) /
- › [Soundcore Anker Motion Boom Plus IP67 Outdoor Speaker User Manual](#)

Soundcore A3129

Soundcore Anker Motion Boom Plus IP67 Outdoor Speaker User Manual

Model: A3129

1. INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Soundcore Motion Boom Plus IP67 Outdoor Speaker. Please read this guide thoroughly before operating the device and retain it for future reference.



Image: The Soundcore Motion Boom Plus speaker, black, shown with its detachable shoulder strap attached, highlighting its portable design.

2. WHAT'S IN THE BOX

Verify that all items are present in the packaging:

- Soundcore Motion Boom Plus Speaker
- USB-C to USB-C Cable (60cm)
- Quick Start Guide (QSG)
- Safety Information Card
- Happy Card

3. CONTROLS AND INDICATORS

Familiarize yourself with the speaker's buttons and ports for optimal operation.

CUSTOMIZE FOR BEST SOUND



Image: A smartphone showing the Soundcore app's equalizer interface, positioned next to the Motion Boom Plus speaker, illustrating customization options.

Button Functions:

- **Power Button:** Press and hold to power on/off.
- **Bluetooth Button:** Press to enter Bluetooth pairing mode.
- **Volume Down (-):** Decrease volume.
- **Volume Up (+):** Increase volume.
- **Play/Pause Button:** Play/pause music, answer/end calls.
- **BassUp Button:** Activate/deactivate BassUp technology for intensified bass.
- **PartyCast Button:** Initiate PartyCast mode for multi-speaker synchronization.

Ports:

- **USB-C Port:** For charging the speaker.
- **USB-A Port:** For charging external devices (power bank function).
- **AUX Input (3.5mm):** For wired audio connection.

4. CHARGING YOUR SPEAKER

Before first use, fully charge the speaker to ensure optimal battery performance.

1. Connect the provided USB-C cable to the speaker's USB-C charging port and a compatible USB wall charger (not included).
2. The charging indicator will illuminate during charging and turn off when fully charged.
3. A full charge takes approximately 5.5 hours.

The speaker is equipped with a 13,400mAh battery, providing up to 20 hours of playtime on a single charge (actual performance may vary based on volume and audio content).

5. POWER ON/OFF

- **To Power On:** Press and hold the Power button for 2 seconds.
- **To Power Off:** Press and hold the Power button for 2 seconds.

6. BLUETOOTH PAIRING

Connect your Soundcore Motion Boom Plus to a Bluetooth-enabled device.

1. Power on the speaker. The Bluetooth indicator will flash blue, indicating it's ready for pairing.
2. On your device, enable Bluetooth and search for "Soundcore Motion Boom Plus".
3. Select the speaker from the list to connect. The Bluetooth indicator will turn solid blue when connected.
4. To pair with another device, press the Bluetooth button to re-enter pairing mode.

The speaker has a Bluetooth range of up to 10 meters (33 feet).

7. TRUE WIRELESS STEREO (TWS) PAIRING

Pair two Soundcore Motion Boom Plus speakers for a stereo sound experience.

1. Ensure both speakers are powered on.
2. On one speaker (the primary), press and hold the Bluetooth button for 2 seconds until the Bluetooth indicator flashes white.
3. On the second speaker (the secondary), press the Bluetooth button once.
4. The speakers will automatically connect. The Bluetooth indicator on both speakers will turn solid white when TWS is established.
5. Connect your device to the primary speaker via Bluetooth.

To exit TWS mode, press and hold the Bluetooth button on either speaker for 2 seconds.



Image: Multiple Soundcore speakers displayed together, illustrating the PartyCast feature for synchronized audio across several devices.

8. USING THE SOUNDCORE APP

Download the Soundcore app to enhance your listening experience with customizable EQ settings and firmware updates.

- **Customizable EQ:** Adjust treble, mids, and bass to your preference. The app offers various preset EQ modes and the ability to create custom profiles.
- **Firmware Updates:** Ensure your speaker has the latest features and performance improvements by regularly checking for and installing firmware updates through the app.

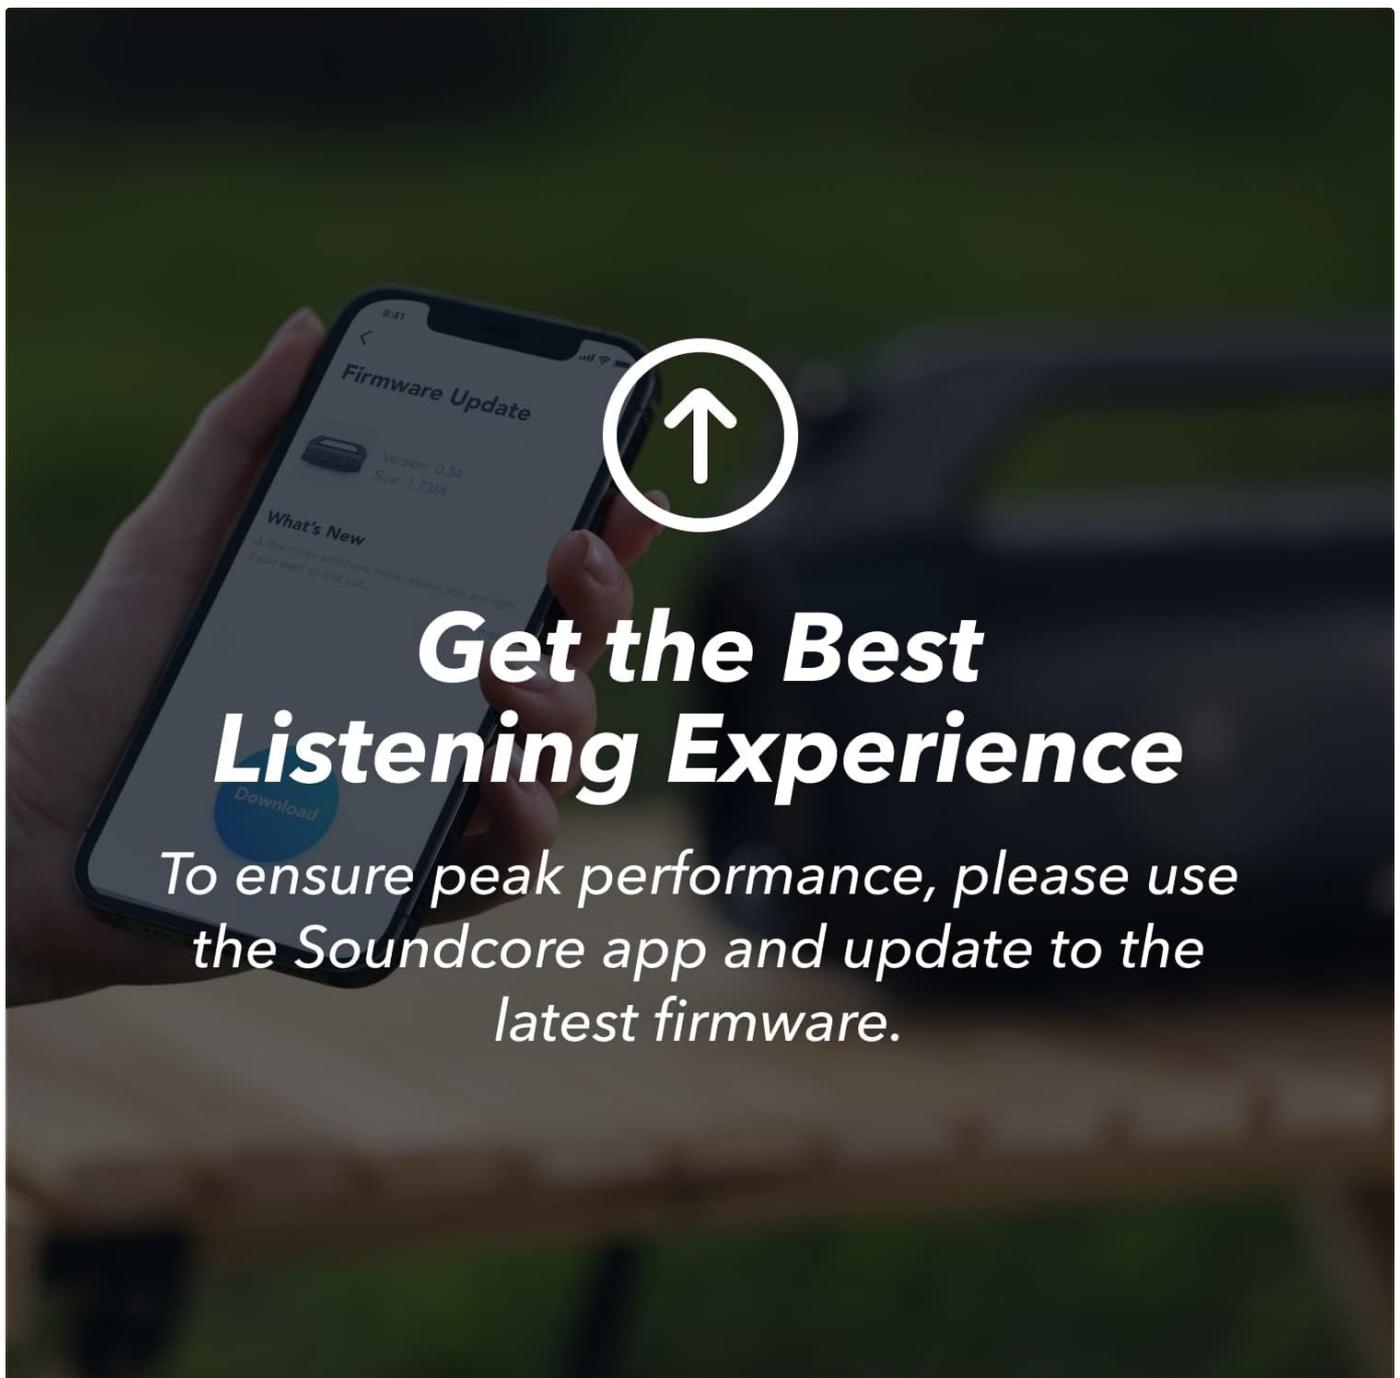


Image: A smartphone displaying a "Firmware Update" screen within the Soundcore app, prompting the user to download an update for the speaker.

9. AUX INPUT

Connect non-Bluetooth devices using a 3.5mm AUX cable (not included).

1. Connect one end of a 3.5mm AUX cable to the speaker's AUX input port.
2. Connect the other end to the audio output jack of your device.
3. The speaker will automatically switch to AUX mode.



Image: A detailed view of the rear panel of the Soundcore Motion Boom Plus speaker, highlighting the 3.5mm AUX input port for wired connections.

10. POWER BANK FUNCTIONALITY

The Motion Boom Plus can charge other devices using its built-in power bank feature.

1. Connect your device to the speaker's USB-A output port using a compatible charging cable (not included).
2. Charging will begin automatically.



Image: A person's hand holding a smartphone connected via a charging cable to the Soundcore Motion Boom Plus speaker, demonstrating its power bank capability.

11. WATER AND DUST RESISTANCE (IP67)

The Soundcore Motion Boom Plus is rated IP67, meaning it is protected against dust ingress and can withstand immersion in water up to 1 meter for 30 minutes.

- Ensure all port covers are securely closed before exposing the speaker to water or dust.
- Do not expose the speaker to saltwater or other chemicals. If exposed, rinse with fresh water and dry thoroughly.
- Avoid charging the speaker if it is wet.

FULLY WATERPROOF



Image: The Soundcore Motion Boom Plus speaker floating partially submerged in a body of water, demonstrating its IP67 waterproof rating.

12. MAINTENANCE AND CARE

- Clean the speaker with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Store the speaker in a cool, dry place when not in use.
- Avoid extreme temperatures and direct sunlight.
- Do not attempt to disassemble or repair the speaker yourself. Contact customer support for assistance.

13. TROUBLESHOOTING

Problem	Solution
Speaker does not power on.	Ensure the speaker is charged. Connect to a power source and try again.

Problem	Solution
Cannot pair with Bluetooth device.	<p>Ensure the speaker is in pairing mode (flashing blue indicator).</p> <p>Disable and re-enable Bluetooth on your device.</p> <p>Forget "Soundcore Motion Boom Plus" from your device's Bluetooth list and try pairing again.</p> <p>Move the speaker closer to your device.</p>
No sound or low volume.	<p>Increase volume on both the speaker and your connected device.</p> <p>Ensure the speaker is properly connected via Bluetooth or AUX.</p> <p>If using AUX, check the cable connection.</p>
Sound distortion.	<p>Reduce the volume on both the speaker and your device.</p> <p>Try a different audio source.</p> <p>Ensure there are no obstructions between the speaker and the Bluetooth device.</p>
Cannot charge external devices.	<p>Ensure the speaker has sufficient battery charge. Use a compatible USB-A cable.</p>

14. SPECIFICATIONS

Feature	Detail
Model Name	A3129
Speaker Type	Outdoor
Connectivity Technology	Bluetooth, Auxiliary
Wireless Communication Technology	Bluetooth
Bluetooth Range	10 Meters
Speaker Maximum Output Power	80 Watts
Audio Output Mode	Stereo
Frequency Response	20 KHz
Battery Capacity	13400 Milliamp Hours
Charging Time	5.5 Hours
Playtime	Up to 20 Hours
Water Resistance Level	Waterproof (IP67)
Product Dimensions	15.31"D x 5.51"W x 7.7"H
Item Weight	5.03 Pounds
Input Voltage	5 Volts
Manufacturer	Anker

15. SAFETY INFORMATION

- Do not drop, puncture, or disassemble the speaker.
- Keep away from extreme temperatures, direct sunlight, and open flames.
- Do not use the speaker in a thunderstorm.
- Use only original or certified cables for charging.
- Keep out of reach of children.



16. WARRANTY AND CUSTOMER SUPPORT

Soundcore provides a limited warranty for this product. For detailed warranty information and customer support, please refer to the official Soundcore website or the included safety information card.

You can also find the full User Manual in PDF format [here](#).

© 2024 Soundcore. All rights reserved.

Related Documents - A3129

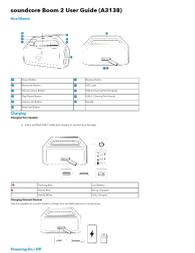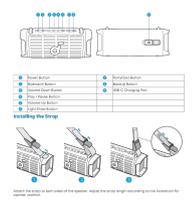	<p>Soundcore Motion Boom Plus Portable Bluetooth Speaker Quick Start Guide</p> <p>Get started with your Soundcore Motion Boom Plus (A3129) portable Bluetooth speaker. This guide covers charging, pairing, TWS setup, controls, and specifications.</p>
	<p>Soundcore Boom 2 User Guide and Specifications</p> <p>Comprehensive user guide for the Soundcore Boom 2 portable speaker, covering setup, features, controls, app integration, and technical specifications. Learn how to pair devices, use TWS and PartyCast modes, customize light effects, and optimize audio with EQ settings.</p>
	<p>Soundcore Motion Boom Plus Bluetooth Speaker User Manual</p> <p>User manual for the Soundcore Motion Boom Plus Bluetooth speaker, including safety information, declarations of conformity, and trademark details.</p>
	<p>Soundcore Boom 3i User Manual and Specifications</p> <p>Comprehensive guide to the Soundcore Boom 3i portable speaker, covering features like Bluetooth connectivity, TWS mode, PartyCast mode, light shows, emergency alarm, and app integration. Includes detailed specifications and compliance information.</p>

	<p>Soundcore Motion Boom Plus User Manual</p> <p>User manual for the Soundcore Motion Boom Plus portable Bluetooth speaker. Learn about charging, powering on/off, Bluetooth pairing, TWS mode, PartyCast mode, button controls, and app features.</p>
	<p>Soundcore Motion Boom Plus User Manual</p> <p>A comprehensive guide to the Soundcore Motion Boom Plus portable Bluetooth speaker, detailing its features, setup, operation, and specifications. Learn about its powerful 80W sound, 20-hour playtime, IP67 water resistance, TWS and PartyCast connectivity, and app integration for customized audio experiences.</p>

Documents - Soundcore – A3129



[\[pdf\]](#) User Manual Installation Guide Warranty Accessories

User manual Anker Innovations Limited A3129 2AOKB 2AOKBA3129 a3129

Anker Innovations Limited. All rights reserved. Soundcore and the Soundcore logo are trademarks of Anker Innovations Limited, registered in the United States and other countries. Model: **A3129** 51005003285 V01 Important Safety Information 1. Please read this user manual carefully and save it for f...

lang:en score:40 filesize: 3.07 M page_count: 40 document date: 2022-04-06



[Soundcore Motion Boom Plus Bluetooth Speaker User Manual](#)

User manual for the Soundcore Motion Boom Plus Bluetooth speaker, including safety information, declarations of conformity, and trademark details.

lang:en score:34 filesize: 2.87 M page_count: 40 document date: 2022-04-27


EU & UK Declaration of Conformity (EN)		Version:V1.0	
Name of the Manufacturer	Anker Innovations Limited		
Address of the Manufacturer	Unit 56, 8th Floor, Tower 2, Admiralty Centre, 18 Harcourt Road, Hong Kong		
EU Importer	Anker Innovations Deutschland GmbH, Georg-Mueller-Strasse 3, 80807 Munich, Germany		
UK Importer	Anker Technology (UK) Limited, QNR6, 49 Clevedon Road, Watford, Hertfordshire, WD17 1HP, United Kingdom		
Name of the Product	Soundcore Motion Boom Plus		
Trademark	soundcore		
Model No.	A3129		
We declare under our responsibility that the above referenced product complies with the following recognized directives and standards, applicable in part or in whole:			
Standards			
EN IEC 62368-1:2020/A11:2020			
ETSI EN 301 489-1 V2.2.3, ETSI EN 301 489-17 V2.2.4, EN 55032:2015/A1:2020, EN 55035:2017/A11:2020, EN IEC 61000-3-2:2019/A1:2021, EN 61000-3-3:2013/A2:2021			
ETSI EN 300 328 V2.2.2			
EN 62479:2010, EN 50663:2017			
EN 13631-1:2024			
Directives			
2014/53/EU, 2011/65/EU and amendment (EU)2015/863			
I represent and warrant that: (i) I am a designated person of the manufacturer; (ii) I am responsible for the regulatory compliance of the product (including with the requirements mentioned in Anker Innovations Limited and this Declaration of Conformity) and (iii) the information I have provided in support of the safety and effectiveness of the product to be true and accurate and do not contain any material omissions.			
Title:	Testing and Compliance Director	Function:	Product Certification Compliance
Name:	Louis Qi	Date:	2025-07-15
City:	Hongkong	Signature:	<i>Louis Qi</i>

[\[pdf\]](#) Declaration of Conformity

Shop Motion Boom Plus Outdoor Portable Speaker for NordicsA3129 Soundcore EU Declarationcdn shopify s files 1 0917 4807 3750 A3129 Declaration v 1753932965 |||

EU UK Declaration of Conformity EN Version:V1.0 Name of the Manufacturer Address of the Manufa ... arendon Road, Watford, Hertfordshire, WD17 1HP, United Kingdom Soundcore Motion Boom Plus soundcore **A3129** We declare under our responsibility that the above referenced product complies with the follo...

lang:en score:33 filesize: 306.07 K page_count: 25 document date: 2025-07-15

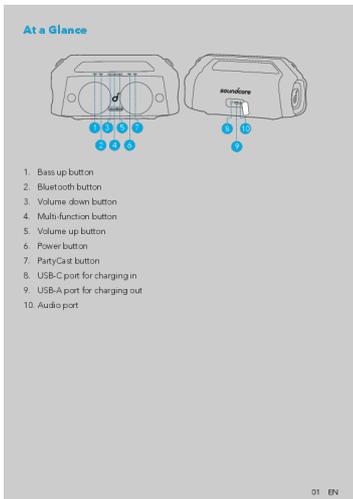


[\[pdf\] User Manual](#)

A3129 Motion Boom Plus Manual anker User Amazon Soundcore Anker IP67 Portable Speaker 80W Stereo Sound Custom EQ BassUp USB C Bluetooth Built in Power Bank Waterproof for Camping Pool Beach and Backyard Electronics 91bEIMIM3AL m media amazon images I |||

At a Glance 13 5 7 24 6 1. Bass up button 2. Bluetooth button 3. Volume down button 4. Multi-function button 5. Volume up button 6. Power button 7. PartyCast button 8. USB-C port for charging in 9. USB-A port for charging out 10. Audio port 8 10 9 01 EN Charging Charge your Speaker Use a certi...

lang:en score:25 filesize: 1020.76 K page_count: 32 document date: 2022-07-10

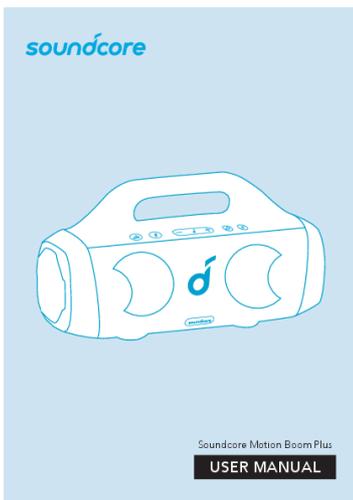

[\[pdf\] User Manual](#)

USER MANUALОт тукThis speaker can pair with 2 mobile devices via Bluetooth To another device press the button once to re enter Bluetooth SoundCore Motion Boom Plus Hi Res BassUP безжична тонколона с Power Bank функция кафяв цвятv1v1пазаруване online media dev A3129 Manualпазаруване Manual |||

Soundcore Motion Boom Plus USER MANUAL English Cestina Danmark Deutsch Espaol Suomi Franais Italiano Nederlands Norsk Polskie 01 Portugues 89 09 97 17 Svenska 105 25 Trke 113 33 121 41 129 49 137 57 143 65 151 73 166 81 At a Glance 13 5 7 24 6 1. Bass up button 2....

lang:en score:25 filesize: 43.62 M page_count: 168 document date: 2022-04-18



[Soundcore Motion Boom Plus Portable Bluetooth Speaker Quick Start Guide](#)

Get started with your Soundcore Motion Boom Plus (A3129) portable Bluetooth speaker. This guide covers charging, pairing, TWS setup, controls, and specifications. lang:en score:21 filesize: 4.67 M page_count: 2 document date: 2022-04-06

[\[pdf\] User Manual Quick Start Guide](#)

51005003284 Soundcore Speaker A3129 QSG 80x80mm V2 20210510 Outline soundcore Anker Store il y a 12 heures — 2 Bluetooth button 3 Volume down 4 Multi function 5 up PAIRING 1 CONNECTED GG A3129QSG Ip ankerjapan hubfs aaos manual |||

...

lang:en score:17 filesize: 1.34 M page_count: 2 document date: 2022-05-10



