Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Nutale /
- > Nut Pro Key Finder Tag User Manual

Nutale F7XT

Nut Pro Key Finder Tag User Manual

Model: F7XT | Brand: Nutale

INTRODUCTION

The Nut Pro Key Finder Tag is a Bluetooth-enabled device designed to assist users in locating misplaced items and preventing loss. It connects to your smartphone via a dedicated application, providing features such as item tracking, anti-loss alerts, and location history. This manual provides detailed instructions for setting up, operating, and maintaining your Nut Pro device.



Image: The Nut Pro Key Finder Tag in white, featuring a minimalist design with the 'Nutale' logo and a single button.

SETUP INSTRUCTIONS

1. Unboxing and Initial Check

Upon opening the package, verify that the Nut Pro Key Finder Tag and the included CR2032 battery are present. The device comes with one battery pre-installed, and often an additional backup battery is provided.



1 Battery Contained In Equipment

Nutale

Quick Start Guide

Please do not pair the device in the phone's Bluetooth list, otherwise the device will not be connected to the App.
There is a battery in the device, and the battery in the package is a backup battery.

Image: Packaging for the Nut Pro device, indicating that one battery is included and showing a quick start guide.

2. App Download and Installation

The Nut Pro device requires the 'Nut App' for functionality. Download the application from your smartphone's respective app store:

- For iOS devices: Search for 'Nut App' on the App Store.
- For Android devices: Search for 'Nut App' on Google Play.

Alternatively, you may scan the QR code provided in the quick start guide to directly access the app download page.

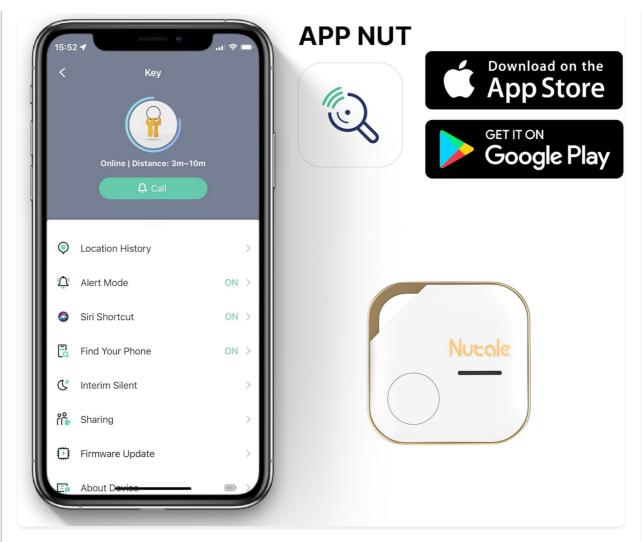


Image: A smartphone displaying the Nut App interface, alongside icons for downloading the app from Apple App Store and Google Play.

3. Device Pairing

- 1. Ensure your smartphone's Bluetooth is enabled.
- 2. Open the 'Nut App' and follow the on-screen instructions to add a new device.
- 3. Press and hold the button on your Nut Pro Key Finder Tag until it emits a sound or indicator light flashes, signaling it is in pairing mode.
- 4. Confirm the pairing within the app. Once connected, the app will display the device as 'Online'.

OPERATING INSTRUCTIONS

1. Finding Your Items

To locate an item attached to your Nut Pro device:

- Open the 'Nut App' on your smartphone.
- Select the desired Nut Pro device from your list of connected items.
- Tap the 'Call' or 'Ring' button within the app. The Nut Pro device will emit an audible alert, helping you pinpoint its location.

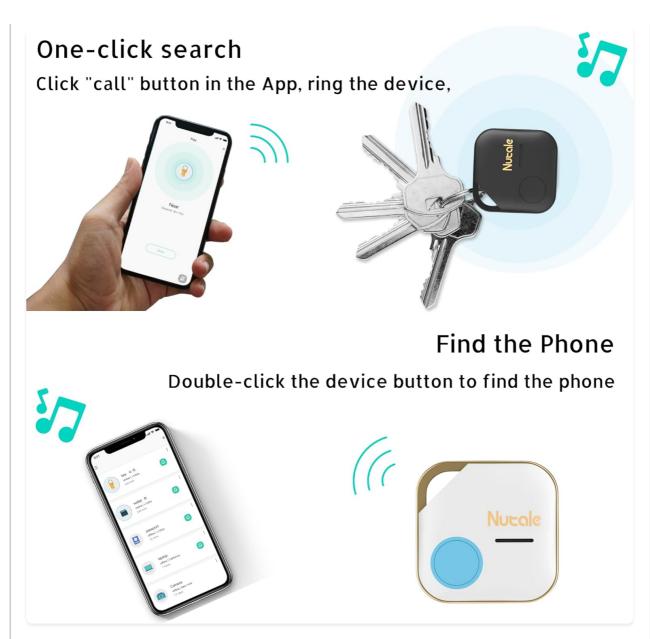


Image: A visual guide demonstrating how to use the app to make the Nut Pro device ring, and how to double-click the device to find your phone.

2. Finding Your Phone

If your phone is misplaced but you have your Nut Pro device:

- Double-click the button on your Nut Pro Key Finder Tag.
- Your smartphone will emit an audible alert, even if it is on silent mode, to help you locate it.

3. Anti-Loss Alert

The anti-loss feature alerts you when your Nut Pro device disconnects from your phone, indicating you might be leaving an item behind:

- Ensure the 'Alert Mode' is enabled in the Nut App settings for the specific device.
- When the Bluetooth connection between your phone and the Nut Pro device is lost (e.g., you walk too far away), both your phone and the Nut Pro device will ring to notify you.

4. Location History

The Nut App records the last known location where your Nut Pro device was connected to your phone:

· Access the 'Location History' feature within the app.

• A map will display the approximate location where the device was last connected, aiding in recovery.



Image: A smartphone screen displaying a map with a pin indicating the last recorded location of a Nut Pro device, labeled 'Location History'.

5. Multi-Device Management

The Nut App supports managing multiple Nut Pro devices simultaneously:

- Add multiple Nut Pro devices to your app, assigning unique names (e.g., 'Keys', 'Wallet', 'Backpack').
- View the status and location of all connected devices from a single interface within the app.

Multi-device Management

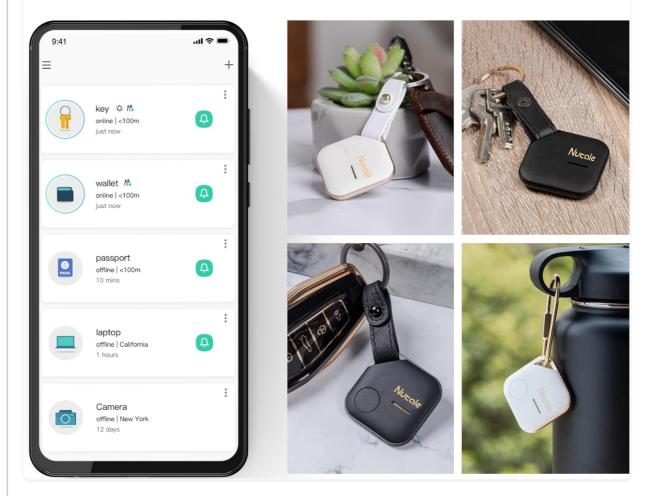


Image: A smartphone screen displaying the Nut App interface with a list of multiple tracked items such as 'key', 'wallet', 'passport', 'laptop', and 'camera', along with their online/offline status and distance.

MAINTENANCE

Battery Replacement

The Nut Pro Key Finder Tag is powered by a CR2032 coin cell battery, which typically lasts over 10 months. When the battery is low, the app may notify you, or the device's performance may diminish.

- 1. Locate the battery compartment on the Nut Pro device. This usually involves gently prying open a small cover.
- 2. Carefully remove the old CR2032 battery.
- 3. Insert a new CR2032 battery, ensuring the positive (+) side faces upwards.
- 4. Close the battery compartment securely.

Dispose of used batteries according to local regulations.

TROUBLESHOOTING

Device Not Pairing:

Ensure Bluetooth is active on your phone. Restart both your phone and the Nut Pro device. Make sure the device is within range and its battery is not depleted. Try resetting the device by removing and reinserting the battery.

• Device Not Ringing:

Check the app to confirm the device is connected ('Online'). Verify that the volume on your Nut Pro device is not set to silent within the app (if applicable). Ensure the device battery is sufficient.

• Phone Not Ringing (when double-clicking device):

Confirm that the 'Find Your Phone' feature is enabled in the Nut App settings. Ensure the app has necessary permissions to play sounds and notifications, even when the phone is locked or on silent.

• Anti-Loss Alert Not Working:

Verify that 'Alert Mode' is activated for the specific device in the app settings. Ensure the app is running in the background and has permissions for background activity and notifications.

• Inaccurate Location History:

Location history relies on the last known Bluetooth connection point. GPS accuracy on your phone and environmental factors can influence the precision of the recorded location. Ensure location services are enabled for the Nut App.

SPECIFICATIONS

Feature	Detail
Model Number	F7XT
Brand	Nutale
Connectivity	Bluetooth
Compatible Devices	Smartphone (iOS and Android)
Battery Type	1 x CR2032 (included)
Battery Life	Over 10 months (typical)
Material	Acrylonitrile Butadiene Styrene (ABS)
Item Weight	0.317 ounces
Package Dimensions	4.92 x 4.57 x 0.55 inches
Color	White

SUPPORT & WARRANTY

For technical assistance, product inquiries, or warranty information, please contact Nutale customer support. Refer to the official Nutale website or the contact information provided with your product packaging for the most current support channels.

Nutale is committed to providing reliable products. Specific warranty terms and conditions may vary and are typically outlined in the product documentation or on the official Nutale website.

Histor Product Personation To measure and the control of the cont	Nutale Findmy Wireless Locator: Setup, Pairing & Usage Guide Get detailed instructions for the Nutale Findmy wireless locator. Learn setup, pairing with Apple's Find My app, using 'Play Sound' and 'Lost Mode', and understanding device status. FCC compliant.
Maddle Reddon Problem Instruction **The analysis of the second of the s	Nutale Findmy Wireless Locator: Setup, Pairing & Usage Guide Get detailed instructions for the Nutale Findmy wireless locator. Learn setup, pairing with Apple's Find My app, using 'Play Sound' and 'Lost Mode', and understanding device status. FCC compliant.
20 25 *blumaple CORPORNTE CAPALOGUE	Blumaple Corporate Catalogue: Premium Electronics, Office IT Hardware, and Corporate Gifting Explore the Blumaple Corporate Catalogue featuring a wide range of premium electronics, office IT hardware, and corporate gifting solutions. Discover smart water bottles, speakers, wearables, paper tablets, and more from leading brands.