

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Remote](#) /
- › [Remote Control for Smart Tech TV Model SMT40N30FC4U1B1 User Manual](#)

Remote SMT40N30FC4U1B1

Remote Control for Smart Tech TV Model SMT40N30FC4U1B1

User Manual

INTRODUCTION

This manual provides instructions for the Remote brand compatible remote control, designed for Smart Tech TV model SMT40N30FC4U1B1. This replacement remote is pre-programmed and ready for immediate use, requiring no additional setup.

Please read this manual carefully before using the product to ensure proper operation and to understand its features.

SETUP

The Remote brand compatible remote control is designed for immediate use with Smart Tech TV model SMT40N30FC4U1B1. No programming or pairing is required.

1. **Insert Batteries:** Open the battery compartment cover on the back of the remote control. Insert two AAA batteries (not included), ensuring correct polarity (+ and -).
2. **Close Battery Compartment:** Replace the battery compartment cover securely.
3. **Point and Use:** Point the remote control directly at your Smart Tech TV and begin using it.







Image: Front view of the Remote brand compatible remote control. It features a standard layout with power, channel, volume, and navigation buttons, designed for intuitive use with Smart Tech TVs.

OPERATING INSTRUCTIONS

This remote control provides full functionality for your Smart Tech TV. Below are common functions:

- **Power Button:** Press to turn the TV on or off.
- **Channel Buttons (CH+/CH-):** Press to change channels up or down.
- **Volume Buttons (VOL+/VOL-):** Press to increase or decrease the volume.
- **Mute Button:** Press to mute or unmute the TV sound.
- **Number Buttons (0-9):** Use to directly input channel numbers.
- **Navigation Buttons (Up, Down, Left, Right, OK):** Use to navigate menus and confirm selections.
- **Source/Input Button:** Press to select different input sources (HDMI, AV, etc.).
- **Menu Button:** Access the TV's main menu.
- **Exit Button:** Exit current menu or function.

Refer to your Smart Tech TV's original manual for specific functions related to its menu system.

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.

- **Battery Replacement:** Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage.
- **Avoid Damage:** Do not drop the remote control, expose it to extreme temperatures, or immerse it in water.

TROUBLESHOOTING

Problem	Solution
Remote control is not working.	<ul style="list-style-type: none"> • Check if the batteries are inserted correctly with the correct polarity. • Replace old batteries with new ones. • Ensure there are no obstructions between the remote control and the TV's infrared sensor. • Make sure you are within the effective operating range (up to 10 meters).
Some buttons are not responding.	<ul style="list-style-type: none"> • Clean the remote control surface, especially around the unresponsive buttons, to remove any dirt or debris. • Replace batteries, as low power can sometimes cause intermittent button functionality.
Remote control works for some functions but not others.	<ul style="list-style-type: none"> • Ensure your TV model is SMT40N30FC4U1B1. This remote is specifically pre-programmed for this model. • Some advanced TV functions might require the original TV remote or specific TV settings.

If the issue persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	Remote
Compatible TV Model	Smart Tech SMT40N30FC4U1B1
Connectivity Technology	Infrared (IR)
Special Feature	No programming required, ready to use
Number of Buttons	20
Maximum Range	10 Meters
Power Source	2 x AAA Batteries (not included)
ASIN	B09VLH6MG2
First Available Date	March 15, 2022

WARRANTY AND SUPPORT

Specific warranty information for this compatible remote control is not detailed in the product specifications. For any warranty claims or technical support, please refer to the seller's return policy or contact the seller directly through the platform where the product was purchased.

If you have a TV model different from SMT40N30FC4U1B1, please contact the seller before purchase to confirm compatibility.

Seller: [BANDI-ELETTRONICA](#)