

[Manuals.plus](#) /

> [Melchioni](#) /

> Melchioni Family TSUNAMI2 Portable Dual Induction Cooktop Instruction Manual

Melchioni TSUNAMI2

Melchioni Family TSUNAMI2 Portable Dual Induction Cooktop Instruction Manual

Model: TSUNAMI2

1. INTRODUCTION

Thank you for choosing the Melchioni Family TSUNAMI2 Portable Dual Induction Cooktop. This appliance is designed for efficient and fast cooking, offering two cooking zones with a total power of 3100W. Its compact and slim design makes it easy to transport and store, ideal for various settings. Please read this manual carefully before use to ensure safe and optimal operation.



Image 1.1: Melchioni Family TSUNAMI2 Portable Dual Induction Cooktop, showing its sleek black glass surface and control panel.

2. SAFETY INFORMATION

To prevent injury or damage, always observe the following safety precautions:

- Ensure the cooktop is placed on a stable, heat-resistant surface.
- Do not immerse the appliance in water or any other liquid.
- Keep children away from the cooktop during operation. The appliance features a **Child Safety Lock** to prevent accidental activation.
- The cooktop is equipped with **overheating protection** and **automatic shut-off** for enhanced safety.
- Only use induction-compatible cookware. Refer to the 'Compatible Cookware' section for details.
- Do not place metallic objects (e.g., knives, forks, spoons, lids) on the induction surface as they can become hot.
- Unplug the appliance when not in use and before cleaning.

3. PRODUCT OVERVIEW

The Melchioni Family TSUNAMI2 features a black A-grade glass surface with two independent cooking zones. The intuitive touch control panel with an LED display allows for easy operation.

Control Panel Features:

- **Function Button:** Selects cooking modes or power levels.
- **ON/OFF Button:** Powers the cooktop on or off.
- **Lock Button:** Activates/deactivates the Child Safety Lock.
- **Timer Button:** Sets the cooking timer.
- **Temperature/Power Adjustment (+/-):** Increases or decreases temperature/power settings.
- **LED Display:** Shows current settings, temperature, or timer.



Image 3.1: Close-up view of the Melchioni Family TSUNAMI2 Induction Cooktop's touch control panel with LED display.

4. SETUP

1. Unpack the cooktop and remove all packaging materials.
2. Place the cooktop on a flat, stable, and dry surface, ensuring adequate ventilation around the unit.

3. Plug the power cord into a grounded electrical outlet. The cooktop is now in standby mode.

5. OPERATING INSTRUCTIONS

5.1. Turning On/Off

- Press the **ON/OFF** button to turn on the cooktop. The LED display will illuminate.
- To turn off, press the **ON/OFF** button again.

5.2. Adjusting Temperature and Power

- After placing an induction-compatible pot on a cooking zone and turning on the cooktop, select the desired cooking zone.
- Use the **+** or **-** buttons to adjust the temperature (from 60°C to 240°C) or power level.

5.3. Using the Timer

- Press the **Timer** button.
- Use the **+** or **-** buttons to set the desired cooking time.
- The cooktop will automatically shut off once the timer expires.

5.4. Child Safety Lock

- To activate the Child Safety Lock, press and hold the **Lock** button for a few seconds. An indicator will appear on the display.
- To deactivate, press and hold the **Lock** button again until the indicator disappears.

6. COMPATIBLE COOKWARE

The Melchioni Family TSUNAMI2 induction cooktop requires specific cookware. Compatible pots and pans must have a magnetic bottom. Suitable materials include:

- Cast iron
- Enameled iron
- Steel
- Stainless steel with a magnetic bottom
- Aluminum fusion cookware designed for induction

To check if your cookware is compatible, place a magnet on the bottom of the pot. If the magnet sticks, the cookware is suitable for induction cooking.

7. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and performance of your cooktop.

1. Always unplug the cooktop and allow it to cool completely before cleaning.
2. Wipe the glass surface with a damp cloth and mild soap.
3. For stubborn stains, use a non-abrasive cleaner specifically designed for glass cooktops.
4. Do not use abrasive sponges, scouring pads, or harsh chemicals, as these can scratch or damage the surface.
5. Ensure the cooktop is completely dry before storing or reusing.

8. TROUBLESHOOTING

If you encounter issues with your cooktop, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Cooktop does not turn on.	No power supply.	Check if the power cord is securely plugged into a working outlet.
Cooktop beeps and displays an error code.	Incompatible cookware or no cookware detected.	Ensure you are using induction-compatible cookware and that it is properly centered on the cooking zone.
Cooking zone is not heating.	Child Safety Lock is active.	Deactivate the Child Safety Lock by pressing and holding the Lock button.
Cooktop automatically shuts off during operation.	Overheating protection activated or timer expired.	Allow the cooktop to cool down. Check if the timer was set.

9. SPECIFICATIONS

- **Model:** TSUNAMI2
- **Brand:** Melchioni Family
- **Power:** 3100W (Total)
- **Cooking Zones:** 2
- **Material:** A-grade Black Glass
- **Temperature Range:** 60°C to 240°C
- **Controls:** Touch Panel with LED Display
- **Special Features:** Child Safety Lock, Overheating Protection, Automatic Shut-off, Timer, Portable Design
- **Power Source:** Wired Electric
- **Dimensions (Depth x Width x Height):** 36 cm x 60 cm x 3 cm
- **Manufacturer Model Number:** 118360029

10. WARRANTY AND CUSTOMER SUPPORT

For warranty information or customer support, please refer to the documentation included with your purchase or contact Melchioni Family customer service. Specific warranty terms and conditions may vary by region and retailer.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09VPP5D2F>

More documents and user manuals: <https://manuals.plus/>