

Manuals.plus /

› Hampton Bay Lighting /

› Europa 21 in. 1-Light Modern Chrome Selectable LED Flush Mount Ceiling Light for Hallway (CL-ERR-HD2) User Manual

Hampton Bay Lighting CL-ERR-HD2

Europa 21 in. 1-Light Modern Chrome Selectable LED Flush Mount Ceiling Light

Model: CL-ERR-HD2

Brand: Hampton Bay Lighting

PRODUCT OVERVIEW

The Europa 21-inch 1-Light Modern Chrome Selectable LED Flush Mount Ceiling Light (Model: CL-ERR-HD2) is an elegant lighting solution designed for various indoor spaces. This fixture features an integrated LED light source, offering selectable light temperatures and dimming capabilities via a remote control. Its modern circular design and chrome finish make it suitable for bedrooms, kitchens, dining rooms, and hallways.



Figure 1: Europa 21-inch LED Flush Mount Ceiling Light and its accompanying remote control. The light fixture is a circular, low-profile design with a white diffuser and a chrome-colored rim. The remote control is gray with various buttons for power, dimming, color temperature selection (warm, cool, white), and preset brightness levels.

SAFETY INFORMATION

- Always turn off the main power supply at the circuit breaker before beginning installation or performing any maintenance.
- Consult a qualified electrician if you are unsure about the installation process.
- This product is designed for indoor use only and is not water resistant. Do not install in damp or wet locations.
- Ensure all electrical connections are secure and comply with local electrical codes.
- Do not attempt to modify the fixture or its integrated LED components.

PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Europa 21 in. LED Flush Mount Ceiling Light Fixture (1)
- Remote Control (1)
- Mounting Hardware (screws, wire nuts, etc.)

- Instruction Manual (this document)

SETUP AND INSTALLATION

Tools Required (Not Included): Screwdriver, Wire Strippers, Electrical Tape, Safety Glasses, Ladder.

1. **Prepare for Installation:** Turn off power at the main circuit breaker. Ensure the power is off by testing the circuit with a voltage tester.
2. **Remove Existing Fixture (if applicable):** Carefully disconnect and remove any existing light fixture from the junction box.
3. **Attach Mounting Bracket:** Secure the mounting bracket (usually included with hardware) to the electrical junction box in the ceiling using the provided screws. Ensure it is firmly attached.
4. **Make Electrical Connections:**
 - Connect the **black** wire from the fixture to the **black** (hot) wire from the junction box using a wire nut.
 - Connect the **white** wire from the fixture to the **white** (neutral) wire from the junction box using a wire nut.
 - Connect the **green** or **bare copper** ground wire from the fixture to the ground wire from the junction box (or to the green ground screw on the mounting bracket).
 - Ensure all connections are secure and insulated with electrical tape if necessary.
5. **Mount the Fixture:** Carefully align the fixture with the mounting bracket and secure it in place using the provided screws. Ensure the fixture is flush with the ceiling.
6. **Restore Power:** Turn the power back on at the main circuit breaker.

OPERATING INSTRUCTIONS

This fixture is controlled by a dedicated remote control. It also responds to a wall switch, but full functionality (dimming, color temperature) requires the remote.

Remote Control Functions:



Figure 2: Detailed view of the remote control. Buttons include ON/OFF, RESET, TIMER, Night Light mode, Brightness Up/Down, Preset Dimmer (20%, 50%, 100%), and Color Temperature (WARM, PRESET COLOR, COOL, WHITE).

- **Power ON/OFF:** Press the **ON** or **OFF** button to turn the light on or off.
- **Dimming:** Use the **Brightness Up** (*sun icon with plus*) and **Brightness Down** (*sun icon with minus*) buttons to adjust brightness continuously.
- **Preset Dimmer:** Select **20%**, **50%**, or **100%** for quick brightness adjustments.
- **Color Temperature Selection:**
 - **WARM:** Activates a warm white light.
 - **PRESET COLOR:** Cycles through predefined color temperatures.
 - **COOL:** Activates a cool white light.
 - **WHITE:** Activates a neutral white light.
- **Night Light Mode:** Press the **Night Light** button (*moon icon*) for a very low brightness setting.
- **Timer:** Press the **TIMER** button to set a timed shut-off (specific duration not detailed in product info, typically 30 or 60 minutes).
- **RESET:** Press the **RESET** button to return the light to its default bright white setting.

Wall Switch Operation:

When controlled by a wall switch, the light will return to its default bright white setting after a brief delay (approximately 1 second) when turned on. For full control, including dimming and color temperature adjustments, the remote control must be used while the wall switch is in the ON position.

MAINTENANCE

- **Cleaning:** Ensure the power is off before cleaning. Wipe the fixture with a soft, dry, or slightly damp cloth. Do not use abrasive cleaners or solvents, as they may damage the finish or electrical components.
- **LED Longevity:** The integrated LED light source is designed for long-term use and is not user-replaceable.
- **Remote Control Batteries:** If the remote control stops responding, replace its batteries (type not specified, typically AAA or CR2032 coin cell).

TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	No power to the fixture; Loose wiring connection; Faulty remote control.	Check circuit breaker. Ensure wall switch is ON. Verify all wire connections are secure. Replace remote control batteries.
Remote control not working.	Dead batteries; Remote out of range; Interference.	Replace remote control batteries. Ensure remote is within effective range of the fixture. Minimize potential interference from other electronic devices.
Light defaults to bright white when using wall switch.	Normal operation for wall switch control.	This is expected behavior. Use the remote control to adjust brightness and color temperature after turning the light on with the wall switch.
Light flickers or dims unexpectedly.	Loose wiring; Incompatible dimmer switch (if applicable, though this uses remote); Electrical interference.	Check all wire connections. Ensure no external dimmer switch is used with this fixture. Consult an electrician if problem persists.

SPECIFICATIONS

Brand	Hampton Bay Lighting
Model Number	CL-ERR-HD2
Collection	Europa
Dimensions	21 inches (diameter)
Item Weight	7 Pounds
Color	Chrome
Material	Metal
Light Source Type	Integrated LED
Voltage	120 Volts
Control Method	Remote Control
Installation Type	Flush Mount
Indoor/Outdoor Usage	Indoor Only
Water Resistance Level	Not Water Resistant
Connectivity Protocol	Zigbee (Note: Specific smart home integration details not provided)
Assembly Required	No
UPC	846979035328

WARRANTY AND SUPPORT

Specific warranty information for the Hampton Bay Lighting Europa CL-ERR-HD2 fixture is not provided in the available product details. Please refer to the manufacturer's official website or contact their customer support for detailed warranty terms and conditions.

For technical support or assistance with installation, please contact Hampton Bay Lighting customer service. Contact information is typically found on the product packaging or the manufacturer's website.