

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [DEWALT](#) /

› [DEWALT 60V MAX Cordless Chainsaw 18-inch \(DCCS672B\) Instruction Manual](#)

DEWALT DCCS672B

DEWALT 60V MAX Cordless Chainsaw 18-inch (DCCS672B)

Model: DCCS672B | Brand: DEWALT

INTRODUCTION

The DEWALT 60V MAX Cordless Chainsaw (Model DCCS672B) is designed for heavy-duty cutting tasks. This 18-inch chainsaw operates on a 60V MAX* battery (sold separately) and features a professional-grade brushless motor for high efficiency and continuous lubrication through its auto-oiling system. It includes tooled chain tensioning for reliable bar retention and a chain brake for limited kickback protection, making it suitable for various outdoor cutting applications.

Key Features:

- **Quick Chain Adjustment:** Utilizes an onboard wrench for efficient chain tensioning.
- **Built for Safety:** Features limited kickback protection with a chain brake.
- **Long-Lasting Performance:** Continuous lubrication is provided by an auto-oiling feature.
- **Powerful Operation:** Delivers up to 2.85 HP peak power (with DCB609 battery, sold separately).

SAFETY INFORMATION

Operating a chainsaw requires careful attention to safety. Always follow these guidelines to prevent injury.

- Always wear appropriate personal protective equipment (PPE) including safety glasses, hearing protection, gloves, and sturdy footwear.
- Ensure the chain brake is engaged before starting the chainsaw and when moving between cuts.
- Maintain a firm grip with both hands on the chainsaw handles during operation.
- Be aware of kickback potential and avoid cutting with the tip of the guide bar.
- Keep bystanders, especially children and pets, at a safe distance from the work area.
- Inspect the work area for obstacles such as rocks, metal, or other debris that could cause kickback or damage the chain.
- Never operate the chainsaw when fatigued or under the influence of alcohol or medication.

WHAT'S IN THE BOX

- DEWALT 60V MAX 18-inch Cordless Chainsaw (Tool Only)

Note: Battery and charger are sold separately.

SETUP

Follow these steps to prepare your chainsaw for operation.

1. **Battery Installation:** Insert a fully charged DEWALT 60V MAX* battery (sold separately) into the battery port until it clicks securely into place.
2. **Bar and Chain Assembly:** Refer to the detailed instructions in the full product manual for proper installation of the 18-inch guide bar and cutting chain. Ensure the chain is correctly oriented and seated in the guide bar groove.
3. **Chain Tensioning:** Use the onboard wrench to adjust the chain tension. The chain should be snug but still allow for manual movement around the guide bar without binding. Proper tension is crucial for safe and efficient operation.
4. **Oil Reservoir Filling:** Fill the oil reservoir with appropriate bar and chain oil. The chainsaw features an auto-oiling system that lubricates the chain during operation. Regularly check the oil level and refill as needed.

OPERATING INSTRUCTIONS

Learn how to safely and effectively operate your chainsaw.

1. **Starting the Chainsaw:**
 - Ensure the chain brake is disengaged.
 - Press the safety lock-off button.
 - Squeeze the trigger switch to start the chainsaw.
2. **Cutting:**
 - Always begin cutting with the chain at full speed.
 - Use a steady, controlled motion, allowing the chainsaw to do the work.
 - Be mindful of the direction of falling wood and potential pinch points.
3. **Stopping the Chainsaw:**
 - Release the trigger switch.
 - Engage the chain brake for immediate chain stoppage and added safety.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your chainsaw.

- **Chain Sharpening:** Regularly inspect the chain for dullness or damage. Sharpen the chain as needed using a suitable sharpening tool or have it professionally sharpened.
- **Bar Maintenance:** Clean the guide bar groove and oil holes. Flip the guide bar periodically to ensure even wear.

- **Cleaning:** After each use, clean sawdust and debris from the chainsaw, especially around the motor housing, chain brake, and oil reservoir cap.
- **Storage:** Store the chainsaw in a dry, secure location, out of reach of children. Ensure the chain guard is in place and the battery is removed before storage.

TROUBLESHOOTING

Refer to this table for common issues and their solutions.

Problem	Possible Cause	Solution
Chainsaw does not start	Battery not charged or improperly installed	Ensure battery is fully charged and correctly inserted.
	Chain brake engaged	Disengage the chain brake.
	Safety lock-off not pressed	Press the safety lock-off button before squeezing the trigger.
Chain comes off the bar	Incorrect chain tension	Adjust chain tension to the recommended specifications.
	Worn or damaged chain/bar	Inspect and replace worn chain or guide bar.
Reduced cutting performance	Dull chain	Sharpen or replace the chain.
	Insufficient chain lubrication	Check oil reservoir and refill with bar and chain oil.
	Improper cutting technique	Ensure the chain is at full speed before cutting and apply steady pressure.

SPECIFICATIONS

Feature	Specification
Brand	DEWALT
Model Number	DCCS672B
Power Source	Battery Powered
Horsepower	2.85 HP (Peak, with DCB609 battery)
Item Weight	1.5 Pounds (Tool Only)
Product Dimensions	10.9"L x 10.8"W x 39.5"H
Chain Length	18 Inches
UPC	885911798150

WARRANTY AND SUPPORT

The DEWALT 60V MAX Cordless Chainsaw (DCCS672B) comes with the following:

- **3-Year Limited Warranty**
- **1-Year Free Service**
- **90-Day Satisfaction Guarantee**

For detailed warranty information, product registration, or to contact customer support, please visit the official DEWALT website or refer to the documentation included with your product.



Image: DEWALT warranty details, including 3-Year Limited Warranty, 1-Year Free Service, and 90-Day Satisfaction Guarantee.

VISUAL AIDS



Image: Front view of the DEWALT 60V MAX 18-inch Cordless Chainsaw, highlighting its design and 18-inch bar.



Image: Angled view of the DEWALT 60V MAX 18-inch Cordless Chainsaw, showing the handle and battery compartment.



Image: A person wearing protective gear operating the DEWALT 60V MAX Chainsaw to cut a tree trunk.



Image: A person using the DEWALT 60V MAX Chainsaw to cut through a fallen log, demonstrating its cutting capability.



Image: Icon representing the chainsaw's auto-oiling feature, ensuring continuous lubrication.

Official Product Video

Your browser does not support the video tag.

Video: Official product video from Stanley Black & Decker – US, showcasing the DEWALT 60V MAX Cordless Chainsaw, 18 in., Tool Only (DCCS672B).