

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Cangaroo](#) /

› [Cangaroo Easy Fold Stroller Instruction Manual](#)

Cangaroo 108838

Cangaroo Easy Fold Stroller Instruction Manual

Model: 108838

INTRODUCTION

This instruction manual provides essential information for the safe and correct use of your Cangaroo Easy Fold Stroller. Please read this manual thoroughly before assembly and use, and retain it for future reference. This stroller is designed for children from birth up to approximately 3 years of age, with a maximum weight capacity of 22 kg.

IMPORTANT SAFETY WARNINGS

- **WARNING:** Never leave your child unattended in the stroller.
- **WARNING:** Ensure all locking devices are engaged before use.
- **WARNING:** To avoid injury, ensure your child is kept away when unfolding and folding this product.
- **WARNING:** Do not let your child play with this product.
- **WARNING:** Always use the restraint system.
- **WARNING:** Check that the pram body or seat unit attachment devices are correctly engaged before use.
- This product is not suitable for running or skating.
- The parking device shall be engaged when placing and removing the child.
- Any load attached to the handle and/or on the back of the backrest and/or on the sides of the product will affect the stability of the product.
- The stroller is suitable for children from birth. For newborns, the backrest should be in the fully reclined position.
- The maximum weight for the storage basket is 3 kg.
- Use only replacement parts supplied or approved by the manufacturer.

PACKAGE CONTENTS

Upon opening the package, please verify that all components are present and undamaged. The package should contain:

- 1 x Cangaroo Easy Fold Stroller frame with seat unit
- 1 x Sun canopy
- 1 x Foot cover

- Wheels (front and rear, may be pre-attached)
- This instruction manual

SETUP AND ASSEMBLY

1. Unfolding the Stroller

To unfold the Cangaroo Easy Fold Stroller, ensure the safety latch is disengaged. Hold the handle firmly and lift upwards until the frame locks into place. You should hear an audible click, indicating that the stroller is fully open and secure. Verify that all locking mechanisms are engaged before placing a child in the stroller.



Image: The Cangaroo Easy Fold Stroller in its fully unfolded position, ready for use. This view shows the overall structure and seat.

2. Attaching the Wheels (if not pre-attached)

If the wheels are not pre-attached, insert the wheel axles into the designated slots on the stroller frame until they click

securely into place. Pull on each wheel to ensure it is firmly attached. The front wheels are designed to swivel 360 degrees for maneuverability.



Image: A close-up view showing the stroller's wheels and the handle with its release button, illustrating key components for assembly and operation.

3. Attaching the Sun Canopy and Foot Cover

Attach the sun canopy to the designated points on the stroller frame. Ensure it is securely fastened. The foot cover can be attached to the front of the seat unit using the provided fasteners, offering additional warmth and protection for your child.

OPERATING INSTRUCTIONS

1. Adjusting the Backrest and Footrest

The backrest can be adjusted to multiple positions, including a full recline suitable for newborns. Locate the adjustment lever on the back of the seat and press it to recline or raise the backrest to the desired angle. The footrest can also be adjusted to provide comfort for your child's legs. Ensure the backrest and footrest are securely locked in position after adjustment.



Image: The stroller with its backrest and footrest fully reclined, demonstrating the sleeping position suitable for infants.

2. Securing Your Child with the 5-Point Harness

Always secure your child using the 5-point safety harness. Place your child in the seat, bring the shoulder straps over their shoulders, and the waist straps around their hips. Insert the buckles into the central locking mechanism until they click. Adjust the straps to ensure a snug, secure fit without being too tight. To release, press the button on the central buckle.

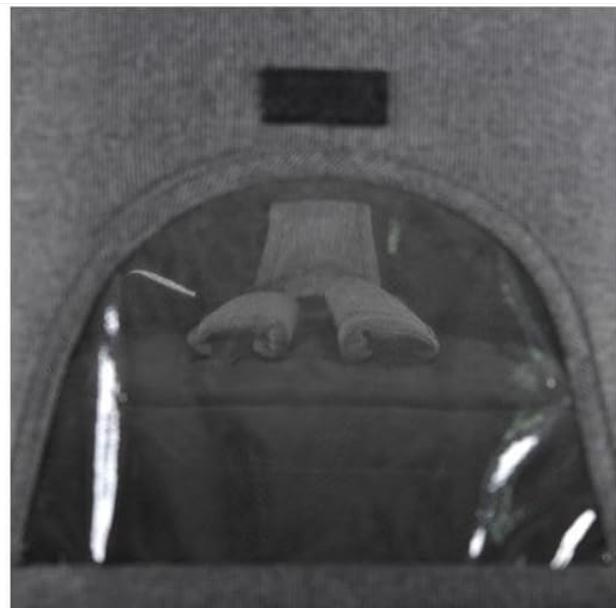


Image: A detailed view of the 5-point safety harness, showing the buckle and adjustable straps, along with the sun canopy's viewing window.

3. Using the Sun Canopy and Viewing Window

The sun canopy is adjustable and extendable to provide optimal shade. Pull the canopy forward or push it back to adjust its position. The integrated viewing window allows you to check on your child without disturbing them.

4. Engaging the Rear Brake

To engage the rear brake, press down firmly on the brake pedal located near the rear wheels. Ensure the stroller is stationary before placing or removing your child. To release the brake, lift the pedal upwards.

5. Folding the Stroller

The Cangaroo Easy Fold Stroller features a convenient one-hand folding mechanism. Locate the folding button/lever on the handle. Engage the mechanism and gently push the stroller forward and down until it collapses into a compact, self-standing position. Ensure the safety latch automatically engages to keep it folded.



Image: A composite image showing the stroller from various angles, including its compact folded state, highlighting its portability.

MAINTENANCE

1. Cleaning

- **Fabric Parts:** Clean fabric parts with a damp cloth and mild soap. Do not use harsh detergents or bleach. Allow to air dry completely.

- Frame:** Wipe the aluminum frame with a soft, damp cloth. Dry thoroughly to prevent rust.
- Wheels:** Regularly clean the wheels to remove dirt and debris. Lubricate moving parts of the wheels and axles periodically with a silicone-based lubricant to ensure smooth operation.

2. Storage

Store the stroller in a dry, well-ventilated area, away from direct sunlight and extreme temperatures. When storing for extended periods, ensure it is clean and dry to prevent mold or damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Stroller does not unfold/fold smoothly.	Safety latch engaged; debris in mechanism; lack of lubrication.	Ensure safety latch is disengaged. Check for obstructions and remove. Apply silicone lubricant to moving parts.
Wheels are stiff or squeaky.	Dirt or debris in wheel axles; lack of lubrication.	Clean wheels and axles thoroughly. Apply silicone lubricant to the axles.
Brake is not engaging or releasing properly.	Debris in brake mechanism; cable adjustment needed.	Clear any debris from the brake mechanism. If the issue persists, contact customer support.
Harness is difficult to buckle/unbuckle.	Debris in buckle; misaligned straps.	Inspect the buckle for any obstructions and clean if necessary. Ensure straps are not twisted.

SPECIFICATIONS

Model Number: 108838

Brand: Cangaroo

Material: Aluminum frame, PU leather handle

Age Range: From birth up to approximately 3 years

Maximum Weight Capacity: 22 kg

Harness Type: 5-point safety harness

Unfolded Dimensions (L x W x H): 89 x 43 x 103 cm

Folded Dimensions (L x W x H): 30 x 44 x 55 cm

Product Weight: 8.23 kg

Wheel Type: Polyurethane (PU) wheels, 360° swivel front wheels

Features: One-hand fold, adjustable backrest and footrest, adjustable sun canopy with viewing window, large storage basket, rear brake, foot cover.

WARRANTY AND SUPPORT

For warranty information, product support, or to purchase replacement parts, please refer to the warranty card included with your product or visit the official Cangaroo website. Keep your proof of purchase for any warranty claims.

Manufacturer: Cangaroo



