

## Mayer MMSC15-PK

# Mayer MMSC15-PK 1.5L Slow Cooker User Manual

Model: MMSC15-PK

## INTRODUCTION

---

Thank you for purchasing the Mayer MMSC15-PK 1.5L Slow Cooker. This manual provides important information regarding the safe operation, setup, maintenance, and troubleshooting of your appliance. Please read it thoroughly before first use and retain it for future reference.

## IMPORTANT SAFETY INFORMATION

---

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the base unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "OFF", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Avoid sudden temperature changes, such as adding refrigerated foods into a heated pot.
- The ceramic inner pot is fragile and can break if dropped or exposed to sudden temperature changes.

## PRODUCT OVERVIEW

---

The Mayer MMSC15-PK Slow Cooker is designed for convenient and efficient cooking. Familiarize yourself with its components before use.



Figure 1: Front view of the Mayer MMSC15-PK Slow Cooker, showing the main unit, ceramic pot, lid, and control dial.

### Components:

1. **Lid with Anti-slip Heat Resistant Silicone Cover:** Helps retain heat and moisture.
2. **Food-Grade Ceramic Inner Pot:** Removable for cooking and serving.
3. **Heating Base Unit:** Houses the heating element and control panel.
4. **Control Dial:** Used to select cooking modes (OFF, LOW, HIGH, WARM).
5. **Side Handles:** For easy and safe transportation of the unit.
6. **Non-Slip Feet:** Provides stability during operation.

### SETUP AND FIRST USE

---

#### Before First Use:

1. Unpack the slow cooker and remove all packaging materials.
2. Wash the ceramic inner pot and lid in warm, soapy water. Rinse thoroughly and dry completely. The heating base

unit should be wiped with a damp cloth. Do not immerse the base unit in water.

3. Place the heating base unit on a flat, stable, heat-resistant surface, away from walls or cabinets to allow for proper ventilation.
4. Insert the clean ceramic inner pot into the heating base unit.



Figure 2: Angled view of the Mayer MMSC15-PK Slow Cooker, highlighting the side handles and the overall compact design.

## OPERATING INSTRUCTIONS

---

Follow these steps for safe and effective operation of your slow cooker.

1. **Prepare Ingredients:** Place all desired ingredients into the ceramic inner pot. Do not overfill; ensure there is at least 1 inch of space from the rim.
2. **Place Lid:** Cover the ceramic pot with the lid. Ensure it is seated properly.
3. **Plug In:** Plug the power cord into a standard electrical outlet.
4. **Select Cooking Mode:** Turn the control dial to your desired setting:
  - **LOW:** For slow cooking over a longer period (e.g., 6-8 hours).
  - **HIGH:** For faster cooking (e.g., 3-4 hours).

- **WARM:** To keep cooked food at a serving temperature. Do not use for cooking raw food.
5. **Cooking Process:** The indicator light will illuminate when the unit is powered on and a cooking mode is selected. Avoid lifting the lid frequently, as this releases heat and extends cooking time.
  6. **Finish Cooking:** Once cooking is complete, turn the control dial to "OFF" and unplug the unit from the wall outlet.
  7. **Serve:** Carefully remove the lid, using oven mitts if necessary, as steam will be hot. Use appropriate utensils to serve food from the ceramic pot.



Figure 3: Top-down view of the Mayer MMSC15-PK Slow Cooker with the lid in place, showing the compact design.

## CARE AND MAINTENANCE

---

### Cleaning:

- Always unplug the slow cooker and allow it to cool completely before cleaning.
- The ceramic inner pot and lid are dishwasher safe or can be washed by hand with warm, soapy water. Avoid abrasive cleaners or scouring pads that may scratch the surface.
- Wipe the exterior of the heating base unit with a soft, damp cloth. Do not immerse the base unit in water or any other liquid.

- Ensure all parts are thoroughly dry before storing or next use.

Storage:

Store the slow cooker in a dry place. You can store the lid inverted on the ceramic pot, and the ceramic pot inside the base unit to save space.

TROUBLESHOOTING

| Problem                        | Possible Cause  | Solution  |
|--------------------------------|---|---|
| Slow cooker does not turn on.  | Not plugged in; power outlet not working; control dial not set.                     | Ensure the unit is securely plugged into a working outlet. Turn the control dial to LOW, HIGH, or WARM.   |
| Food is not cooking properly.  | Lid not sealed correctly; too much liquid; incorrect setting; frequent lid lifting. | Ensure the lid is properly sealed. Reduce liquid if necessary. Verify the correct cooking setting (LOW/HIGH) is selected. Avoid lifting the lid during cooking. |
| Food is burning on the bottom. | Not enough liquid; cooking on HIGH for too long.                                    | Ensure adequate liquid is used. Consider using the LOW setting for longer cooking times. Stir ingredients if appropriate for the recipe.                        |
| Ceramic pot cracked.           | Sudden temperature change; impact damage.   | Avoid adding cold liquids to a hot pot or placing a hot pot on a cold surface. Handle with care. A cracked pot must be replaced.                                |

SPECIFICATIONS

|                                |  |
|--------------------------------|--|
| Model                          | MMSC15-PK  |
| Brand                          | Mayer  |
| Capacity                       | 1.5 Liters   |
| Voltage                        | 220 Volts  |
| Wattage                        | 140 Watts  |
| Control Method                 | Mechanical Dial (OFF, LOW, HIGH, WARM)   |
| Inner Pot Material             | Food-Grade Ceramic   |
| Product Dimensions (L x W x H) | 24 x 23.5 x 22.5 cm  |
| Weight                         | 2.68 kg  |
| Special Features               | Overheating protection, Anti-slip heat resistant silicon cover on lid, Side handles, Non-slip feet |

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or visit the official Mayer website. Keep your purchase receipt as proof of purchase for any warranty claims.

For further assistance, you may contact Mayer customer service through their official channels. Contact details are typically available on the product packaging or the brand's website.



Related Documents - MMSC15-PK

|  |  |
|--|--|
|  | <p><a href="#">Mayer Digital Air Pot (3L) MMAP30D User Manual</a></p> <p>User manual for the Mayer Digital Air Pot, model MMAP30D, part of the Paradise Collection. Provides instructions and specifications for the 3L air pot.</p>   |
|  | <p><a href="#">Mayer MMSO2050 Steam Oven User Manual</a></p> <p>Comprehensive user manual for the Mayer MMSO2050 Steam Oven, covering safety instructions, operating features, cleaning, maintenance, and troubleshooting for optimal use.</p>   |
|  | <p><a href="#">Mayer MM076 Electric Oven - User Manual</a></p> <p>Instruction manual for the Mayer MM076 Electric Oven, The Professional Chef Series. Includes safety instructions, parts introduction, controls and operations, function guide, and cleaning and maintenance.</p>         |
|  | <p><a href="#">Mayer MMFS28 Food Steamer: Instruction Manual and User Guide</a></p> <p>Comprehensive guide for the Mayer MMFS28 Food Steamer, covering safety instructions, assembly, operation, cleaning, maintenance, and warranty information.</p>                                      |
|  | <p><a href="#">Mayer MMDO13C Built-in Oven: User Manual and Safety Guide</a></p> <p>Comprehensive user manual for the Mayer MMDO13C built-in oven. Learn about safety, installation, operation, cooking modes, accessories, cleaning, troubleshooting, and energy-efficient use.</p>       |
|  | <p><a href="#">Mayer MMSM216 Mini Stand Mixer User Manual</a></p> <p>Comprehensive user manual for the Mayer MMSM216 Mini Stand Mixer, covering safety instructions, parts identification, operating procedures, speed control guide, cleaning, maintenance, and warranty information.</p> |

