

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [BONTEC](#) /

› [BONTEC OOXM3308 Adjustable Tilting Ceiling TV Mount User Manual for 26-55 Inch TVs](#)

BONTEC OOXM3308

BONTEC OOXM3308 Adjustable Tilting Ceiling TV Mount User Manual

For 26-55 Inch TVs

1. INTRODUCTION

Thank you for choosing the BONTEC OOXM3308 Adjustable Tilting Ceiling TV Mount. This product is designed to securely hold most 26-55 inch televisions, offering versatile viewing angles and space-saving installation. Please read this manual thoroughly before installation to ensure safe and correct assembly and operation. Keep this manual for future reference.

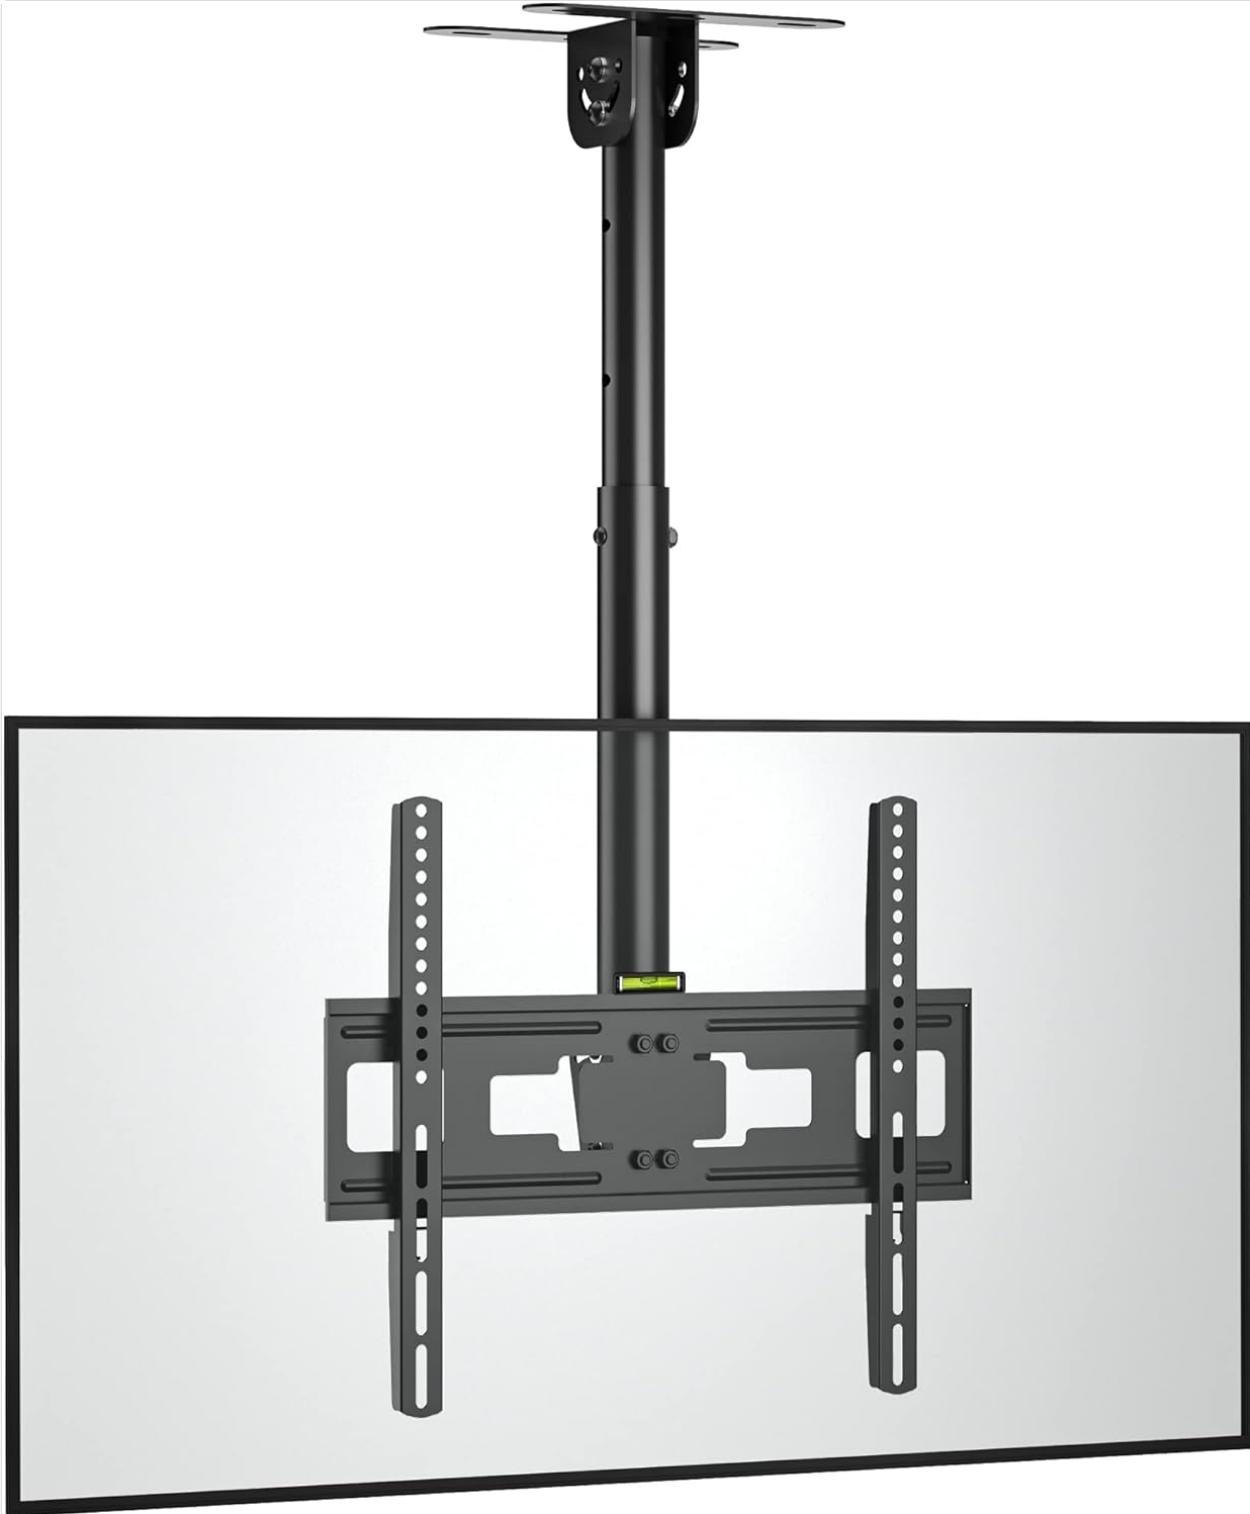


Image 1.1: The BONTEC OOXM3308 Ceiling TV Mount with a television attached.

2. SAFETY INFORMATION

WARNING: Failure to read and follow all instructions may result in personal injury, property damage, or voiding of warranty. Improper installation can lead to serious injury.

- Do not begin installation until you have read and understood all instructions and warnings contained in this manual.
- Ensure the mounting surface can safely support the combined weight of the mount and the television.
- Use only the provided hardware. Do not use damaged parts.
- This product is intended for indoor use only.

- Do not exceed the maximum weight capacity of 45 kg (99 lbs).
- Ensure VESA patterns are compatible (75x75mm to 400x400mm).
- Always use a qualified technician for installation if you are unsure about the process.
- Do not use concrete anchors on wood studs. Do not mount on drywall alone.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged before installation. If any parts are missing or defective, contact BONTEC customer support.

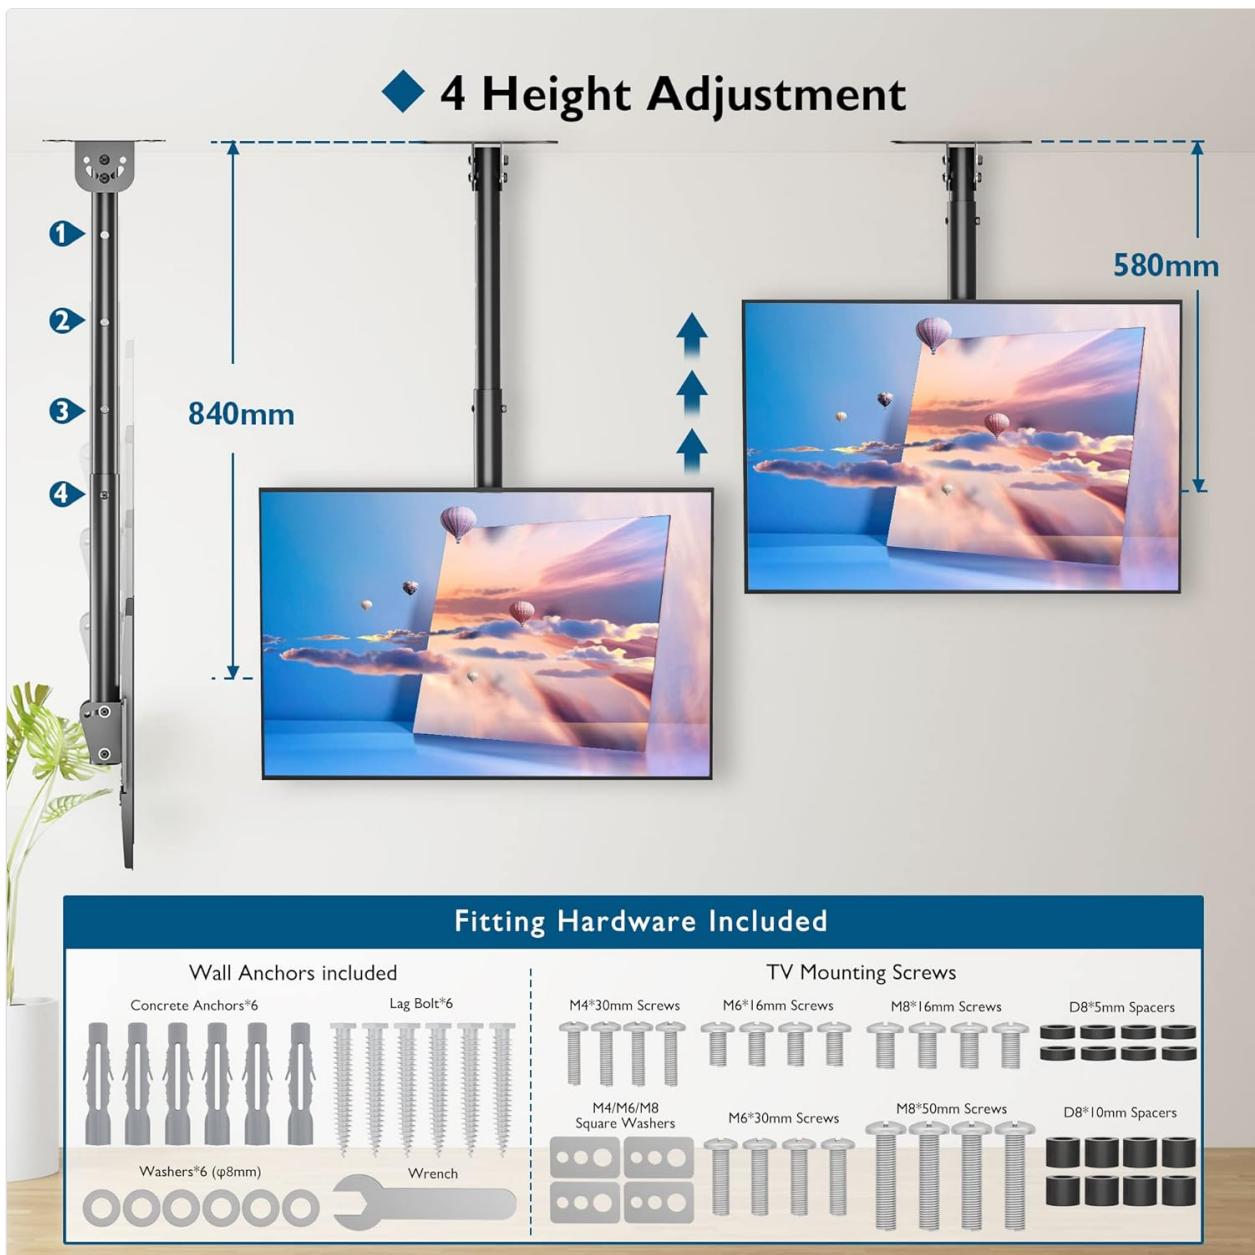


Image 3.1: Overview of height adjustment and included fitting hardware.

Fitting Hardware Included:

- Concrete Anchors (x6)
- Lag Bolts (x6)
- Washers ($\phi 8\text{mm}$) (x6)
- Wrench (x1)

TV Mounting Screws:

- M4*30mm Screws
- M6*16mm Screws
- M8*16mm Screws
- M4/M6/M8 Square Washers
- M6*30mm Screws
- M8*50mm Screws
- D8*5mm Spacers
- D8*10mm Spacers

4. PRODUCT FEATURES

The BONTEC OOXM3308 mount offers several features for optimal TV placement and viewing experience.



Image 4.1: Multiple features including forward tilt and swivel adjustment.

- **Universal Compatibility:** Designed for most 26-55 inch televisions.

- **Robust Construction:** Made from strong alloy steel, supporting up to 45 kg (99 lbs).
- **VESA Compliance:** Supports VESA patterns from 75x75mm to 400x400mm.
- **Adjustable Swivel:** Features a $\pm 90^\circ$ swivel adjustment for flexible viewing angles.
- **Tilting Mechanism:** The TV plate can be tilted downwards by 25° to reduce glare and optimize viewing.
- **Integrated Height Adjustment:** The mount offers an adjustable height range from 580mm to 840mm. Adjustments can be made using manual screws and the provided wrench.
- **Secure Ceiling Attachment:** Six locating holes ensure the mount is securely fastened to the ceiling.



Image 4.2: Illustration of the strong steel central column and secure locating holes.

◆ Compatible with 26"-55" Screen

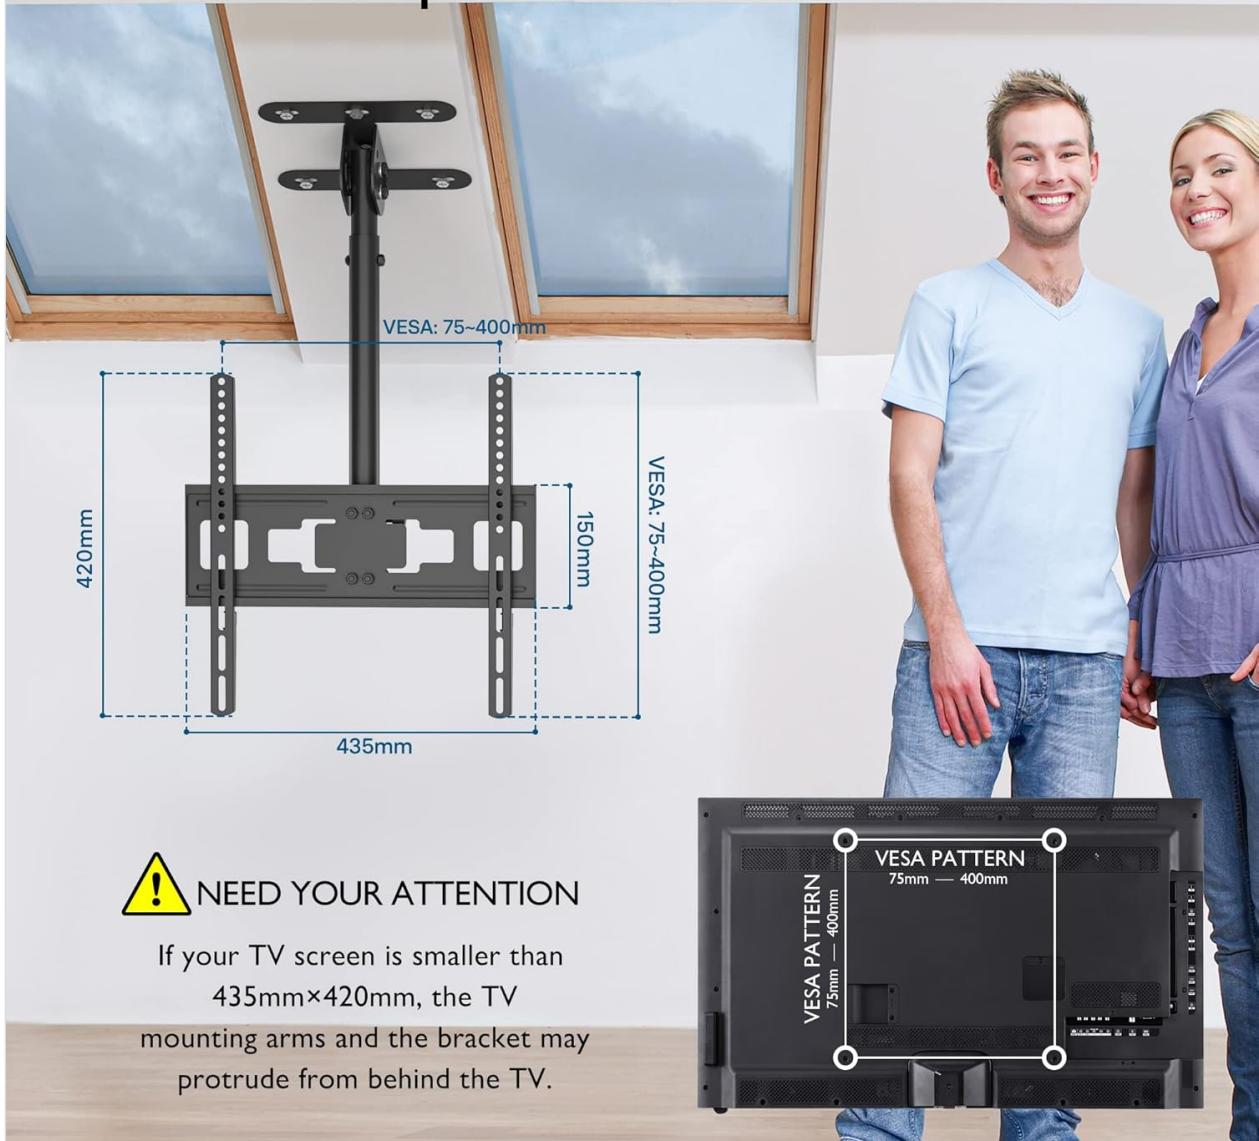


Image 4.3: VESA compatibility and screen size range (26-55 inches).

◆ Low-Profile Tilting Design



Image 4.4: Low-profile tilting design with maximum capacity and VESA specifications.

5. SETUP AND INSTALLATION


Follow these steps carefully for safe and secure installation.

5.1 Pre-Installation Checks

- **TV Weight:** Ensure your TV weighs no more than 45 kg (99 lbs).
- **VESA Pattern:** Check the VESA mounting holes on the back of your TV. They must be between 75x75mm and 400x400mm.
- **Ceiling Type:** Identify your ceiling type (wood stud, concrete, or brick) to use the correct hardware.

5.2 Mounting the Ceiling Plate

◆ Easy Installation

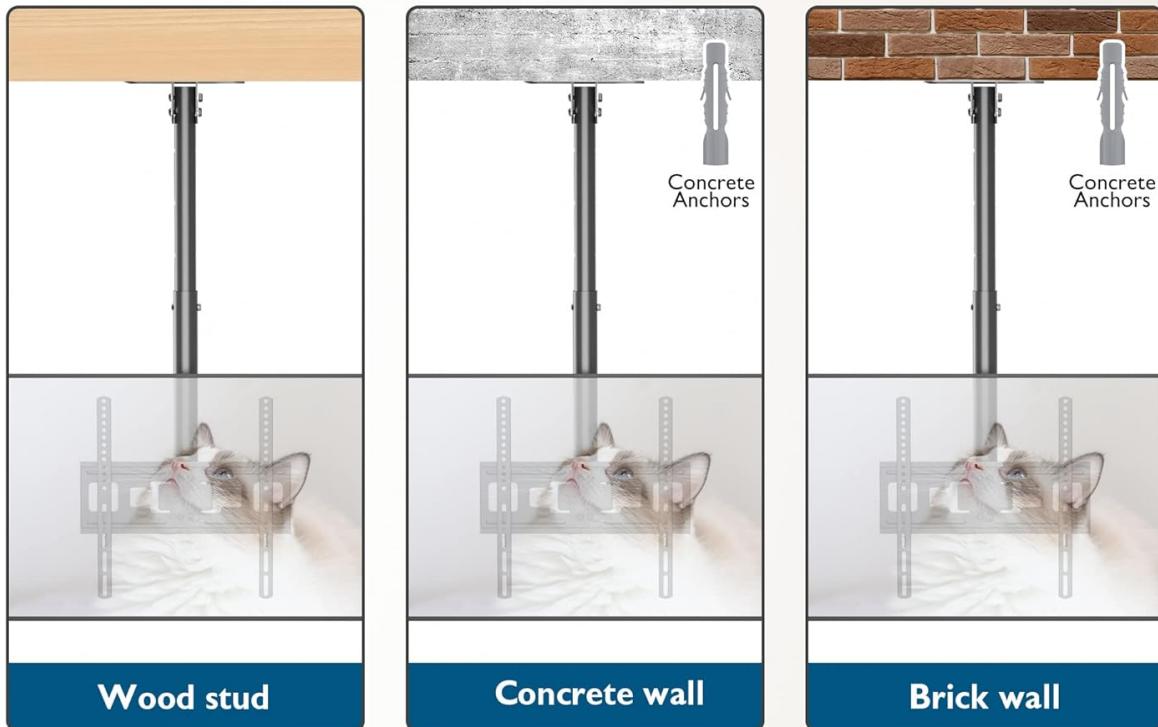

**Don't use concrete anchors on wood stud
and mount on drywall alone**

Image 5.1: Easy installation methods for various ceiling types.

1. Position the ceiling plate at the desired location. Use a pencil to mark the six mounting holes.
2. **For Wood Stud:** Drill pilot holes into the center of the wood stud. Secure the ceiling plate using the Lag Bolts and Washers.
3. **For Concrete/Brick Wall:** Drill holes using an appropriate drill bit for concrete/brick. Insert the Concrete Anchors into the drilled holes. Secure the ceiling plate using the Lag Bolts and Washers.
4. Ensure the ceiling plate is firmly attached and level.

5.3 Attaching the TV to the Mount

1. Attach the TV mounting arms to the back of your television using the appropriate M4, M6, or M8 screws and spacers from the provided hardware kit. Ensure the arms are centered and securely fastened.
2. Carefully lift the television and hook the mounting arms onto the main bracket of the ceiling mount.
3. Secure the TV to the mount using the safety screws or locking mechanism, if applicable, to prevent accidental dislodgement.



Image 5.2: The BONTEC ceiling TV mount with a television installed.

6. OPERATING INSTRUCTIONS

Once installed, the BONTEC OOXM3308 mount allows for various adjustments to achieve your preferred viewing angle.

6.1 Height Adjustment

The mount offers a height range of 580mm to 840mm. To adjust the height:

1. Loosen the manual screws on the central column.
2. Carefully slide the TV and lower column to the desired height.

3. Tighten the manual screws firmly to secure the height.

6.2 Tilting Adjustment

The TV plate can be tilted downwards by 25°.

1. Locate the tilt adjustment knob or mechanism on the mount.
2. Loosen the knob/mechanism.
3. Adjust the TV to the desired tilt angle.
4. Tighten the knob/mechanism to lock the tilt in place.

6.3 Swivel Adjustment

The mount allows for a ±90° swivel.

1. Gently rotate the TV to the left or right to achieve the desired viewing angle.
2. The swivel mechanism is designed to hold its position once adjusted.



Image 6.1: Examples of the wide range of applications for the BONTEC ceiling TV mount.

7. MAINTENANCE

- Periodically check all screws and connections to ensure they remain tight and secure.
- Clean the mount with a soft, dry cloth. Avoid abrasive cleaners or solvents.
- Do not hang objects from the mount or TV.

8. TROUBLESHOOTING

- **TV is not level:** Check the ceiling plate installation for levelness. Adjust the TV mounting arms if they allow for minor leveling adjustments.
- **Mount feels unstable:** Re-check all mounting screws and bolts. Ensure they are tightened according to the instructions. Verify the ceiling structure can support the weight.
- **Difficulty adjusting tilt/swivel:** Ensure no locking mechanisms or knobs are overtightened. Apply a small amount of silicone lubricant to moving parts if necessary, avoiding contact with electrical components.
- **Missing parts:** Refer to Section 3, "Package Contents." Contact BONTEC customer support for replacement parts.

9. SPECIFICATIONS

Specification	Detail
Brand	BONTEC
Model	OOXM3308
Compatible TV Sizes	26 - 55 inches
Weight Capacity	Up to 45 kg (99 lbs)
VESA Compatibility	75x75mm to 400x400mm
Tilt Angle	25° Downward
Swivel Angle	±90°
Height Adjustment Range	580mm - 840mm
Material	Alloy Steel
Mounting Type	Ceiling Mount
Product Weight	3.71 kg

10. WARRANTY AND SUPPORT

BONTEC products are designed for durability and performance. For warranty information, technical support, or assistance with installation, please contact BONTEC customer service through the retailer where the product was purchased or visit the official BONTEC website.

Please retain your proof of purchase for warranty claims.

© 2024 BONTEC. All rights reserved.