

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [DEWINNER](#) /

› [DEWINNER 20V Cordless Hedge Trimmer User Manual - Model DEW2285](#)

## DEWINNER DEW2285

# DEWINNER 20V Cordless Hedge Trimmer User Manual

MODEL: DEW2285

## 1. Important Safety Instructions

Always read and understand all safety warnings and instructions before operating this hedge trimmer. Failure to follow these instructions may result in electric shock, fire, and/or serious injury.

- **Personal Safety:** Always wear appropriate personal protective equipment, including safety glasses, gloves, and sturdy footwear. Avoid loose clothing that could get caught in moving parts.
- **Work Area Safety:** Keep the work area clean and well-lit. Do not operate the hedge trimmer in wet or damp conditions. Keep children and bystanders away from the operating area.
- **Electrical Safety:** This is a cordless tool. Ensure the battery is fully charged before use. Do not attempt to modify the battery or charger.
- **Tool Use and Care:** Do not force the tool. Use the correct tool for your application. Ensure the double safety switch and two-step trigger system are functioning correctly before each use. If the tool falls, the motor should stop immediately.
- **Maintenance:** Disconnect the battery before performing any maintenance, cleaning, or when storing the tool.

## 2. Product Overview

Familiarize yourself with the components of your DEWINNER 20V Cordless Hedge Trimmer to ensure safe and effective operation.

■ Blade Length:

**510MM**

■ No-Load Speed:

**1200RPM**

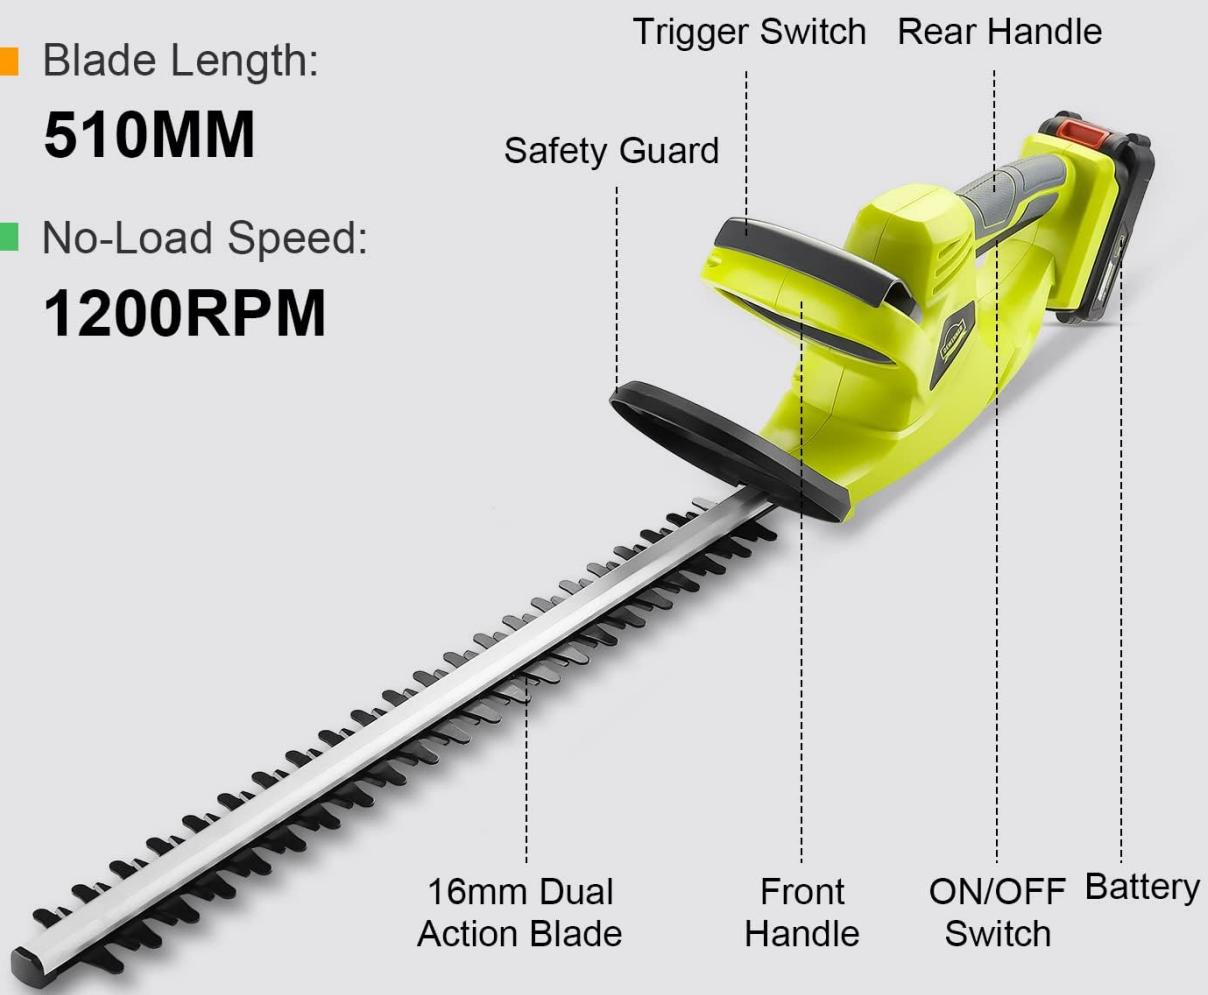


Figure 2.1: Main components of the DEWINNER 20V Cordless Hedge Trimmer. This image illustrates the main parts of the hedge trimmer: the 510mm dual-action blade, safety guard, front handle, trigger switch, rear handle, ON/OFF switch, and the removable 20V Li-ION battery.

#### Key Components:

- **510mm Dual-Action Blade:** Hardened steel blades designed for efficient cutting.
- **Safety Guard:** Protects hands from the blade.
- **Front Handle:** Ergonomic D-shaped handle for comfortable grip.
- **Rear Handle:** Provides additional grip and control.
- **Trigger Switch:** Activates the blade.
- **ON/OFF Switch:** Main power control.
- **20V Li-ION Battery:** Provides cordless power.
- **Battery Charger:** For recharging the Li-ION battery.
- **Blade Protection Cover:** For safe storage of the blade.

## 3. Setup

Follow these steps to prepare your hedge trimmer for use.

### 3.1 Charging the Battery

1. Ensure the battery is fully charged before first use. The included 20V Li-ION battery typically charges in approximately 1 hour with the fast charger.
2. Connect the charger to a standard power outlet.
3. Insert the battery into the charger. The indicator light on the charger will show the charging status.
4. Once fully charged, remove the battery from the charger.

### 3.2 Installing the Battery



Figure 3.1: Installing the battery. This image demonstrates the correct method for inserting the lithium-ion battery into the hedge trimmer's battery slot until it clicks securely into place.

1. Align the battery with the battery slot on the hedge trimmer.

2. Slide the battery into the slot until it clicks securely into place. Ensure it is firmly seated to prevent accidental dislodgement during operation.

### **3.3 Removing the Blade Protection Cover**

Carefully slide the blade protection cover off the blade before starting the trimmer. Store the cover in a safe place for later use.

## **4. Operating Instructions**

Follow these guidelines for safe and effective hedge trimming.

### **4.1 Starting the Hedge Trimmer**

The DEWINNER hedge trimmer features a double safety switch design and a two-step start trigger system for increased security. Both switches must be engaged simultaneously to start the tool.

1. Hold the hedge trimmer firmly with both hands using the ergonomic D-shaped front handle and the rear handle.
2. Engage the ON/OFF switch (usually located on the rear handle).
3. Press the trigger switch (located on the front handle) to start the blades. The blades will begin to move.
4. Release the trigger switch to stop the blades. The tool will stop immediately if the trigger is released.

### **4.2 Trimming Technique**



**1200RPM  
20V 2000mAh  
High efficiency**

Long endurance, one  
machine top 10 people

High efficiency  
High-speed cutting

Figure 4.1: Trimming a hedge. A user is shown holding the hedge trimmer with both hands, demonstrating the proper two-handed grip while trimming a hedge.

- Maintain a firm, balanced grip with both hands. The rubber-coated handles provide enhanced comfort and control.
- Move the trimmer smoothly and steadily along the hedge. The 51cm double-action blades operate at 1200 strokes per minute for quick and clean cuts.
- For optimal results, trim the sides of the hedge first, working from the bottom upwards. Then, trim the top of the hedge.
- Avoid cutting branches thicker than the maximum cutting capacity of 16mm.

# Upgrade the Rust-Proof Blade



Sharp high hardness, high wear  
resistance, smooth pruning



STURDY AND  
DURABLE

Figure 4.2: Blade in action. This image provides a close-up view of the hedge trimmer's dual-action blade in operation, effectively cutting through foliage.

## 5. Maintenance

Regular maintenance ensures the longevity and optimal performance of your hedge trimmer.

### 5.1 Blade Care

# Double Safety Switch Design Increased Security



Avoid damage caused by instability and accidental contact caused by one-handed operation



Figure 5.1: Rust-proof blade. This image focuses on the hedge trimmer's upgraded rust-proof blade, emphasizing its sharpness and durability for smooth pruning.

- After each use, remove the battery and clean the blades of any sap, leaves, or debris using a stiff brush or cloth.
- Apply a light machine oil or blade lubricant to the blades to prevent rust and ensure smooth operation. This is especially important at the end of the trimming season before storage.
- Inspect the blades for any damage or dullness. Sharpen or replace blades as necessary by a qualified technician.

## 5.2 Battery and Charger Care

- Store the battery in a cool, dry place away from direct sunlight and extreme temperatures.
- Do not store the battery fully discharged for extended periods. Charge it periodically if not in use.
- Keep the charger clean and free from debris.

## 5.3 General Cleaning and Storage



## Splash Baffle

Prevents most splashes  
of twigs



## Battery Indicator

Know charging status  
in time



Figure 5.2: Splash baffle and battery indicator. This image highlights the splash baffle, which helps prevent debris from splashing, and the battery indicator lights, which show the charging status.

- Wipe down the exterior of the hedge trimmer with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
- Always reattach the blade protection cover before storing the hedge trimmer.
- Store the tool and battery in a secure, dry place out of reach of children.

## 6. Troubleshooting

If you encounter issues with your hedge trimmer, refer to the following common problems and solutions.

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Hedge trimmer does not start.	Battery not installed correctly or discharged. Safety switches not engaged.	Ensure battery is fully charged and properly seated. Press both the ON/OFF switch and trigger switch simultaneously.
Reduced cutting performance.	Blades are dull, dirty, or obstructed.	Clean blades of debris. Lubricate blades. If dull, have them sharpened or replaced.
Battery not charging.	Charger not plugged in. Faulty battery or charger.	Check power connection. Try charging another compatible battery (if available). Contact support if issue persists.
Excessive vibration or noise.	Loose components or damaged blade.	Stop the tool immediately. Inspect for loose screws or damaged parts. Do not use if damaged.

## 7. Specifications

Detailed technical specifications for the DEWINNER 20V Cordless Hedge Trimmer.

Feature	Specification
Model Number	DEW2285
Power Source	Battery Powered
Battery Type	20V Lithium-ion, 2.0Ah
Blade Length	51 cm (510 mm)
Cutting Width	1.6 cm (16 mm)
No-Load Speed	1200 RPM
Weight	2.5 Kilograms
Product Dimensions (L x W x H)	91 x 18 x 15 cm
Blade Material	Alloy Steel

## 8. Warranty and Support



Your DEWINNER 20V Cordless Hedge Trimmer comes with a standard 2-year warranty from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical assistance, or any questions regarding your product, please contact DEWINNER


customer support. Please have your model number (DEW2285) and proof of purchase available when contacting support.

© 2025 DEWINNER. All rights reserved.

## Related Documents - DEW2285

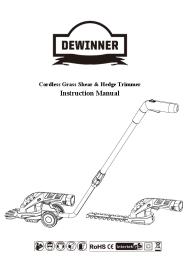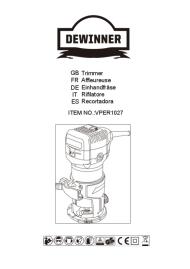	<p><a href="#"><u>DEWINNER Cordless Grass Shear &amp; Hedge Trimmer ET1502 Instruction Manual</u></a> Comprehensive instruction manual for the DEWINNER Cordless Grass Shear &amp; Hedge Trimmer (Model ET1502), covering safety, operation, assembly, maintenance, and blade replacement.</p>
	<p><a href="#"><u>DEWINNER VPER1027 Trimmer - Instruction Manual &amp; Safety Guide</u></a> Comprehensive instruction manual for the DEWINNER VPER1027 Trimmer, covering specifications, safety warnings, assembly, operation, and maintenance for woodworking applications.</p>
	<p><a href="#"><u>DEWINNER DE-T1088 Angle Grinder User Manual and Safety Guide</u></a> Comprehensive guide for the DEWINNER DE-T1088 Angle Grinder, covering intended use, safety instructions, technical specifications, mounting, operation, and maintenance. Includes safety warnings and electrical safety information.</p>
	<p><a href="#"><u>DE-T237 Child Detector User Manual - DEWINNER Metal Detector for Kids</u></a> Comprehensive user manual for the DE-T237 Child Detector by DEWINNER. Learn how to assemble, operate, and maintain your metal detector for safe and fun treasure hunting.</p>
	<p><a href="#"><u>DEWINNER DE-T1088 Angle Grinder: User Manual &amp; Safety Guide</u></a> Comprehensive user manual and safety guide for the DEWINNER DE-T1088 Angle Grinder. Learn about intended use, safety instructions, technical specifications, mounting, operation, and maintenance for this 850W power tool.</p>

Documents - DEWINNER – DEW2285

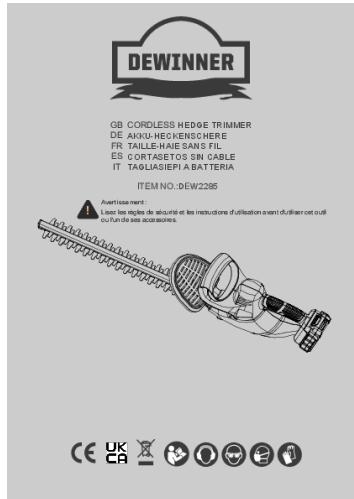

### [pdf] Instructions

ManualsLib Makes it easy to find manuals online! Search through 700 000 online and Provided By MANUALSLIB COM manualslib Instructions d utilisation DEWINNER Taille Haies sans Fil 20V Double Interrupteur et Poignée avec Li ION Batterie 2 0Ah Chargeur 65CM Lame Asymétrique Alimenté par pile Vert Amazon fr Jardin C1ZDfCgEvAL ref dp product quick view m media amazon images I ||| GB CORDLESS HEDGE TRIMMER DE AKKU-HECKENSCHERE FR TAILLE-HAIE SANS FIL ES CORTASETO SIN CABLE IT TAGLIASIEPI A BATTERIA ITEM NO.:DEW2285 Avertissement: Lisez les rgles de scurit et les instructions d utilisation avant d utiliser cet outil ou l un de ses accessoires. English . . . . . lang:en score:20 filesize: 6.69 M page\_count: 39 document date: 2024-09-28