

[Manuals.plus](#) /

> [YAOHUIMI](#) /

> YAOHUIMI Replacement Remote Control for GE AC Air Conditioners (Models: WJ26X22901, AHD06LZQ1, AHD08LZQ1, ESAQ406P, ESAQ406T, ESAQ408P, ESAQ406TZ, AHD06LX, AHD08LX, PHC06, PHC08, PHC06LY, PHC08LY, AHD06LXW1, AHD08LXW1)

## YAOHUIMI A42022031706

# YAOHUIMI Replacement Remote Control for GE AC Air Conditioners

Model: A42022031706

## INTRODUCTION

---

This manual provides comprehensive instructions for the YAOHUIMI Replacement Remote Control, designed for use with various GE AC Air Conditioner models. This remote control offers a direct replacement solution, requiring no complex programming for most compatible units. Please refer to the compatibility list to ensure your air conditioner model is supported.

### **Important Note:**

- This is not a universal remote control.
- Verify your air conditioner model or original remote control model against the compatibility list before use.

## COMPATIBILITY

---

This remote control is compatible with the following GE AC Air Conditioner models:

- WJ26X22901
- AHD06LZQ1, AHD08LZQ1
- ESAQ406P, ESAQ406T, ESAQ408P, ESAQ406TZ
- AHD06LX, AHD08LX
- PHC06, PHC08
- PHC06LY, PHC08LY
- AHD06LXW1, AHD08LXW1

## SETUP

---

### 1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two (2) AAA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.

**Note:**

- New batteries are recommended for optimal performance.
- If the remote does not respond, check battery polarity or replace with fresh batteries.

### 2. Initial Use

This replacement remote control is designed to work immediately with compatible GE AC units without requiring any programming. Simply install the batteries and point the remote towards your air conditioner.

## OPERATING INSTRUCTIONS

---

### Remote Control Layout

The following image illustrates the layout of the remote control and its various buttons.

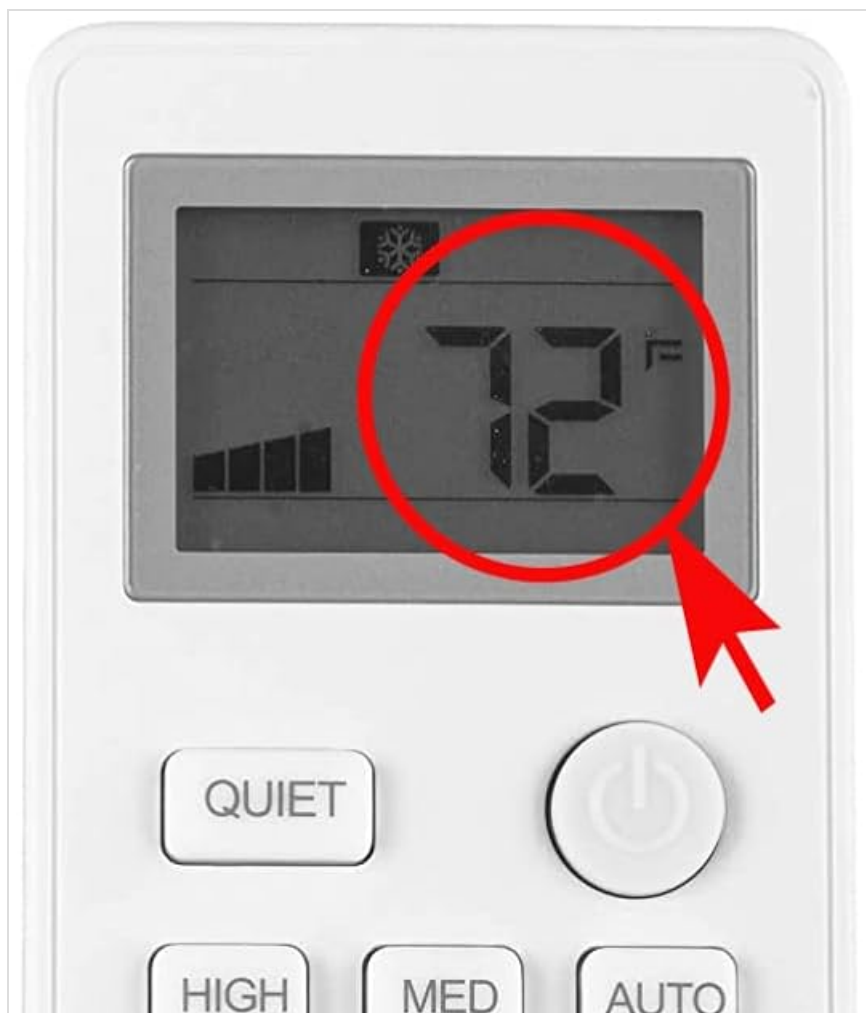




Image: Front view of the YAOHUI MI Replacement Remote Control. The remote is white with a grey LCD screen at the top displaying "72°F" and a snowflake icon, indicating cooling mode. Below the screen are various rectangular and oval-shaped buttons. Key buttons visible include POWER (circular, top right), QUIET, HIGH, MED, AUTO, TEMP UP/DOWN (arrow-shaped), FAN, COOL, ENERGY SAVE, TIMER UP/ON/OFF/DOWN, DEHUM, F/C, SLEEP, LOCK, LIGHT, and RESET. A red circle and arrow highlight the temperature display on the LCD screen.

## Button Functions

Button	Function
<b>POWER</b>	Turns the air conditioner ON or OFF.
<b>TEMP UP / TEMP DOWN</b>	Adjusts the desired temperature setting.
<b>COOL</b>	Activates the cooling mode.

Button	Function
<b>FAN</b>	Cycles through fan speed settings (e.g., Low, Medium, High, Auto).
<b>AUTO</b>	Sets the air conditioner to automatically select the operating mode and fan speed based on the room temperature.
<b>HIGH / MED / QUIET</b>	Directly selects fan speed settings. QUIET mode typically reduces fan noise.
<b>ENERGY SAVE</b>	Activates energy-saving mode, which may cycle the compressor and fan to maintain temperature more efficiently.
<b>TIMER UP / TIMER DOWN</b>	Adjusts the timer settings for scheduled ON/OFF operations.
<b>TIMER ON/OFF</b>	Activates or deactivates the programmed timer function.
<b>DEHUM</b>	Activates the dehumidification mode to reduce humidity in the room.
<b>F/C</b>	Toggles the temperature display between Fahrenheit (°F) and Celsius (°C).
<b>SLEEP</b>	Activates sleep mode, which adjusts temperature and fan speed for comfortable sleep and energy efficiency.
<b>LOCK</b>	Locks the remote control buttons to prevent accidental changes. Press again to unlock.
<b>LIGHT</b>	Controls the backlight of the remote's LCD screen or the display light on the AC unit (if supported).
<b>RESET</b>	Resets the remote control to its default settings. Use if the remote is not functioning correctly.

## MAINTENANCE

---

### Battery Replacement

Replace batteries when the remote's display dims or the remote becomes unresponsive. Always replace both batteries simultaneously with new AAA batteries.

### Cleaning

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these can damage the remote's surface or internal components.

### Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote.

## TROUBLESHOOTING

---

- **Remote not responding:**

- Check battery polarity.
  - Replace batteries with new ones.
  - Ensure there are no obstructions between the remote and the AC unit's receiver.
  - Point the remote directly at the AC unit.
- **AC unit not responding to specific functions:**
    - Some advanced functions may depend on the specific features of your GE AC model. Refer to your AC unit's manual for supported functions.
    - Try pressing the RESET button on the remote.
  - **Temperature display incorrect:**
    - Press the F/C button to toggle between Fahrenheit and Celsius.

## SPECIFICATIONS

---

- **Model Number:** A42022031706
- **Power Source:** 2 x AAA Batteries (not included)
- **Dimensions:** 7.4 x 3.5 x 1.14 inches (approximate)
- **Item Weight:** 2.29 ounces (approximate, without batteries)
- **Compatible Brands:** GE (General Electric)
- **Special Feature:** Display in Both Fahrenheit and Celsius

## WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the seller's policies or contact the manufacturer directly. Keep your purchase receipt for any warranty claims.

For further assistance, you may also consult the original instruction manual for your specific GE AC Air Conditioner model.