

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ReplacementScrews](#) /

› [ReplacementScrews VESA Compatible M4 10mm TV/Monitor Wall Mount Screws User Manual](#)

ReplacementScrews M4 10mm (RSAZN2361911)

ReplacementScrews VESA Compatible M4 10mm TV/Monitor Wall Mount Screws User Manual

Model: M4 10mm (RSAZN2361911)

1. INTRODUCTION

This manual provides instructions for the proper installation and use of the ReplacementScrews VESA Compatible M4 10mm TV/Monitor Wall Mount Screws. This set is designed to facilitate the secure mounting of televisions and monitors to VESA-compatible brackets.

Package Contents:

- 4 x M4x10mm Screws (Black Oxide Plated)
- 4 x Split Lock Washers
- 4 x Extra Large Flat Washers



Image 1.1: Contents of the ReplacementScrews M4 10mm kit, showing four screws, four flat washers, and four split lock washers.

2. SAFETY INFORMATION

- Always consult your TV or monitor's instruction manual for specific mounting requirements and recommended screw lengths.
- Ensure the wall mount bracket is securely installed according to its manufacturer's instructions.
- Do not overtighten screws, as this can damage the equipment or the screws themselves.
- Keep small parts away from children to prevent choking hazards.

3. PRODUCT SPECIFICATIONS

Specification	Detail
Screw Type	M4 (Metric)
Screw Length	10mm
Head Diameter	8mm
Material	Carbon Steel
Exterior Finish	Black Oxide
Head Style	Pan Head
Thread Type	Right Hand, Fully Threaded
Compatible VESA Patterns	75x75mm, 100x100mm

Specification	Detail
Number of Pieces	4 Screws, 4 Flat Washers, 4 Split Lock Washers
Model Number	RSAZN2361911



Image 3.1: Detailed dimensions of the M4 10mm screw and accompanying washers.

4. SETUP AND INSTALLATION

Follow these steps to securely mount your TV or monitor using the ReplacementScrews M4 10mm kit.

- 1. Verify Compatibility:** Before beginning, confirm that your TV or monitor requires M4x10mm screws for VESA mounting. Refer to your device's instruction manual. These screws are compatible with VESA patterns such as 75x75mm and 100x100mm.
- 2. Prepare the Mount:** Ensure your wall mount bracket is correctly installed on the wall according to its manufacturer's

instructions.

3. **Assemble the Screw and Washers:** For each mounting point, place one large flat washer onto an M4x10mm screw, followed by one split lock washer. The flat washer should be against the screw head, and the split lock washer should be between the flat washer and the mounting surface.



Image 4.1: Correct assembly of screw, flat washer, and split lock washer.

4. **Attach Device to Mount:** Carefully align the VESA mounting holes on the back of your TV or monitor with the corresponding holes on the wall mount bracket. Insert the assembled screws through the bracket and into the device's mounting holes.
5. **Secure the Device:** Hand-tighten each screw until snug. Then, use a screwdriver to gently tighten them further. Do not overtighten. The split lock washers will provide tension to prevent loosening due to vibrations.



Image 4.2: Four assembled screws and washers ready for installation.

5. USAGE GUIDELINES

These screws are designed for mounting TVs and monitors to VESA-compatible wall mounts. The M4 10mm length is standard for many monitors and smaller LCD/LED TVs (typically 32 inches and below). Always ensure the screw length is appropriate for your specific device to avoid damage to internal components or insufficient thread engagement. The black oxide plating provides corrosion resistance and a discreet appearance that blends with most TV and mount components.

6. MAINTENANCE

The ReplacementScrews M4 10mm kit requires minimal maintenance. Periodically check the tightness of the screws to ensure the TV or monitor remains securely mounted. Do not use abrasive cleaners or harsh chemicals on the screws, as this may damage the black oxide finish. A soft, dry cloth is sufficient for cleaning if necessary.

7. TROUBLESHOOTING

- **Screws do not fit:**
 - Ensure you have the correct screw diameter (M4) and length (10mm) as specified by your TV/monitor manufacturer.
 - Verify that the VESA mounting holes on your device are not stripped or obstructed.
- **TV/Monitor feels loose after mounting:**
 - Confirm that all four screws are properly installed with both flat and split lock washers.
 - Gently re-tighten the screws, ensuring they are snug but not overtightened.
 - Inspect the wall mount bracket for any signs of instability or improper installation.

- **Screws are too long:**

- If the 10mm screws are too long for your specific application, you may need shorter M4 screws or additional spacers (not included in this kit) to achieve the correct fit. Consult your device's manual for the exact required screw length.

8. WARRANTY INFORMATION

Specific warranty details for ReplacementScrews products are not provided within this manual. For information regarding product warranty, returns, or exchanges, please refer to the official ReplacementScrews website or contact their customer support directly. Purchase platforms like Amazon typically offer their own return policies which may apply.

9. SUPPORT

For further assistance or inquiries about ReplacementScrews products, please visit the official [ReplacementScrews Store on Amazon](#) or their dedicated customer support channels.

