

## Jimmyjane JJ40026

# JIMMYJANE APEX Vibrator Instruction Manual

Model: JJ40026

## 1. INTRODUCTION

Thank you for choosing the JIMMYJANE APEX Vibrator. This manual provides essential information for the safe and effective use of your device. Please read it thoroughly before first use and retain it for future reference.

## 2. PRODUCT OVERVIEW

The JIMMYJANE APEX Vibrator is a multi-functional personal massager designed for targeted stimulation. It features a combination of powerful motors, suction, tongue-motion, and vibration patterns to enhance your experience.

- **Four Powerful Motors:** Provides diverse and intense sensations.
- **Multiple Patterns:** Includes three suction patterns, seven tongue-motion patterns, and ten vibration patterns.
- **G-Spot Stimulation Handle:** Ergonomically designed for precise internal stimulation.
- **Silky-Soft Silicone:** Made from body-safe, smooth silicone for comfort.
- **Waterproof Design:** Suitable for use in wet environments and easy cleaning.



- Intense suction for heightened pleasure
- Seven tongue motion patterns
- Ten patterns of vibration

Image 2.1: The JIMMYJANE APEX Vibrator shown with its two included pleasure attachments. This image highlights the device's main body, control panel, and the distinct shapes of the attachments designed for varied sensations, including intense suction, tongue-motion, and vibration.

## 3. SETUP

### 3.1 Initial Charging

Before first use, fully charge your APEX Vibrator. Use the provided magnetic USB charging cord.

1. Connect the magnetic end of the USB cord to the charging port on the device.
2. Plug the USB-A end into a standard USB power adapter (not included) or a computer USB port.
3. The indicator light on the device will illuminate during charging and change when fully charged.
4. A full charge typically takes 1-2 hours and provides up to 1-2 hours of use, depending on intensity settings.



- Great for clitoral, g-spot, anal and nipple stimulation
- Magnetic USB charging cord
- Waterproof

Image 3.1: The JIMMYJANE APEX Vibrator shown connected to its magnetic USB charging cord. This image illustrates the charging method and highlights the device's waterproof design, making it suitable for various uses and easy cleaning.

### 3.2 First-Time Cleaning

Before initial use and after each use, clean the device thoroughly.

- Wash the silicone parts with warm water and a mild, toy-safe soap or a specialized toy cleaner.
- Rinse thoroughly and pat dry with a lint-free cloth.
- Avoid using harsh chemicals, alcohol-based cleaners, or petroleum-based lubricants, as these can damage the silicone.

## 4. OPERATING INSTRUCTIONS

### 4.1 Power On/Off

- To turn on: Press and hold the power button (usually the central button) for 2-3 seconds until the device vibrates or the indicator light illuminates.
- To turn off: Press and hold the power button again for 2-3 seconds until the device stops.

## 4.2 Changing Modes and Intensity

The APEX Vibrator offers various patterns and intensities. Refer to the control panel on your device, which typically includes buttons for:

- **Vibration Patterns:** Press the vibration button (often marked with a wave icon) to cycle through the 10 vibration patterns.
- **Suction Patterns:** Press the suction button to cycle through the 3 suction patterns.
- **Tongue-Motion Patterns:** Press the tongue-motion button to cycle through the 7 tongue-motion patterns.
- **Intensity Adjustment:** Use the '+' and '-' buttons to increase or decrease the intensity of the selected pattern.

## 4.3 Usage Guidance

The unique design of the APEX Vibrator targets sensitive areas with concentrated vibrations and sensations. Experiment with the different attachments, patterns, and intensities to discover what is most pleasurable for you.



Image 4.1: A person holding the JIMMYJANE APEX Vibrator, demonstrating its ergonomic design and how it can be comfortably held during use. This image emphasizes the device's ability to target sensitive areas with concentrated vibrations.

## 5. MAINTENANCE

### 5.1 Cleaning

Regular cleaning ensures hygiene and prolongs the life of your device.

- Always clean the device before and after each use.
- Wash with warm water and a mild, antibacterial soap or a dedicated toy cleaner.
- Rinse thoroughly to remove all soap residue.
- Dry completely with a soft, lint-free cloth or air dry.
- Do not submerge the charging port area unless specifically designed for full submersion (refer to specifications).

### 5.2 Storage

- Store the device in a clean, dry place, away from direct sunlight and extreme temperatures.
- Keep it separate from other toys made of different materials to prevent material degradation. The included cloth storage bag is ideal for this purpose.
- Ensure the device is fully charged before storing for extended periods to maintain battery health.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device fully using the magnetic USB cord.
Weak or inconsistent vibration/suction.	Low battery.	Recharge the device.
Controls are unresponsive.	Temporary software glitch or low battery.	Turn the device off and on again. If issue persists, fully charge the device.
Device feels uncomfortable or causes irritation.	Improper use, allergic reaction, or insufficient lubrication.	Discontinue use immediately. Ensure proper lubrication. Consult a medical professional if irritation persists.

## 7. SPECIFICATIONS

- **Model Number:** JJ40026
- **Material:** Silky-Soft Silicone (Note: Product specifications may sometimes list 'Plastic' for internal components, but the primary contact material is silicone.)
- **Dimensions:** Approximately 3.94 x 1.97 x 0.5 inches
- **Weight:** Approximately 15.52 ounces
- **Power Source:** Rechargeable battery via magnetic USB charging cord
- **Charge Time:** 1-2 hours
- **Run Time:** Up to 1-2 hours (depending on intensity)
- **Waterproof:** Yes
- **Manufacturer:** Pipedream Products

## 8. SAFETY INFORMATION

- This product is intended for adult use only.
- Consult a healthcare professional before use if you are pregnant, have a pacemaker, or any other medical condition.
- Discontinue use immediately if you experience any discomfort, pain, or irritation.
- Do not use on broken or irritated skin.
- Keep out of reach of children.
- Use only water-based lubricants with this device to avoid damaging the silicone material.
- Do not modify or attempt to repair the device yourself. This may void the warranty and pose safety risks.

## 9. WARRANTY AND SUPPORT

For warranty information, product support, or any questions not covered in this manual, please contact JIMMYJANE customer service through their official website or the retailer from whom you purchased the product. Please have your model number (JJ40026) and proof of purchase available.