

[Manuals.plus](#) /

› [CHITA](#) /

› CHITA Modern Fabric Sofa Couch 73.6" W User Manual

CHITA Modern Fabric Sofa Couch 73.6" W

CHITA Modern Fabric Sofa Couch 73.6" W User Manual

Model: Modern Fabric Sofa Couch 73.6" W

Brand: CHITA

1. INTRODUCTION

Thank you for choosing the CHITA Modern Fabric Sofa Couch. This manual provides essential information for the safe assembly, operation, maintenance, and troubleshooting of your new sofa. Please read these instructions carefully before assembly and retain them for future reference.



Image 1: The CHITA Modern Fabric Sofa Couch in a contemporary living room.

2. SAFETY INFORMATION

- Ensure all components are securely fastened before use.
- Do not stand on the sofa or use it as a step stool.
- Avoid placing hot items directly on the fabric.
- Keep sharp objects away from the upholstery to prevent damage.
- Periodically check all connections and tighten if necessary.
- Keep children and pets away from the assembly area.

3. PACKAGE CONTENTS

Your CHITA Modern Fabric Sofa Couch package includes the following components:

- Sofa Base Sections (2)
- Sofa Backrest Sections (2)
- Armrests (2)
- Solid Wood Legs (8)
- Thumb Screws for assembly
- Decorative Pillows (2)



Image 2: Sofa structure layout illustrating key components like high-density foam, solid wood frame, and legs.

4. SETUP AND ASSEMBLY

The CHITA Modern Fabric Sofa Couch is designed for easy, tool-free assembly. Follow these steps:

1. **Unpack Components:** Carefully remove all parts from the packaging. Ensure all listed components are present.
2. **Connect Base and Back:** Align the sofa base sections with the backrest sections. Use the provided thumb screws to securely connect them.
3. **Attach Arms:** Slide the armrests onto the designated slots on the side of the sofa frame. Secure them with the remaining thumb screws.
4. **Screw on Feet:** Turn the sofa over carefully. Screw the solid wood legs into the pre-drilled holes at the bottom of the sofa. Ensure they are tightened firmly.
5. **Place Cushions and Pillows:** Position the seat and back cushions, and place the two decorative pillows as desired.

Assembly Video Guide

Video 1: Official CHITA Sofa Installation video demonstrating the assembly process.

5. OPERATING (USAGE)

Your CHITA Modern Fabric Sofa Couch is designed for comfortable seating in living rooms and apartments. The generously padded cushions and removable arm pillows provide versatile comfort. The sofa is suitable for general indoor use.



Image 3: Front view of the assembled CHITA Modern Fabric Sofa Couch.

6. MAINTENANCE AND CARE

To ensure the longevity and appearance of your sofa, follow these care instructions:

- **Regular Cleaning:** Vacuum regularly using an upholstery attachment to remove dust and debris.
- **Spot Cleaning:** For spills, blot immediately with a clean, dry cloth. Do not rub, as this can spread the stain. For stubborn stains, use a mild fabric cleaner and test on an inconspicuous area first.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause fabric fading. Position your sofa away from direct sun or use curtains/blinds.
- **Rotate Cushions:** Periodically rotate and fluff cushions to maintain their shape and even out wear.
- **Avoid Harsh Chemicals:** Do not use harsh detergents, bleach, or abrasive cleaners, as these can damage the fabric.

7. TROUBLESHOOTING

If you encounter any issues with your sofa, refer to the following common solutions:

Problem	Possible Cause	Solution
Sofa feels wobbly	Loose leg or connection screws.	Check and tighten all leg and frame connection screws. Ensure legs are fully screwed in.
Fabric appears wrinkled or creased	Normal during shipping and initial use.	Allow time for the fabric to relax. Gentle steaming can help remove persistent wrinkles.
Cushions losing shape	Lack of rotation or fluffing.	Regularly rotate and fluff cushions to redistribute filling and maintain shape.

8. SPECIFICATIONS

Key specifications for the CHITA Modern Fabric Sofa Couch:

- **Brand:** CHITA
- **Model:** Modern Fabric Sofa Couch 73.6" W
- **Color:** Charcoal
- **Product Dimensions:** 16.3"D x 73.6"W x 72.4"H (Note: There is a discrepancy in the provided data for height, 72.4"H vs 32.68"H. Please refer to product packaging for exact dimensions.)
- **Seat Height:** 17.7 Inches
- **Frame Material:** Wood
- **Upholstery Material:** Fabric
- **Assembly Required:** Yes
- **Number of Pieces:** 3 (Sofa, 2 Pillows)
- **Style:** Modern

9. WARRANTY AND SUPPORT

For warranty information, customer support, or to purchase replacement parts, please visit the official CHITA Living store or contact their customer service directly.

You can find more information and contact details at the [CHITA Living Store on Amazon](#).

