

[Manuals.plus](#) /

› [PayLessHere](#) /

› PayLessHere Electric Lawn Mower Grass Cutter Machine User Manual

PayLessHere Electric Lawn Mower

PayLessHere Electric Lawn Mower User Manual

Model: Electric Lawn Mower | Brand: PayLessHere

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your PayLessHere Electric Lawn Mower. Please read all instructions carefully before assembly, operation, or maintenance. Keep this manual for future reference.



Figure 1: Overall view of the PayLessHere Electric Lawn Mower.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions to reduce the risk of fire, electric shock, and personal injury.

- Read and understand all instructions before operating the appliance.
- Wear appropriate personal protective equipment, including eye protection, hearing protection, and sturdy footwear.
- Keep children and bystanders away from the operating area.
- Do not operate the mower in wet conditions or rain.
- Inspect the area for objects that could be thrown by the blade before mowing.
- Always disconnect the power supply before cleaning, adjusting, or performing maintenance.

- Use only extension cords suitable for outdoor use and rated for the mower's power requirements.

3. PACKAGE CONTENTS

Verify that all items are present upon unpacking:

- Electric Lawn Mower Unit
- Handlebar Assembly (Upper and Lower Sections)
- Grass Collection Box (25L capacity)
- Securing Knobs, Washers, and Bolts for Handlebars
- Cable Clips
- Instruction Manual

Video 1: Lawn Mower Installation Guide. This video demonstrates the assembly process for a similar electric lawn mower, including attaching handlebars and the grass collection box.

4. SETUP AND ASSEMBLY

Follow these steps to assemble your electric lawn mower:

1. **Attach Lower Handlebar:** Secure the lower handlebar section to the main mower unit using the provided securing knobs, washers, and bolts. Ensure it is firmly tightened.
2. **Attach Upper Handlebar:** Connect the upper handlebar section to the lower handlebar using the remaining securing knobs, washers, and bolts.
3. **Secure Power Cable:** Use the cable clips to neatly secure the power cable along the handlebar to prevent it from interfering with operation.
4. **Assemble Grass Collection Box:** If the grass collection box is not pre-assembled, follow the instructions to attach the fabric bag to its frame.
5. **Install Grass Collection Box:** Lift the rear deflector of the mower and align the attachment hooks of the grass collection box. Place the box into position until it clicks securely.



Figure 2: Assembled electric lawn mower ready for use.

5. OPERATING INSTRUCTIONS

5.1 Power Connection

Connect the mower's power cord to a suitable outdoor-rated extension cord. Ensure the connection is secure and the extension cord is routed away from the cutting path.



Figure 3: Power connection for the electric lawn mower.

5.2 Starting and Stopping

To start the mower, press and hold the safety button, then pull back the bar lever. Release the bar lever to stop the mower.

5.3 Adjusting Cutting Height

The mower features 3 levels of height adjustment. To change the cutting height, locate the adjustment lever near the wheels. Move the lever to the desired position (1st, 2nd, or 3rd gear) to set the blade height from 1 inch to 2.2 inches above ground.

- **1st Gear:** 1 inch above ground

- **2nd Gear:** 1.6 inches above ground
- **3rd Gear:** 2.2 inches above ground

HEIGHT ADJUSTABLE

Manual adjustment / 3 heights



Manual height adjustment



Figure 4: Cutting height adjustment mechanism.

5.4 Mowing Tips

- For thick grass, start by mowing at the highest setting before switching to a lower setting.
- Overlap cutting paths slightly to ensure even coverage.
- Empty the grass collection box regularly to maintain optimal performance.

Video 2: Goplus Electric Lawn Mower Operation. This video demonstrates the starting, stopping, and general mowing process of a similar electric lawn mower.

Video 3: Electric Lawn Mower Grass Cutter in action. This video shows the mower being used to cut grass, highlighting its ease of use and grass collection.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your lawn mower.

- **Cleaning:** After each use, disconnect the power and clean the mower deck and grass collection box. Remove any grass clippings or debris.
- **Blade Inspection:** Periodically inspect the blade for sharpness and damage. A dull or damaged blade can affect cutting performance.
- **Storage:** Store the mower in a dry, covered area. The handlebars can be folded for compact storage.



Figure 5: Removable grass collection box for easy emptying.

7. TROUBLESHOOTING

If you encounter issues, refer to this section for common problems and solutions.

Problem	Possible Cause	Solution
Mower does not start	Power cord not connected; Safety button/bar lever not engaged	Check power connection; Ensure safety button is pressed and bar lever is pulled.

Problem	Possible Cause	Solution
Poor cutting performance	Dull blade; Incorrect cutting height; Grass too long/wet	Sharpen/replace blade; Adjust cutting height; Mow dry grass.
Excessive vibration	Damaged/unbalanced blade; Loose components	Inspect/replace blade; Check for loose screws/bolts.

8. SPECIFICATIONS

Feature	Detail
Brand	PayLessHere
Power Source	Corded Electric
Motor	12 Amp
Cutting Width	13 Inches
Cutting Height Adjustment	3 Levels (1 inch to 2.2 inches)
Grass Collection Box Capacity	25 Liters
Item Weight	15.62 Pounds
Product Dimensions	14.5"D x 39.8"W x 38.8"H
Operation Mode	Automatic

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official PayLessHere website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question