

[Manuals.plus](#) /

› [Owigit](#) /

› Owigit Washer Drain Pump Instruction Manual

Owigit Washer Drain Pump

Owigit Washer Drain Pump Instruction Manual

Model Compatibility: Kenmore 110.47512602, 110.47532602, 110.47561601, 110.47571600, 110.47531700, 110.47511702, 110.47561600

1. INTRODUCTION

This instruction manual provides essential information for the proper installation, operation, and maintenance of your Owigit Washer Drain Pump. Please read this manual thoroughly before beginning any procedures to ensure safe and effective use. This pump is designed as a replacement part for various Kenmore washer models.

2. PRODUCT OVERVIEW

The Owigit Washer Drain Pump is a critical component responsible for removing water from your washing machine during the drain cycle. It is engineered for compatibility with specific Kenmore washer models, ensuring efficient water expulsion and proper machine function.



Figure 2.1: Owigift Washer Drain Pump. This image displays the complete drain pump assembly, featuring its white plastic housing, internal impeller mechanism, and electrical connection points. The pump is designed to efficiently remove water from washing machines.

3. COMPATIBILITY

This drain pump is a direct replacement for the following Kenmore washer models:

- 110.47512602
- 110.47532602
- 110.47561601
- 110.47571600
- 110.47531700
- 110.47511702
- 110.47561600
- 110.47566600
- 110.47566601
- 110.47511701
- 110.47532600
- 110.47511700
- 110.47571603

- 110.47788800
- 110.47561604

If you are unsure about compatibility, please contact customer support with your washer's full model number before proceeding with installation.

4. SAFETY INFORMATION

Always prioritize safety when working with appliances. Failure to follow these safety guidelines may result in electric shock, injury, or damage to the appliance.

- **Disconnect Power:** Always unplug the washing machine from the electrical outlet before attempting any repair or maintenance.
- **Water Drainage:** Ensure all water is drained from the washer tub and hoses before beginning work to prevent spills and electrical hazards.
- **Wear Protective Gear:** Use appropriate personal protective equipment, such as gloves and eye protection.
- **Professional Assistance:** If you are not confident in your ability to perform the repair, seek assistance from a qualified appliance technician.
- **Handle with Care:** Components may have sharp edges or hot surfaces. Handle with care.

5. SETUP AND INSTALLATION

This section outlines the general steps for replacing a washer drain pump. Specific steps may vary slightly depending on your washer model. Refer to your washer's service manual for detailed instructions if available.

1. Preparation:

- Unplug the washer from the power outlet.
- Turn off the water supply to the washer.
- Move the washer away from the wall to access the rear or bottom.
- Drain any remaining water from the washer and hoses into a shallow pan or bucket.

2. Access the Pump:

- Depending on your model, you may need to remove the front panel, rear panel, or tilt the washer back to access the drain pump located at the bottom of the machine.
- Locate the existing drain pump and identify the hoses and electrical connections attached to it.

3. Remove Old Pump:

- Carefully disconnect the electrical wiring harness from the pump motor.
- Loosen the clamps securing the drain hoses (inlet and outlet) to the pump and remove the hoses. Be prepared for residual water.
- Unscrew any mounting screws or release clips holding the pump in place and remove the old pump.

4. Install New Pump:

- Position the new Owigift drain pump in the same location as the old one.
- Secure the pump with the mounting screws or clips.
- Reconnect the drain hoses to the new pump, ensuring the clamps are tightened securely to prevent leaks.
- Connect the electrical wiring harness to the new pump motor. Ensure connections are firm and correct.

5. Reassembly and Test:

- Reattach any panels removed during the process.
- Move the washer back into its original position.
- Turn on the water supply.
- Plug the washer back into the electrical outlet.
- Run a short drain/spin cycle to check for proper operation and any leaks.

6. OPERATING INSTRUCTIONS

The drain pump operates automatically as part of your washing machine's cycle. No direct user interaction is required for its operation once installed. Ensure your washing machine is used according to its manufacturer's instructions.

- Ensure the drain hose is not kinked or obstructed.
- Avoid overloading the washer, as this can strain the pump.
- Use only recommended detergents and avoid excessive sudsing, which can affect pump performance.

7. MAINTENANCE

Regular maintenance can extend the life of your drain pump and prevent issues.

- **Check for Obstructions:** Periodically inspect the drain pump filter (if accessible on your washer model) for lint, coins, or other debris that can impede pump function. Clean as necessary.
- **Hose Inspection:** Check drain hoses for kinks, cracks, or blockages.
- **Listen for Unusual Noises:** A properly functioning pump should operate smoothly. Unusual grinding, humming, or rattling noises may indicate an issue.

8. TROUBLESHOOTING

If your washer is experiencing draining issues after pump replacement, consider the following common problems and solutions:

Problem	Possible Cause	Solution
Washer not draining	Kinked or blocked drain hose	Straighten hose; clear any obstructions.
Washer not draining	Clogged pump filter (if applicable)	Clean the pump filter.
Washer not draining	Improper electrical connection to pump	Verify electrical connections are secure.
Unusual noise during drain cycle	Debris in pump impeller	Disconnect power, access pump, and remove debris.
Water leaking from pump area	Loose hose clamps or damaged hoses	Tighten clamps or replace damaged hoses.

If troubleshooting steps do not resolve the issue, contact customer support.

9. SPECIFICATIONS

Attribute	Value
Brand	Owigift
Style	Drain Pump
Color	White
Material	Cast Iron, Stainless Steel
Power Source	Battery Powered (Note: Typically AC for washer pumps; verify with appliance specifications)
Voltage	12 Volts (DC) (Note: Typically 120V AC for washer pumps; verify with appliance specifications)
UPC	718997235168
ASIN	B09VZMSDY7

10. CUSTOMER SUPPORT

For any questions regarding compatibility, installation, or troubleshooting, please contact Owigift customer support. We aim to resolve your inquiries within 24 hours.

Note: Specific contact information (phone, email, website) is not provided in the product data. Please refer to your purchase documentation or the seller's information for direct contact methods.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question