

HUAYU RM-L915, AKB73615238, AKB73615244

HUAYU Universal Remote Control for LG TVs

MODELS: RM-L915, AKB73615238, AKB73615244

1. Introduction

This instruction manual provides detailed guidance for the setup, operation, and maintenance of your HUAYU Universal Remote Control. This remote is designed to be compatible with various LG television models, including those originally using remote models AKB73615238 and AKB73615244. Please read this manual thoroughly to ensure proper use and to maximize the functionality of your new remote control.

2. Product Overview

The HUAYU Universal Remote Control features a comprehensive layout designed for intuitive control of your LG television. Familiarize yourself with the button layout and their respective functions.



Figure 2.1: Front view of the HUAYU Universal Remote Control. This image displays the full array of buttons, including power, number pad, navigation, volume, channel, and various function keys.



Figure 2.2: Close-up of the top section of the remote control, showing the Power, Input, AV Mode, TV/RAD, Energy Saving, and number buttons.



Figure 2.3: Close-up of the bottom section of the remote control, highlighting the navigation pad, Home, My Apps, Back, Info, Exit, colored function buttons, and media playback controls.

Key Button Functions:

- **Power (Red Button):** Turns the TV on or off.
- **Number Pad (0-9):** Direct channel selection.
- **Volume (+/-):** Adjusts the sound volume.
- **Channel (Page Up/Down):** Changes TV channels sequentially.
- **Input:** Selects the input source (HDMI, AV, etc.).
- **Home:** Accesses the Smart TV home menu.
- **My Apps:** Opens the applications menu.
- **Navigation Pad (Up/Down/Left/Right/OK):** Navigates menus and confirms selections.

- **Back:** Returns to the previous screen or menu.
- **Exit:** Exits the current menu or application.
- **MUTE:** Mutes or unmutes the TV sound.
- **3D:** Activates or deactivates 3D mode (if supported by TV).
- **Q.VIEW:** Quickly switches between previously viewed channels.
- **SIMPLINK:** Controls compatible LG devices connected via HDMI (HDMI-CEC).

3. Setup

3.1 Battery Installation

The remote control requires two AAA batteries (not included) for operation. Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Figure 3.1: Back view of the remote control with the battery compartment open, showing the correct orientation for AAA battery insertion.

Note: Always replace both batteries at the same time. Do not mix old and new batteries, or different types of batteries.

4. Operating Instructions

This remote control is pre-programmed for direct use with compatible LG TV models. No additional setup or code entry is typically required.

4.1 Basic TV Control

- **Power On/Off:** Press the **Power** button once.
- **Channel Selection:** Use the number pad for direct channel input, or the **Channel Up/Down** buttons

for sequential browsing.

- **Volume Adjustment:** Press the **Volume +** or **Volume -** buttons.
- **Mute:** Press the **MUTE** button to silence the TV. Press again to restore sound.

4.2 Input Source Selection

To switch between connected devices (e.g., Blu-ray player, game console):

1. Press the **Input** button.
2. Use the **Navigation Up/Down** buttons to highlight the desired input source.
3. Press the **OK** button to confirm your selection.

4.3 Smart TV and App Access

- Press the **HOME** button to access the LG Smart TV dashboard.
- Press the **MY APPS** button to directly open the applications menu.
- Use the **Navigation Pad** and **OK** button to browse and launch apps.

5. Maintenance

5.1 Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. Do not use liquid cleaners, abrasive materials, or chemical solvents, as these can damage the remote's surface or internal components.

5.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or inconsistent. Refer to Section 3.1 for battery installation instructions. Dispose of used batteries responsibly according to local regulations.

6. Troubleshooting

- **Remote not responding:**
 - Ensure batteries are correctly installed and not depleted. Replace if necessary.
 - Check for any obstructions between the remote control and the TV's infrared sensor.
 - Ensure you are within the effective range and pointing the remote directly at the TV.
- **Some functions not working:**
 - Verify that your LG TV model is fully compatible with all functions of this universal remote. While designed for broad compatibility, some advanced or model-specific features may not be supported.
 - Ensure the TV's firmware is up to date.

7. Specifications

Feature	Specification
Model Numbers	RM-L915, AKB73615238, AKB73615244
Compatibility	LG Smart TVs (various models)
Power Source	2 x AAA Batteries (not included)

Color	Multi-colored (buttons), Black (body)
Item Weight	Approximately 200 g

8. Warranty and Support

For warranty information or technical support, please refer to the documentation provided at the point of purchase or contact your retailer. Keep your purchase receipt as proof of purchase.