

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [APLOS](#) /

› [APLOS Personal Alert Pager and Button User Manual](#)

APLOS 6323

APLOS Personal Alert Pager and Button User Manual

Model: 6323

1. INTRODUCTION

This manual provides comprehensive instructions for the safe and effective use of your APLOS Personal Alert Pager and Button. Please read this manual thoroughly before operating the device and retain it for future reference.

2. SAFETY INFORMATION

Always adhere to the following safety guidelines:

- Keep the device dry. Do not expose it to water or excessive humidity.
- Do not attempt to open or repair the device yourself. Refer all servicing to qualified personnel.
- Use only specified batteries and power sources.
- Keep out of reach of small children to prevent choking hazards from small parts.
- Ensure the alert signal is audible and the vibration is noticeable in your environment.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- APLOS Personal Alert Pager (Receiver)
- APLOS Personal Alert Button (Transmitter) with SOS button
- Neck Lanyard for transmitter
- Belt Clip for receiver
- User Manual (this document)

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your APLOS Personal Alert system.



Figure 4.1: APLOS Personal Alert Pager (right) and Button (left) with lanyard. The pager is a white rectangular device with a speaker grille and the "Aplōs" logo. The button is a smaller white oval device with an orange "SOS" button and a loop for the lanyard.



Figure 4.2: Labeled diagram showing the APLOS Personal Alert Pager (Avertisseur) and Button (Bouton d'appel). The button can be worn around the neck (Se met au cou) and the pager can be carried in a pocket or clipped to a belt (Se glisse dans n'importe quelle poche ou se clip à une ceinture). The system ensures the safety of dependent persons (Assure la sécurité de la personne dépendante).

3 FONCTIONS



Figure 4.3: The APLOS Personal Alert Pager illustrating its three alert functions: **Audible** (via the ringer), **Visual** (a red indicator light illuminates), and **Sensory** (the device vibrates).

5. SETUP

5.1. Powering On

The APLOS Personal Alert Pager is battery-powered. Ensure batteries are correctly inserted. The device is designed for immediate use upon activation.

5.2. Wearing the Transmitter

The alert button (transmitter) is designed for portability and accessibility.

- **Neck Lanyard:** Attach the provided lanyard to the alert button and wear it around your neck for easy access.
- **Pocket:** Its compact size allows it to be carried discreetly in a pocket.



Figure 5.1: A person wearing the APLOS alert button around their neck using the provided lanyard, demonstrating convenient access.

5.3. Carrying the Pager (Receiver)

The pager can be carried by the caregiver or person needing to receive alerts.

- **Belt Clip:** Use the integrated belt clip on the back of the pager to attach it securely to a belt or waistband.
- **Pocket:** The pager can also be placed in a pocket.



Figure 5.2: The APLOS pager securely clipped to a person's belt, showing its portability and ease of access for the caregiver.



Figure 5.3: Rear view of the APLOS pager, clearly showing the integrated belt clip for attachment to clothing.

6. OPERATING INSTRUCTIONS

6.1. Sending an Alert

To send an alert, simply press the orange "SOS" button on the alert transmitter.



Figure 6.1: A hand pressing the orange "SOS" button on the APLOS alert transmitter, initiating an alert.

6.2. Receiving an Alert

Upon receiving an alert signal from the transmitter, the pager will activate its triple alert functions:

- **Audible Alarm:** A distinct sound will be emitted from the pager's speaker.
- **Vibration:** The pager will vibrate to provide a tactile alert.
- **Visual Indicator:** A red light on the pager will illuminate.

The pager offers customization options for the alert experience, including adjustable ringtone type and volume. Refer to Section 6.3 for details.

6.3. Customizing Alert Settings

The pager features dedicated buttons on its back for adjusting settings.



Figure 6.2: A hand using a pen to adjust the settings on the back of the APLOS pager, indicating the location of the customization buttons.

Use these buttons to select from various modes, adjusting the alert type and volume to suit individual preferences and environmental needs.

7. MAINTENANCE

To ensure the longevity and optimal performance of your APLOS Personal Alert system, follow these maintenance guidelines:

- **Cleaning:** Wipe the devices with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries promptly when the low battery indicator appears or performance degrades. Refer to the battery compartment for specific battery types.
- **Storage:** Store the devices in a cool, dry place when not in use.

8. TROUBLESHOOTING

If you encounter issues with your APLOS Personal Alert system, consult the table below:

Problem	Possible Cause	Solution
Pager does not alert.	Low battery in pager or transmitter; Out of range; Obstructions.	Replace batteries in both units. Move closer to the transmitter. Reduce physical barriers between units.
Alert signal is weak or intermittent.	Low battery; Interference; Distance.	Replace batteries. Avoid strong electromagnetic fields. Ensure units are within specified range.
Cannot change alert settings.	Incorrect button press; Device malfunction.	Refer to Section 6.3 for correct procedure. If issue persists, contact support.

9. SPECIFICATIONS

Feature	Detail
Model Number	6323
Brand	APLOS
Maximum Range (Outdoor)	100 meters
Maximum Range (Indoor)	50-70 meters
Sensor Technology	Vibration
Power Source	Battery Powered
Voltage	3 Volts DC
Control Method	Remote Control (Button Press)
Color	White
Dimensions (Pager)	9 x 6 cm (approximate)
Origin	France

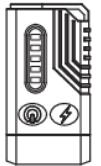
10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the contact details provided by your retailer or visit the official APLOS website. Keep your proof of purchase for warranty claims.

Return Policy: 30 days (refund/replacement) as per Amazon's policy at the time of purchase.

Manufacturer: APLOS

Related Documents - 6323

 <p>APLOS EDC Flashlight Model L02 1000 LUMENS BUILT-IN BATTERY MAGNETIC BASE BEARING ALARM/LASH</p>	<p>APLOS L02 EDC Flashlight - 1000 Lumens, UV, Magnetic, Rechargeable</p> <p>Explore the APLOS L02, a powerful 1000-lumen EDC flashlight featuring UV light, a magnetic base, and multiple lighting modes. This rechargeable flashlight includes Type-C charging, IPX4 waterproof rating, and is ideal for outdoor, safety, and everyday use.</p>
	<p>APLOS AP70C Diving Flashlight User Manual</p> <p>User manual for the APLOS AP70C diving flashlight, detailing its features, specifications, operation, charging, maintenance, and safety warnings. Includes technical parameters and FAQs.</p>
	<p>Kaiser EH 63... Built-in Electric Oven User Manual</p> <p>Comprehensive user manual for the Kaiser EH 63... built-in electric oven, covering installation, safety, usage, and maintenance instructions in multiple languages.</p>
 <p>Miele PW 6323 Elektrobeheizung EL • Installation plan Gewerbliche Waschmaschine • Installation plan Commercial washing machine • Installation plan Gewerbliche Waschmaschine • Installation plan Gewerbliche Waschmaschine • Plan de instalación Lavadora industrial • Montaż maszyny pralki przemysłowej • Installation plan Professional washing machine • Plan de instalación Máquina de lavar ropa industrial • Plan instalación Máquina de lavar ropa industrial</p>	<p>Miele PW 6323 Elektrobeheizung EL Installationsplan</p> <p>Umfassende Installationsanweisungen für die professionelle Waschmaschine Miele PW 6323 Elektrobeheizung EL, die wichtige Aspekte wie Standortanforderungen, elektrische und Wasseranschlüsse, Sicherheitsvorkehrungen und technische Daten abdeckt.</p>