

Homdox 5527

Homdox Electric Cheese Grater and Salad Maker (Model 5527) User Manual

INTRODUCTION

Thank you for purchasing the Homdox Electric Cheese Grater and Salad Maker. This appliance is designed to simplify your food preparation tasks, offering efficient grating, slicing, and shredding with its powerful 250W motor and versatile attachments. Please read this manual thoroughly before first use to ensure safe operation, optimal performance, and proper maintenance of your appliance. Keep this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the appliance.
- To protect against electrical shock, do not immerse the motor unit, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Never push food into the feeding tube by hand. Always use the provided food pusher.
- Ensure all parts are correctly assembled before operation.
- Do not attempt to process extremely hard foods that may damage the blades or motor.

PACKAGE CONTENTS

Please check the package contents upon opening to ensure all items are present and undamaged:

- Homdox Electric Cheese Grater and Salad Maker Motor Unit
- Feeding Tube
- Food Pusher
- 5 Stainless Steel Drum Blades (various types for slicing, shredding, and grating)

PRODUCT OVERVIEW

Familiarize yourself with the main components of your Homdox Electric Cheese Grater and Salad Maker:

- **Motor Unit:** The main body housing the 250W motor and control button.
- **Feeding Tube:** Where ingredients are inserted for processing.
- **Food Pusher:** Used to safely guide food into the blades.
- **Drum Blades:** Interchangeable stainless steel cones for different cutting tasks.
- **On/Off Button:** For simple one-touch operation.



Figure 1: Product Features Diagram. Highlights the safe operation design, detachable components, and the one-touch button for control.



Figure 2: Product Dimensions. Illustrates the overall size of the grater and the individual dimensions of the five drum blades.

SETUP

Before first use, ensure all packaging materials are removed and clean all detachable parts according to the "Cleaning and Maintenance" section.

1. Place the motor unit on a stable, flat, and dry surface.
2. **Attach the Feeding Tube:** Tilt the feeding tube 30° to the right and insert it into the machine. Turn counter-clockwise to tighten and fix the feeding tube securely.
3. **Insert the Cutting Accessory:** Choose the desired stainless steel drum blade. Insert it into the feeding tube and fix it firmly in place.
4. Ensure the appliance is unplugged before assembly.



1 Tilt the feeding tube 30° to the right and insert it into the machine.



2 Turn counterclockwise to tighten the feeding tube.



3 Insert the cutting accessory and fix it.



4 Press the power button, put the food into the feeding tube and push it.

Figure 3: Assembly Steps. A visual guide demonstrating how to correctly assemble the feeding tube and cutting accessory.

OPERATION

Your Homdox Electric Cheese Grater is designed for simple, one-button operation.

1. After assembly, place a bowl or container directly under the output chute to collect processed food.
2. Plug the appliance into a suitable power outlet.
3. Press the power button to turn on the appliance. The motor will start.
4. Carefully place your ingredients into the feeding tube. Use the food pusher to gently guide the ingredients towards the rotating blade. **Never use your hands to push food.**
5. Continue feeding ingredients until the desired amount is processed.
6. Once finished, press the power button again to turn off the appliance and unplug it from the outlet.

Using the 5 Stainless Steel Attachments:

The appliance comes with 5 interchangeable drum blades for various tasks:

- **Thin Slicer:** Ideal for cucumbers, carrots, potatoes, and other vegetables for salads or garnishes.
- **Thick Slicer:** For thicker slices of vegetables like carrots, eggplant, or zucchini.
- **Fine Shredder:** Perfect for finely shredded carrots, cabbage, or hard cheeses.
- **Coarse Shredder:** For coarser shredding of cheese, potatoes, or other firm vegetables.
- **Grater/Pulverizer:** Suitable for grating hard cheeses, chocolate, nuts, or making breadcrumbs.

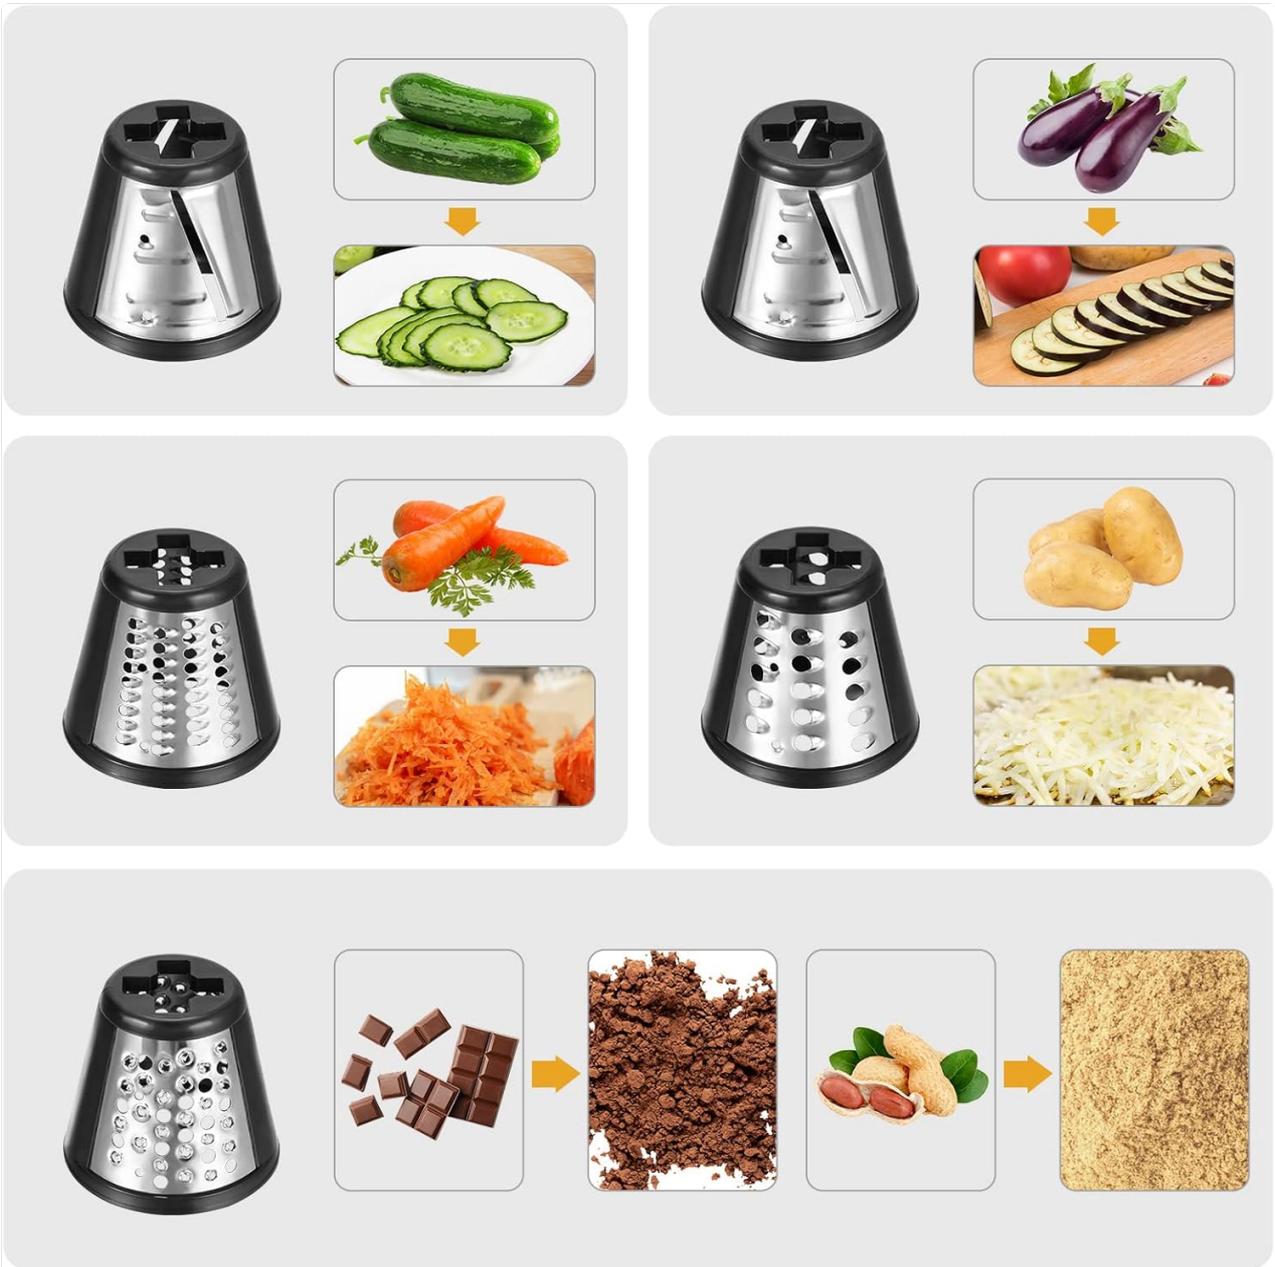


Figure 4: Versatile Blade Applications. Demonstrates the different types of cuts and ingredients achievable with the various drum blades.



Figure 5: Slicing Operation. The grater in action, producing cucumber slices, highlighting its efficiency.



Figure 6: Thick Slicing Example. Illustrates the use of the thick slicing blade for carrots and other vegetables.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your appliance.

1. Always unplug the appliance before cleaning.
2. Disassemble the feeding tube and the drum blade from the motor unit.
3. The feeding tube, food pusher, and stainless steel drum blades are dishwasher safe. Alternatively, they can be rinsed directly with water and mild dish soap. Use a brush to remove any stubborn food residue from the blades.
4. Wipe the motor unit with a damp cloth. Do not immerse the motor unit in water or any other liquid.
5. Ensure all parts are completely dry before reassembling or storing.
6. Store the appliance and its accessories in a clean, dry place.

1**Convenient and fully automatic vegetable cutting
VS Tedious, time-consuming and laborious****2****Multi-protection design, not afraid of hurting hands
VS Low safety performance, easy to hurt hands**

Figure 7: Easy Cleaning. The image illustrates how easily the blades can be cleaned under running water.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet not working; appliance not assembled correctly.	Ensure the power cord is securely plugged into a working outlet. Check if all parts are correctly assembled and locked into place.
Motor runs, but food is not processed.	Blade not inserted correctly; food too large or too hard; feeding tube clogged.	Ensure the drum blade is fully inserted and locked. Cut food into smaller pieces. Clear any blockages in the feeding tube (with appliance OFF and UNPLUGGED).

Problem	Possible Cause	Solution
Appliance stops during operation.	Overload protection activated; food jammed.	Turn off and unplug the appliance. Remove any jammed food. Let the motor cool down for a few minutes before restarting. Reduce the amount of food processed at one time.

SPECIFICATIONS

- **Model Number:** 5527
- **Power:** 250W
- **Material:** Stainless Steel (Blades), Plastic (Housing)
- **Color:** White
- **Product Dimensions:** 10.1"L x 4.5"W x 11"H
- **Item Weight:** 5.39 pounds
- **Dishwasher Safe Parts:** Yes (Feeding tube, food pusher, drum blades)

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided at the point of purchase or visit the official Homdox website. If you have any questions or encounter issues, please contact customer service with your product model number and purchase details.