

**Manuals+**

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [TLOG](#) /

› [TLOG Mini Rice Cooker N-ARC-150NG Instruction Manual](#)

**TLOG N-ARC-150NG**

# TLOG Mini Rice Cooker (Model N-ARC-150NG) Instruction Manual

Your guide to healthy and convenient cooking.

## 1. INTRODUCTION

---

Thank you for choosing the TLOG Mini Rice Cooker. This appliance is designed to provide a convenient and healthy cooking experience for individuals or small families. Its compact size and multi-functional capabilities make it ideal for various settings, including small kitchens, offices, dormitories, and travel. Please read this manual thoroughly before first use to ensure safe and optimal operation.



Image 1.1: The TLOG Mini Rice Cooker, showcasing its compact design and a serving suggestion.

## 2. IMPORTANT SAFETY INFORMATION

---

To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer support for assistance.
- Do not use attachments not recommended by the appliance manufacturer, as this may cause hazards.
- Do not use outdoors.

- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to 'off', then remove the plug from the wall outlet.
- Do not use the appliance for other than intended use.
- This appliance is for household use only.

### 3. PRODUCT OVERVIEW

The TLOG Mini Rice Cooker (Model N-ARC-150NG) is a versatile appliance designed for ease of use and portability. It features a user-friendly control panel, a ceramic non-stick inner pot, and a detachable power cord.

#### 3.1 Included Components

- TLOG Mini Rice Cooker Main Unit
- Ceramic Non-Stick Inner Pot
- 160ml Rice Measuring Cup (BPA-free)
- Rice Spoon (BPA-free)
- 304 Stainless Steel Steam Tray
- Detachable Power Cord
- Clamp for Steam Tray
- Anti-scald Suction Cup for Lid

#### 3.2 Appliance Diagram



Image 3.1: Exploded view diagram showing the anti-scalding suction cup, detachable lid, 2.5-cup capacity inner pot, user-friendly interface, non-slip base, and detachable power cord.



Image 3.2: The rice cooker highlighting its compact dimensions (7.67in H x 5.9in W x 5.9in D) and the anti-scald handle for safe portability.

## 4. SETUP

---

### 4.1 Unpacking

Carefully remove all packaging materials and components from the box. Retain packaging for future storage or transport if desired.

### 4.2 Initial Cleaning

Before first use, wash the inner pot, steam tray, measuring cup, and rice spoon with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.

### 4.3 Placement

Place the rice cooker on a stable, flat, heat-resistant surface, away from direct sunlight and heat sources. Ensure there is adequate ventilation around the unit.

## 5. OPERATING INSTRUCTIONS

The TLOG Mini Rice Cooker features a user-friendly control panel with LED indicator lights for various functions.



Image 5.1: The control panel showing the 'Pre-set' timer option, allowing delayed cooking from 2 to 12 hours.

### 5.1 Basic Rice Cooking (White Rice)

1. Measure the desired amount of rice using the provided measuring cup. One cup of uncooked rice yields approximately two cups of cooked rice. The maximum capacity is 2.5 cups of uncooked rice.
2. Rinse the rice thoroughly under cold water until the water runs clear.
3. Place the rinsed rice into the ceramic inner pot.
4. Add water according to the markings inside the inner pot. For white rice, align the water level with the corresponding line for the number of rice cups used. For example, for 1 cup of rice, fill water to the '1' mark on the 'White Rice' scale.
5. Place the inner pot into the main unit and close the lid securely.
6. Plug the power cord into a standard 120V electrical outlet.

7. Press the 'Rice' button. The indicator light for 'Rice' will illuminate, and the cooker will begin the cooking cycle.
8. Once cooking is complete, the cooker will automatically switch to 'Keep Warm' mode. It is recommended to let the rice rest for 10-15 minutes in 'Keep Warm' mode before serving for optimal texture.
9. Use the provided rice spoon to fluff and serve the rice.

## 5.2 Using the Pre-set Timer

The 12-hour delay timer allows you to prepare ingredients in advance and have your meal ready at a specific time.

1. Prepare your ingredients (rice, water, etc.) and place them in the inner pot as described in Section 5.1.
2. Close the lid and plug in the cooker.
3. Press the 'Pre-set' button. The indicator light will flash.
4. Repeatedly press the 'Pre-set' button to cycle through the delay times (2, 4, 6, 8, 10, 12 hours). Select your desired delay time.
5. After selecting the delay time, press the desired cooking function button (e.g., 'Rice', 'Brown Rice', 'Soup/Congee'). The selected function's indicator light will illuminate along with the 'Pre-set' light.
6. The cooker will start cooking automatically after the set delay time has elapsed.

## 5.3 Other Cooking Functions

The TLOG Mini Rice Cooker offers multiple cooking modes:

- **Brown Rice:** For cooking brown rice. Follow the water level markings for 'Brown Rice' inside the inner pot.
- **Soup/Congee:** For preparing soups, stews, or congee. Add ingredients and water, then select this function.
- **Keep Warm:** Automatically activates after cooking. Can also be manually selected to keep food warm for up to 10 hours. Press 'Cancel' to exit 'Keep Warm' mode.
- **Yogurt:** For making homemade yogurt. Ensure milk is heated to 180°F (82°C) and cooled to 110°F (43°C) before adding starter culture and placing in the cooker.

## 6 - IN - 1 FUNCTIONALITY

The possibilities are as endless as your creativity!



Spaghetti



Quinoa



Veggies



Brown Rice



Multi Grains



Yogurt



Oatmeal



Soup Powder

Image 5.2: Examples of dishes that can be prepared with the 6-in-1 functionality, including spaghetti, quinoa, veggies, brown rice, multi-grains, yogurt, oatmeal, and soup.

### 5.4 Steaming Function

The included 304 stainless steel steam tray allows you to steam vegetables, seafood, or poultry while cooking rice or separately.

1. Add water to the inner pot (ensure water level is below the steam tray).
2. Place desired food items on the steam tray.
3. Carefully place the steam tray into the inner pot.
4. Close the lid and select a cooking function (e.g., 'Rice' or 'Soup/Congee') or simply use the 'Soup/Congee' function for steaming only.
5. Monitor cooking progress. Use the provided clamp to safely remove the hot steam tray.

## 6. CARE AND MAINTENANCE

---

Proper cleaning and maintenance will extend the life of your TLOG Mini Rice Cooker.

### 6.1 Cleaning the Inner Pot

The ceramic non-stick inner pot is dishwasher safe. For hand washing, use a soft sponge and mild dish soap. Avoid abrasive cleaners or metal scouring pads, which can damage the non-stick coating. Ensure the pot is completely dry before storing.

# NANO-CERAMIC INNER POT

Coated with ultra nano-ceramic non-stick to deliver the ultimate flavor release.



Easy to Clean



non-toxic\*



long-lasting durability



dishwasher safe



accurate water level



\*Free of toxic materials like BPA, PFOA, PTFE, lead, cadmium, nickel, or toxic metals.

Image 6.1: The nano-ceramic inner pot, highlighting its non-toxic, durable, dishwasher-safe, and easy-to-clean properties, along with accurate water level markings.

## 6.2 Cleaning the Lid and Exterior

The lid is detachable for easy cleaning. Wash the lid and steam tray with warm, soapy water, rinse, and dry thoroughly. Wipe the exterior of the main unit with a damp cloth. Do not use harsh chemicals or abrasive materials. Ensure all parts are dry before reassembling.

## 6.3 Storage

Store the rice cooker in a cool, dry place. Ensure the inner pot and all accessories are clean and dry before storage. The detachable power cord can be removed for compact storage.

# RICE COOKER EASY STORAGE



Image 6.2: The rice cooker and its accessories (power cord, steam tray, rice spoon, measuring cup, inner pot) with their respective dimensions, illustrating ease of storage.

## 7. TROUBLESHOOTING

If you encounter issues with your rice cooker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Rice is too dry/hard	Insufficient water; rice not rinsed; lid not sealed properly.	Ensure correct water-to-rice ratio. Rinse rice thoroughly. Check lid for proper seal.
Rice is too soggy/sticky	Too much water; rice not rinsed; opening lid during cooking.	Ensure correct water-to-rice ratio. Rinse rice thoroughly. Avoid opening lid during cooking cycle.

Problem	Possible Cause	Solution
Cooker does not turn on	Power cord not plugged in; power outage; faulty outlet.	Check power cord connection. Test outlet with another appliance.
Food boils over	Too much water/ingredients; lid not properly vented.	Do not overfill the inner pot. Ensure steam vent is clear.
Keep Warm function not working	Cooker unplugged; malfunction.	Ensure cooker is plugged in. If problem persists, contact customer support.

If the problem persists after attempting these solutions, please contact TLOG customer support.

## 8. SPECIFICATIONS

Feature	Specification
Brand	TLOG
Model Name	N-ARC-150NG
Capacity	2.5 Cups (uncooked) / 1.2 Liters
Product Dimensions	8.26"D x 7.66"W x 8.65"H
Item Weight	3 Pounds
Power Source	Corded Electric
Voltage	120 Volts
Wattage	200 Watts
Material	Aluminum, Ceramic (Inner Pot)
Lid Material	Stainless Steel, Plastic
Special Features	Automatic Keep Warm, Carrying Handle, Lightweight, Portable, Timer
Product Care Instructions	Dishwasher Safe (Inner Pot)

## 9. WARRANTY AND SUPPORT

### 9.1 Warranty Information

TLOG offers a 1-year warranty for all products. This warranty covers manufacturing defects and ensures your product functions as intended under normal use.

### 9.2 Customer Support

If you have any questions, concerns, or require assistance with your TLOG Mini Rice Cooker, please do not

hesitate to contact our customer support team. We are committed to providing a fast solution within 24 hours. For support, please visit the official TLOG store on Amazon or refer to the contact information provided with your purchase documentation.

[Visit the TLOG Store on Amazon](#)