

[Manuals.plus](#) /

› [Bestdealing](#) /

› Bestdealing Replacement S Pen User Manual for Samsung Galaxy Tab S8 Series

## Bestdealing Replacement S Pen for Samsung Galaxy Tab S8 Series (SM-X700, SM-X706, SM-X800, SM-X806, SM-X900, SM-X906)

# Bestdealing Replacement S Pen User Manual

For Samsung Galaxy Tab S8, Tab S8+, and Tab S8 Ultra Series

## 1. PRODUCT OVERVIEW

This document provides instructions for the Bestdealing Replacement S Pen, designed for use with various Samsung Galaxy Tab S8 series tablets. This S Pen is a replacement stylus and does not include Bluetooth functionality. It is not an original Samsung product.

### Key Features

- High sensitivity and responsiveness for precise input.
- Durable construction for reliable performance.
- Easy tip replacement.

### Compatibility

This replacement S Pen is compatible with the following Samsung Galaxy Tab models:

- Samsung Galaxy Tab S8 11-inch: SM-X700, SM-X706, SM-X706B, SM-X706U, SM-X706N
- Samsung Galaxy Tab S8+ 12.4-inch: SM-X800, SM-X806, SM-X806B, SM-X806U, SM-X806N
- Samsung Galaxy Tab S8 Ultra 14.6-inch: SM-X900, SM-X906, SM-X906B, SM-X906U, SM-X906N
- Also compatible with Samsung Galaxy Tab S7, Tab S7+, and Tab S7 FE.

### Important Note:

This S Pen does not feature Bluetooth connectivity. Functions requiring Bluetooth, such as remote control or air gestures, are not supported.

## 2. PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x Replacement S Pen (Phantom Navy)
- 5 x Replacement Pen Tips (Black)
- 1 x Tip Replacement Tweezer Tool



Image showing the Bestdealing Replacement S Pen in Phantom Navy color.

### 3. SETUP AND FIRST USE

---

The replacement S Pen is ready for use immediately upon removal from its packaging. No pairing or charging is required as it operates without Bluetooth.

#### Using the S Pen

Simply touch the S Pen to your compatible tablet screen to begin interacting. It supports pressure sensitivity for drawing and writing applications.



A hand holding the Bestdealing Replacement S Pen, demonstrating its ergonomic design.

## 4. OPERATING INSTRUCTIONS


---

### Basic Navigation

Use the S Pen to tap, swipe, and select items on your tablet screen, similar to using your finger.

### Writing and Drawing

The S Pen offers pressure sensitivity, allowing for varied line thickness and shading in compatible applications. Apply more pressure for thicker lines and less for thinner lines.

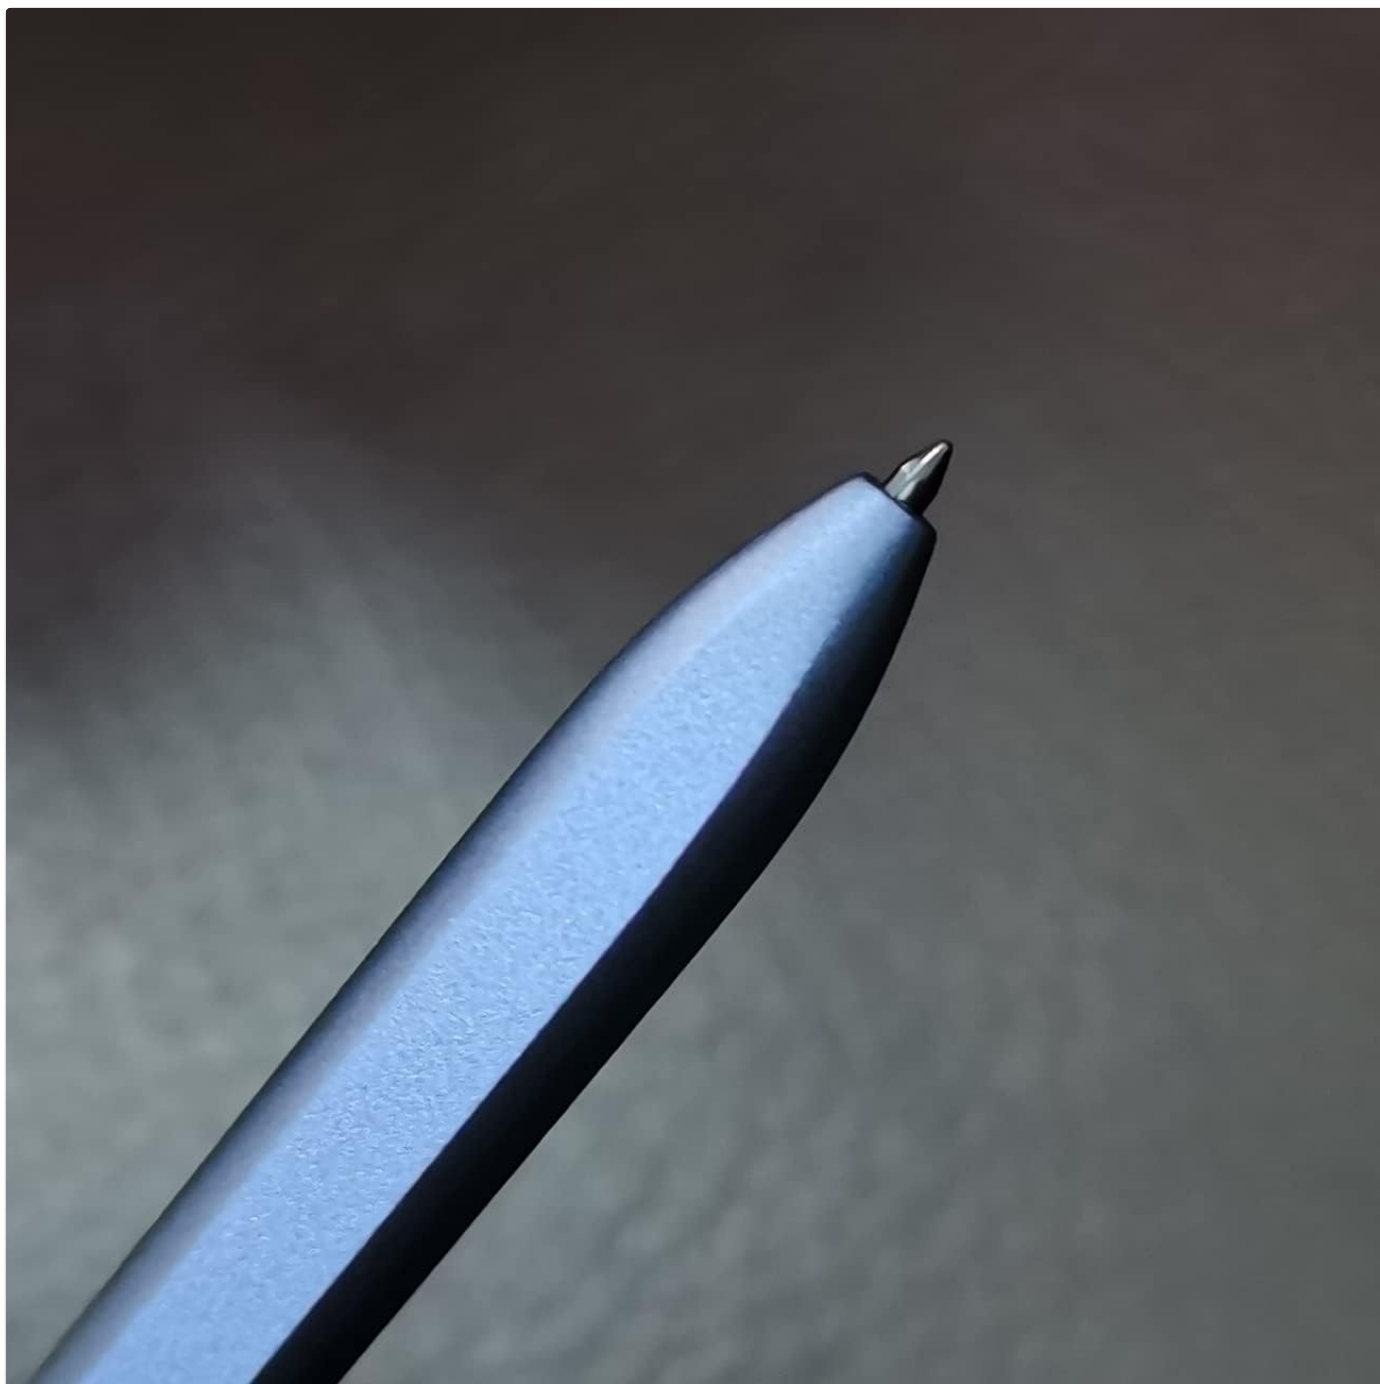

Close-up view of the fine tip of the Bestdealing Replacement S Pen, highlighting its precision.

## Side Button Functionality

The side button on the S Pen typically functions as an eraser or a shortcut button within various applications. Its specific function may vary depending on the application you are using. Refer to your tablet's software settings or individual app instructions for customization options.

## 5. MAINTENANCE AND TIP REPLACEMENT


---

The S Pen tips are consumable parts and may wear down over time with regular use. Replacing the tip ensures optimal performance and prevents scratching your tablet screen.

### How to Replace the S Pen Tip

1. Locate the tip replacement tweezer tool provided in your package.
2. Grip the worn tip of the S Pen firmly with the tweezer tool.

3. Pull the tip straight out with steady and even pressure until it detaches from the S Pen.
4. Select a new replacement tip from the provided pack.
5. Gently insert the new tip into the S Pen until it clicks into place or feels secure. Do not force the tip.

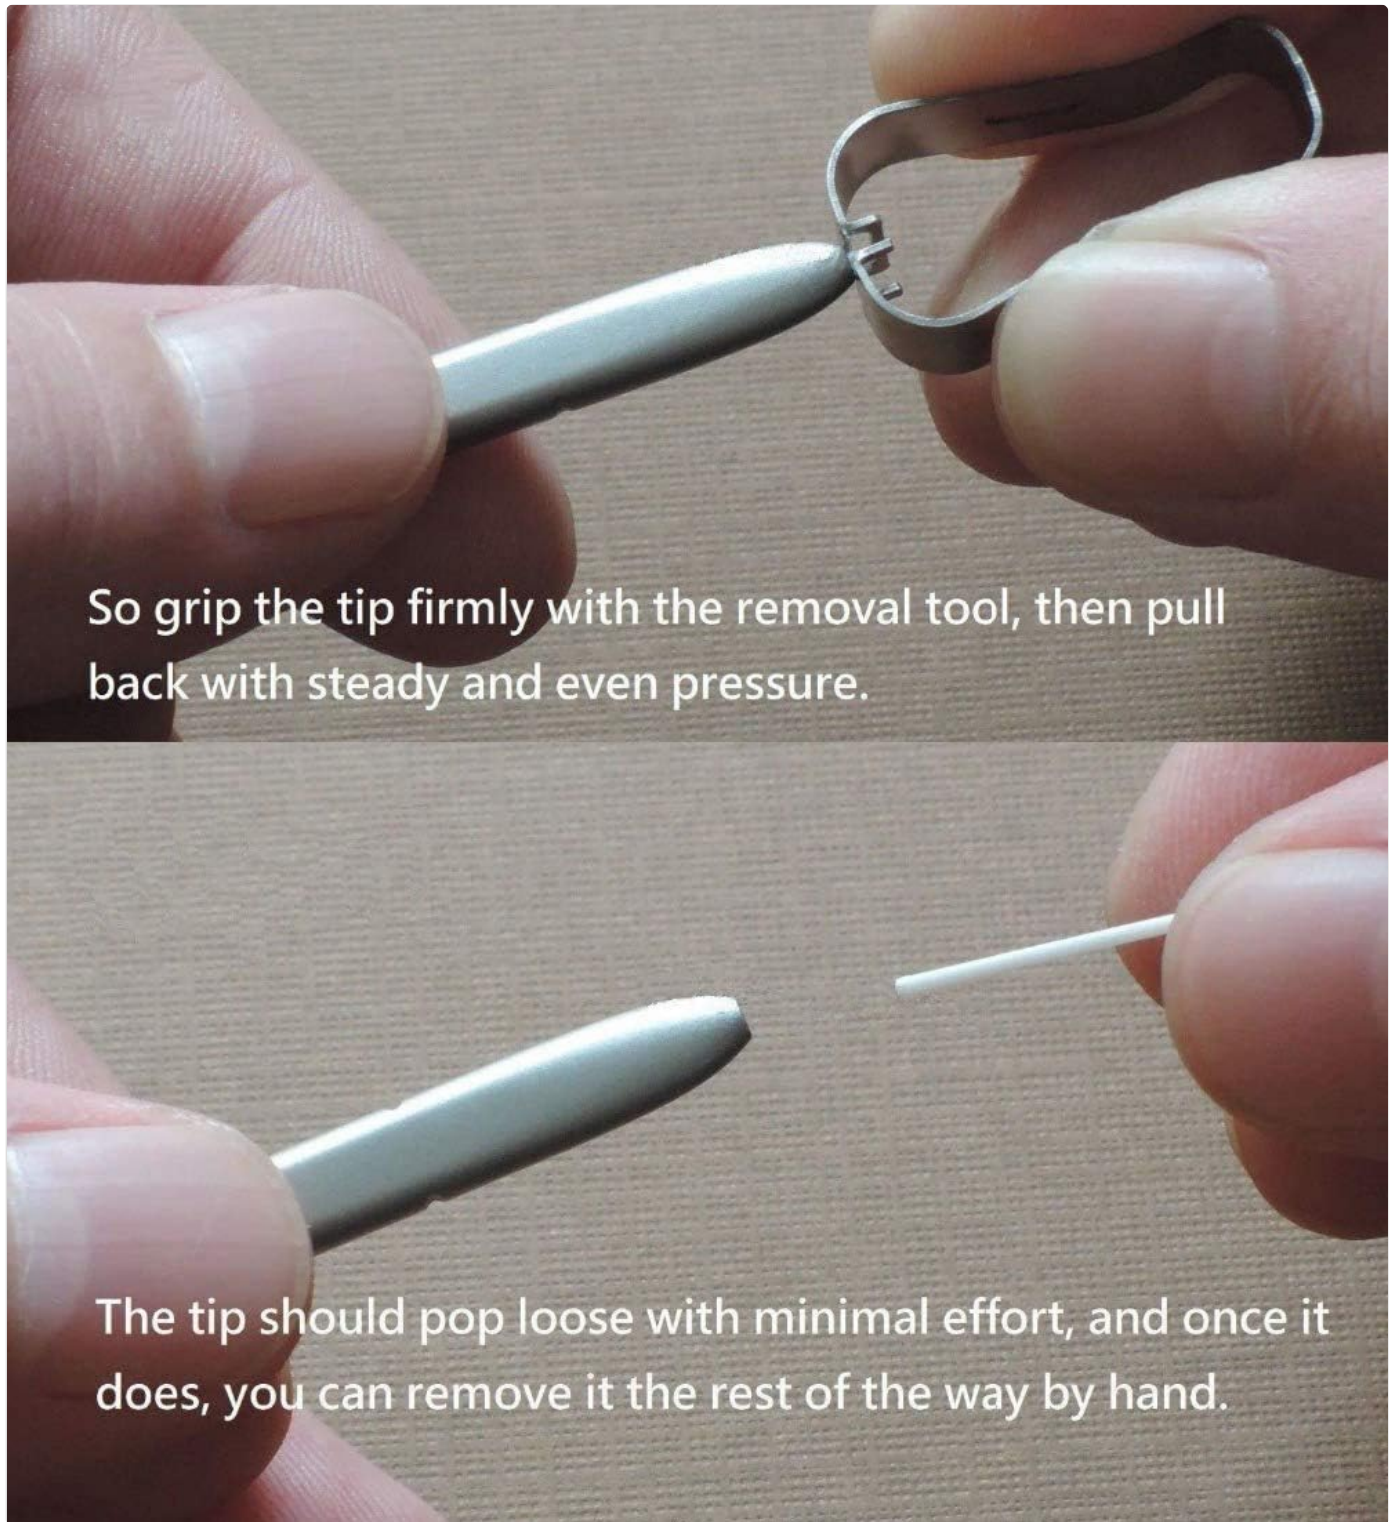

An image illustrating the process of replacing the S Pen tip using the provided tweezer tool.

## 6. TROUBLESHOOTING

---

### S Pen is not responding:

- Ensure the S Pen tip is securely installed. If loose, re-insert or replace it.

- Clean the tablet screen and the S Pen tip with a soft, dry cloth to remove any debris.
- Restart your Samsung Galaxy Tab.
- Verify that your tablet model is listed in the compatibility section.

**Inaccurate input or skipping:**

- Replace the S Pen tip if it appears worn or damaged.
- Ensure there are no magnetic cases or accessories interfering with the tablet's screen.
- Calibrate the S Pen in your tablet's settings, if available.

**Side button not working:**

- Check the settings within the application you are using, as button functions are often app-specific.
- Ensure the S Pen is compatible with your tablet model.

**7. SPECIFICATIONS**

| Feature            | Detail                                                                     |
|--------------------|----------------------------------------------------------------------------|
| Brand              | Bestdealing                                                                |
| Model Number       | 8260a3cb-c927-4d03-8ceb-726f39352851 (Internal ID)                         |
| Compatible Devices | Samsung Galaxy Tab S8 (11"), S8+ (12.4"), S8 Ultra (14.6"), S7, S7+, S7 FE |
| Color              | Phantom Navy                                                               |
| Material           | Plastic                                                                    |
| Item Weight        | 32 Grams                                                                   |
| Bluetooth          | No                                                                         |
| Batteries Required | No                                                                         |
| GTIN/UPC           | 770887298868                                                               |

**8. WARRANTY AND SUPPORT**

For any questions or concerns regarding your Bestdealing Replacement S Pen, please contact the seller directly through the platform where the purchase was made.

The manufacturer states that product quality is verified before shipment. For specific return and warranty policies, please refer to your purchase receipt or order details.

**ASK A QUESTION ABOUT THIS MANUAL**

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

## Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

## Question

Example: How do I reset this device or fix this error?

## Details

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**