

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [VOCOO](#) /

> [VOCOO Digital Kitchen Timer with 7.8" Extra Large Display, Magnetic LED, with 3 Brightness, 4 Alarms and 3 Volume Levels, Battery Powered Countdown Count Up Timer for Cooking, Classroom, Home Gym Black Red](#)

## VOCOO 5285

# VOCOO Digital Kitchen Timer Instruction Manual

Brand: VOCOO | Model: 5285

## INTRODUCTION

The VOCOO Digital Kitchen Timer is designed for precision timing in various environments, from cooking and classroom activities to home gym workouts. Featuring an extra-large LED display, multiple alarm options, and versatile placement methods, this timer offers convenience and reliability.

Key features include:

- **Extra Large Display with 3 Brightness:** A 7.8-inch digital white LED display with 2.3-inch tall numbers, adjustable to Dim, Medium, or Bright settings for optimal visibility.
- **4 Alarms with 3 Levels of Volume:** Choose from Beep or 3 Music Alarms, with volume levels ranging from Soft (60-75dB) to Loud (80-95dB).
- **99 Hours Digital Timer:** Capable of counting down from 99 hours 59 minutes or counting up as a stopwatch from 0 to 99 hours 59 minutes 59 seconds.
- **Rechargeable Battery Powered:** Equipped with a rechargeable battery and a low power indicator, eliminating the need for frequent battery replacements.
- **Versatile Placement:** Features 2 strong silicone-covered magnets for metal surfaces, a hook for hanging, and a built-in stand for desktop use.
- **Easy to Use:** Intuitive buttons for setting time, resetting, and starting/pausing, designed for user-friendly operation.



Image: The VOCOO Digital Kitchen Timer, featuring its prominent large display and red frame.

## SETUP

### Charging the Timer

The VOCOO Digital Kitchen Timer is powered by a rechargeable battery. Before first use, or when the low power icon appears on the display, charge the timer using the provided USB-C cable and a 5V (output voltage) power plug. Using a power plug higher than 5V may damage the battery.

# 3 Ways to Place the Digital Timer



Image: The timer displaying a low battery icon and connected to a USB-C charging cable.

## Placement Options

The timer offers multiple convenient placement options:

- **Magnetic Attachment:** Two strong magnets covered with silicone allow the timer to be securely attached to any metal surface, such as a refrigerator or whiteboard.
- **Built-in Stand:** A foldable stand on the back allows the timer to be placed upright on a desktop or countertop.
- **Hanging Hole:** A dedicated hole on the back enables the timer to be hung on a hook.

# VARIETY OF APPLICATIONS



Cooking



Classroom



Fitness



Skin Care



Nap

Image: Demonstrating the timer's versatile placement options: stand, hanging hole, and magnetic back.

## Official Product Video: Setup & Features

Your browser does not support the video tag.

Video: An official product video from VOCOODirect showcasing the timer's extra-large display and various features, including setup options.

## OPERATING INSTRUCTIONS

### Setting the Timer

The timer supports both countdown and count-up modes, with options for minutes and seconds, or hours and minutes.

- **Quick Set Buttons:** Use the "1H", "5M", "1M", and "1S" buttons to quickly add hours, 5-minute increments, 1-

minute increments, or 1-second increments to the timer.

- **Custom Setting:** For precise time setting, use the "CUSTOM" button.
- **Reset:** The "RESET" button clears the current time setting.
- **Start/Stop:** The "STOP/START" button initiates or pauses the timer.

## 4 Alarms with 3 Levels of Volume



The image shows a kitchen scene with a man and a child cooking. In the foreground, a large digital timer is displayed, showing a countdown of 00:58. The timer has buttons for 1H, 5M, 1M, 1S, CUSTOM, RESET, and STOP/START. Below the timer, there are four circular icons representing different alarm sounds: Buzzer, Melody 1, Melody 2, and Melody 3. To the right of the icons, there are three volume levels (L01, L02, L03) with corresponding speaker icons and volume bars. L01 is 60-75dB, L02 is 70-85dB, and L03 is 80-95dB.

Volume Level	Volume Range (dB)
L01	60-75dB
L02	70-85dB
L03	80-95dB

Image: The timer displaying countdown modes for both hours/minutes and minutes/seconds.

### Brightness Adjustment

The large LED display has 3 levels of brightness to suit different lighting conditions:

- Dim
- Medium
- Bright

Adjust the brightness using the dedicated button on the side of the timer.

# 3 Ways to Place the Digital Timer



Image: The timer demonstrating its three adjustable brightness levels.

## Alarm and Volume Settings

The timer offers 4 distinct alarm options and 3 adjustable volume levels:

- **Alarm Types:** Beep, Music Alarm 1, Music Alarm 2, Music Alarm 3.
- **Volume Levels:** Soft (60-75dB), Medium (70-85dB), Loud (80-95dB).

Use the dedicated buttons on the side to cycle through alarm types and adjust the volume.

# 3 Levels of Brightness Adjustable

Dim



Medium



Bright



Low Battery Icon

Remind you to charge the timer

## Rechargeable Battery Powered

Saving your time and money to buy and change non-recyclable batteries frequently



Image: The timer illustrating its various alarm sounds and volume settings.

## MAINTENANCE

To ensure optimal performance and longevity of your VOCOO Digital Kitchen Timer, follow these maintenance guidelines:

- **Charging:** Recharge the timer when the low power icon appears. Always use a 5V (output voltage) power plug to prevent battery damage.
- **Cleaning:** Wipe the timer with a soft, dry cloth. Avoid using abrasive cleaners or submerging the device in water.
- **Storage:** Store the timer in a cool, dry place when not in use for extended periods.

## TROUBLESHOOTING

If you encounter any issues with your VOCOO Digital Kitchen Timer, please refer to the following common solutions:

- **Timer not turning on:** Ensure the timer is fully charged. If it's completely drained, it may take a few minutes of charging before the display lights up.
- **Display not visible:** Check the brightness setting and adjust it to a higher level if needed.
- **Alarm not sounding:** Verify the volume level is not set to L00 (silent). Adjust to L01, L02, or L03.
- **Time not setting correctly:** Ensure you are using the correct buttons (1H, 5M, 1M, 1S, CUSTOM) and pressing "RESET" before setting a new time if necessary.

For further assistance, please contact customer support.

## SPECIFICATIONS

Feature	Detail
Color	Black Red
Brand	VOCOO
Material	Silicone
Product Dimensions	1.38"D x 8.27"W x 4.13"H
Item Weight	9.6 ounces (271.5 Grams)
Number of settings	1
Screen Size	7.8 inches (19.8 Centimeters)
Manufacturer	VOCOO
ASIN	B09W2K3RR8
Country of Origin	China
Item model number	5285
Batteries	1 C battery required (included)
Date First Available	June 1, 2022

## WARRANTY AND SUPPORT

This product comes with a return policy allowing for refund or replacement within 30 days. For any product-related

inquiries, technical support, or warranty claims, please contact the seller, VOCOODirect, through the Amazon platform or refer to the contact information provided in the original product packaging.

© 2024 VOCOO. All rights reserved.

## Related Documents - 5285

	<p><a href="#">VOCOO Visual Timer User Manual (Model 6233)</a></p> <p>User manual for the VOCOO Visual Timer (Model 6233), providing comprehensive instructions on setup, usage, features, alarm settings, placement, and technical specifications for this versatile countdown timer.</p>
	<p><a href="#">VOCOO Wireless Indoor/Outdoor Temperature and Humidity Monitor User Manual</a></p> <p>This manual provides instructions for setting up and using the VOCOO Wireless Indoor/Outdoor Temperature and Humidity Monitor, including diagrams, specifications, and troubleshooting tips.</p>
	<p><a href="#">VOCOO 6202 Wireless Indoor/Outdoor Temperature and Humidity Monitor User Manual</a></p> <p>User guide for the VOCOO 6202 wireless indoor/outdoor temperature and humidity monitor, detailing setup, features, calibration, connection, and troubleshooting for optimal environmental monitoring.</p>