

[Manuals.plus](#) /

› [Eztronics Corp](#) /

› Eztronics Corp Bristle & Beater Brush Kit User Manual

Eztronics Corp 01

Eztronics Corp Bristle & Beater Brush Kit User Manual

Brand: Eztronics Corp | Model: 01

INTRODUCTION

This manual provides essential information for the installation, maintenance, and troubleshooting of your Eztronics Corp Bristle & Beater Brush Kit. This kit is designed as a replacement for iRobot Roomba 700 series vacuum cleaning robots, including models 760, 770, and 780.

Regular replacement of brushes is crucial for maintaining the optimal cleaning performance of your Roomba robot vacuum.

PACKAGE CONTENTS

- 1 x Flexible Beater Brush
- 1 x Bristle Brush with Bearings

SETUP AND INSTALLATION

Follow these steps to replace the brushes in your iRobot Roomba 700 series vacuum cleaner:

1. **Power Off Roomba:** Ensure your Roomba is turned off and unplugged from its charging base before beginning any maintenance.
2. **Access Brush Compartment:** Turn the Roomba over. Locate the yellow brush guard on the bottom of the robot. Press the two yellow tabs to release the brush guard and lift it open.
3. **Remove Old Brushes:** Carefully lift out the old bristle brush and flexible beater brush. Note their orientation for reference.
4. **Clean Brush Compartment:** Use a cleaning tool or cloth to remove any hair, debris, or dust accumulated in the brush compartment and around the brush bearings.
5. **Install New Brushes:**



Image: The Eztronics Corp Bristle and Beater Brush Kit, showing both the bristle brush (top) and the flexible beater brush (bottom) with their yellow end caps. These are the replacement parts for your Roomba.

- Insert the square end of the new flexible beater brush into the square socket in the Roomba's cleaning head module.
- Insert the square end of the new bristle brush into its corresponding square socket. Ensure the yellow end caps are properly aligned.
- Gently press down on both brushes to ensure they are seated correctly.



Image: A close-up view of the Eztronics Corp Flexible Beater Brush, highlighting its black rubber fins and yellow end cap. This brush works in conjunction with the bristle brush to agitate and lift debris from floors.

6. **Close Brush Guard:** Close the yellow brush guard until it clicks securely into place.
7. **Test Operation:** Place your Roomba back on its charging base and turn it on. Run a short cleaning cycle to ensure the new brushes are spinning correctly and the robot is operating as expected.

OPERATING INSTRUCTIONS

Once the Eztronics Corp Bristle & Beater Brush Kit is correctly installed, your iRobot Roomba 700 series vacuum will operate as usual. The new brushes will work to agitate and sweep debris from your floors into the vacuum's suction path, restoring or improving cleaning efficiency.

MAINTENANCE

To ensure the longevity and effectiveness of your new brushes, regular cleaning is recommended. It is advisable to clean the brushes after every few cleaning cycles, or more frequently if you have pets or long hair in your home.

- **Remove Brushes:** Follow steps 1-3 from the "Setup and Installation" section to remove the brushes from your Roomba.
- **Clean Hair and Debris:** Use the cleaning tool provided with your Roomba (or a pair of scissors) to cut and remove any hair or string wrapped around the brushes, especially near the yellow end caps and bearings.
- **Wipe Down:** Wipe the brushes and the brush compartment with a dry cloth to remove dust and fine debris.
- **Reinstall:** Reinstall the clean brushes by following steps 4-6 from the "Setup and Installation" section.

TROUBLESHOOTING

If you encounter issues after installing the new brushes, consider the following:

- **Brushes Not Spinning:**
 - Ensure the brushes are fully seated and the yellow end caps are properly aligned with their sockets.
 - Check for any obstructions (e.g., large debris, tangled hair) preventing the brushes from rotating freely.
 - Verify the brush guard is securely closed and clicked into place.
- **Unusual Noise:**
 - Remove and inspect both brushes for any damage or foreign objects lodged within them.
 - Ensure the bearings on the bristle brush are clean and spinning freely.
 - Confirm the brushes are installed in the correct orientation.
- **Reduced Cleaning Performance:**
 - Perform regular maintenance as described in the "Maintenance" section.
 - Check other Roomba components such as the side brush and filter for cleanliness and wear.

If problems persist, refer to your iRobot Roomba's main user manual or contact Eztronics Corp customer support.

SPECIFICATIONS

Attribute	Detail
Brand	Eztronics Corp
Model Number	01
Compatible Devices	iRobot Roomba 700 Series (760, 770, 780, 790)
Part Type	Replacement Bristle and Beater Brush Kit
Unit Count	2.0 Feet (referring to total length of brushes)

WARRANTY AND SUPPORT

This product is designed for compatibility and performance as a replacement part. For specific warranty information, please refer to the original purchase documentation or contact Eztronics Corp directly.

For further assistance or inquiries, please visit the Eztronics Corp official website or contact their customer support channels.

© 2024 Eztronics Corp. All rights reserved. iRobot and Roomba are registered trademarks of iRobot Corporation.