

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [HP](#) /

› [HP 230 Wireless Keyboard User Manual](#)

HP 3L1E7AA#ABA

HP 230 Wireless Keyboard User Manual

Model: 3L1E7AA#ABA

INTRODUCTION

Thank you for choosing the HP 230 Wireless Keyboard. This manual provides detailed instructions for setting up, operating, and maintaining your new wireless keyboard. Designed for comfort and efficiency, this keyboard offers a seamless typing experience with its low-profile keys and reliable wireless connection.

WHAT'S IN THE BOX

- HP 230 Wireless Keyboard
- USB Receiver
- 2 AAA Batteries
- Quick Start Guide
- Warranty Card

SETUP GUIDE

1. **Install Batteries:** Locate the battery compartment on the underside of the keyboard. Insert the two AAA batteries, ensuring correct polarity (+/-).
2. **Connect USB Receiver:** Plug the USB receiver into an available USB-A port on your computer (laptop or PC).
3. **Power On:** The keyboard should automatically connect to the receiver. If not, ensure the keyboard's power switch (usually on the top edge or underside) is in the 'On' position.
4. **Driver Installation:** Your operating system (Windows or Mac OS) should automatically detect and install the necessary drivers. No manual driver installation is typically required.



Image: The HP 230 Wireless Keyboard shown with its compact USB receiver, ready for connection.

OPERATING INSTRUCTIONS

Basic Usage

The HP 230 Wireless Keyboard functions like a standard full-sized keyboard. Simply begin typing after successful setup. The low-profile chiclet keys are designed for comfortable and quiet operation.

Function Keys (F1-F12)

This keyboard features dedicated function keys (F1-F12) that provide quick access to common tasks. These functions can be activated with a single keypress, enhancing productivity.



Productivity

Activate 12 function keys with just one click.



Image: A user interacting with the HP 230 Wireless Keyboard, demonstrating the ease of activating function keys for increased productivity.

Wireless Connectivity

The keyboard utilizes 2.4GHz wireless technology, providing a stable and lag-free connection up to 32.8 feet (10 meters) from your computer. This allows for flexible placement and a clutter-free workspace.

Go Wireless

Lag-free 2.4GHz wireless connection.



Image: The HP 230 Wireless Keyboard emphasizing its lag-free 2.4GHz wireless connection, promoting a wire-free setup.

Quiet Typing Experience

The chiclet key design contributes to accurate typing with minimal noise, making it suitable for quiet environments.



Made for Quiet

Accurate typing with less noise.



Image: A person's hands are shown typing on the HP 230 Wireless Keyboard, illustrating its quiet operation due to the chiclet key design.

Battery Life

The keyboard is designed for energy efficiency, offering up to 16 months of battery life with the included AAA batteries. Actual battery life may vary based on usage and environmental conditions.



Long Battery Life

Enjoy up to 16 months of battery life.

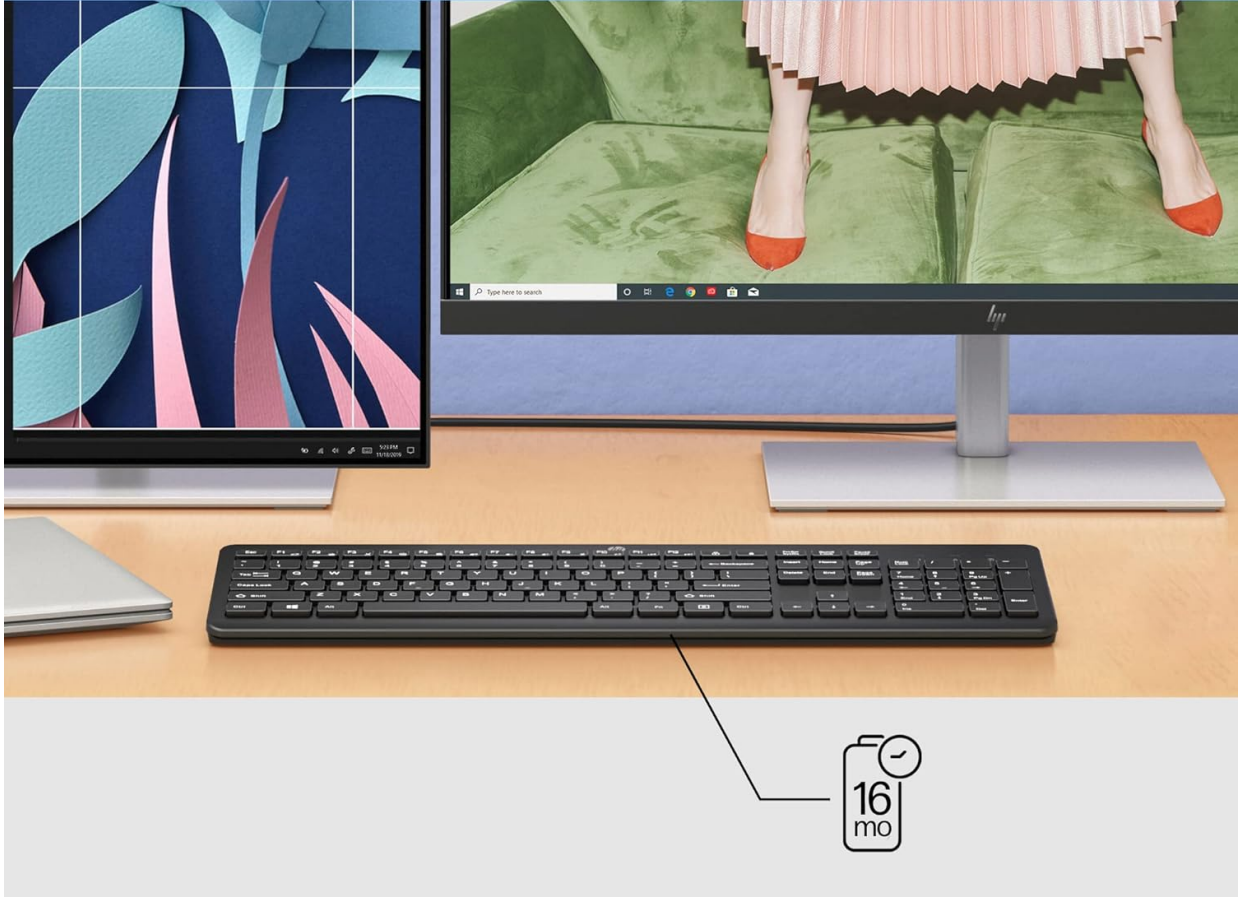


Image: The HP 230 Wireless Keyboard is displayed alongside an icon indicating its long battery life of up to 16 months.

Official Product Video

Video: An official HP video showcasing the HP 230 Wireless Keyboard and Mouse Combo, demonstrating key features and benefits.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the keyboard. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution. Avoid excessive moisture.
- **Battery Replacement:** When the keyboard's performance degrades or the battery indicator light (if present) signals low power, replace both AAA batteries.
- **Storage:** If storing the keyboard for an extended period, remove the batteries to prevent leakage. Store in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Keyboard not responding	Low or dead batteries	Replace AAA batteries.
Keyboard not responding	USB receiver not properly connected	Ensure the USB receiver is firmly plugged into a working USB port. Try a different USB port.
Keyboard not responding	Out of range	Move the keyboard closer to the USB receiver (within 32.8 ft / 10 m).
Lag or delayed input	Interference from other wireless devices	Move other 2.4GHz wireless devices away from the keyboard and receiver.
Specific keys not working	Debris under keycap	Gently clean around and under the affected key. Avoid forceful removal of keycaps.

SPECIFICATIONS

Feature	Detail
Model Number	3L1E7AA#ABA
Connectivity	2.4 GHz Wireless (USB-A Receiver)
Keyboard Layout	Full-sized with Numeric Keypad
Key Type	Low-profile Chiclet
Compatible Operating Systems	Windows 7, 8, 10, 11; Mac OS
Power Source	2 x AAA Batteries
Estimated Battery Life	Up to 16 months
Dimensions (L x W x H)	17.32 x 5.76 x 1.09 inches (44.0 x 14.6 x 2.8 cm)
Weight	1.09 lbs (0.49 kg)
Color	Black

Keyboard



Weight: 1.09 lbs



Image: Detailed view of the HP 230 Wireless Keyboard, illustrating its dimensions, weight, and key design features.

WARRANTY AND SUPPORT

The HP 230 Wireless Keyboard is backed by HP's 2-year limited warranty. For warranty claims, technical support, or additional information, please refer to the warranty card included in the box or visit the official HP support website.

Online Support: www.hp.com/go/orderdocuments

Internet access is required for online support and is not included with the product.